


Notes:

- 1) Do not scale drawing.
- 2) Dimensions are in inches(mm).
- 3) LHR active pair shown. Preparation is typical for both hands.
- 4) Minimum door stile width: 4-1/2(114).
- 5) Prepare mounting holes when installing the device.
- 6) For square door edges, or other center clearance, compensate locating dimensions as required to maintain strike to device distance shown.
- 7) For trim preparation see appropriate trim template.
- 8) Provide adequate structural support to maintain door integrity after device installation with power tools, door use, or abuse.
- 9) Device mount to hinge stile (not shown) requires holes location and preparation during device installation. Door structural requirements are similar for both door stiles.
- 10) For electrical devices (suffixes M91, M92, M93, M94, M97) also see template T30890.
- 11) Wood screws (by others) permitted in solid core wood doors if pilot holes are used for installation. Device:#14x1-1/4"; Strike:#10x1-1/4".

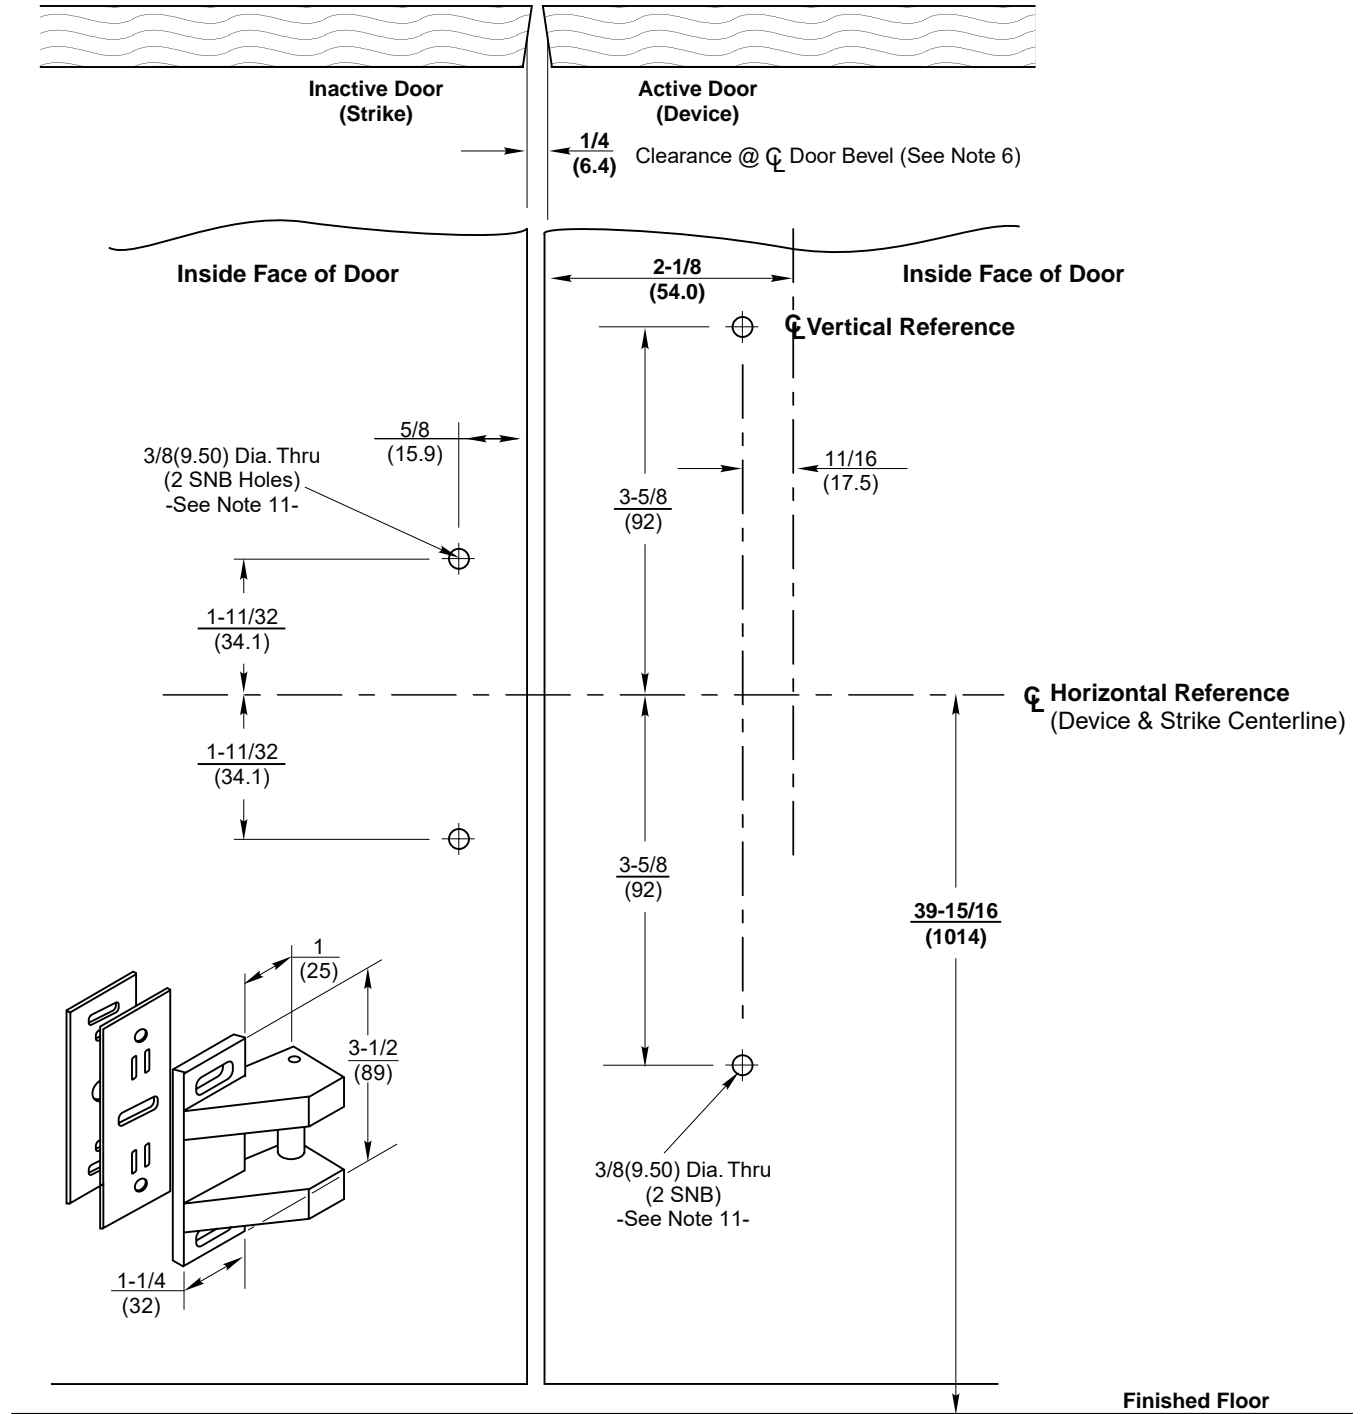

ED2200, ED5200 Series Rim Exit Devices Optional SO2 Strike and SNB Application to Pair of Wood or Composite Doors without Mullion (Not for Fire Labeled Devices)



SUPERSEDES	T30921	DO NOT SCALE DRAWING
TEMPLATE NUMBER	T30921-1	DATE 10-22