


- Notes:**
- 1) Do not scale drawing.
  - 2) Dimensions are in inches(mm).
  - 3) LHR active pair shown. Preparation is typical for both hands.
  - 4) Minimum door stile width: 3-1/2 (89).
  - 5) Prepare mounting holes when installing the device.
  - 6) For square door edges, or other center clearance, compensate locating dimensions as required to maintain strike to device distance shown.
  - 7) For trim preparation see appropriate trim template.
  - 8) Provide adequate structural support to maintain door integrity after device installation with power tools, door use, or abuse.
  - 9) Device mount to hinge stile (not shown) requires holes location and preparation during device installation. Door structural requirements are similar for both door stiles.
  - 10) For electrical devices (suffixes M91, M92, M93, M94, M97) also see template T30890.
  - 11) Wood screws (by others) permitted in solid core wood doors if pilot holes are used for installation. Device:#14x1-1/4"; Strike:#10x1-1/4".

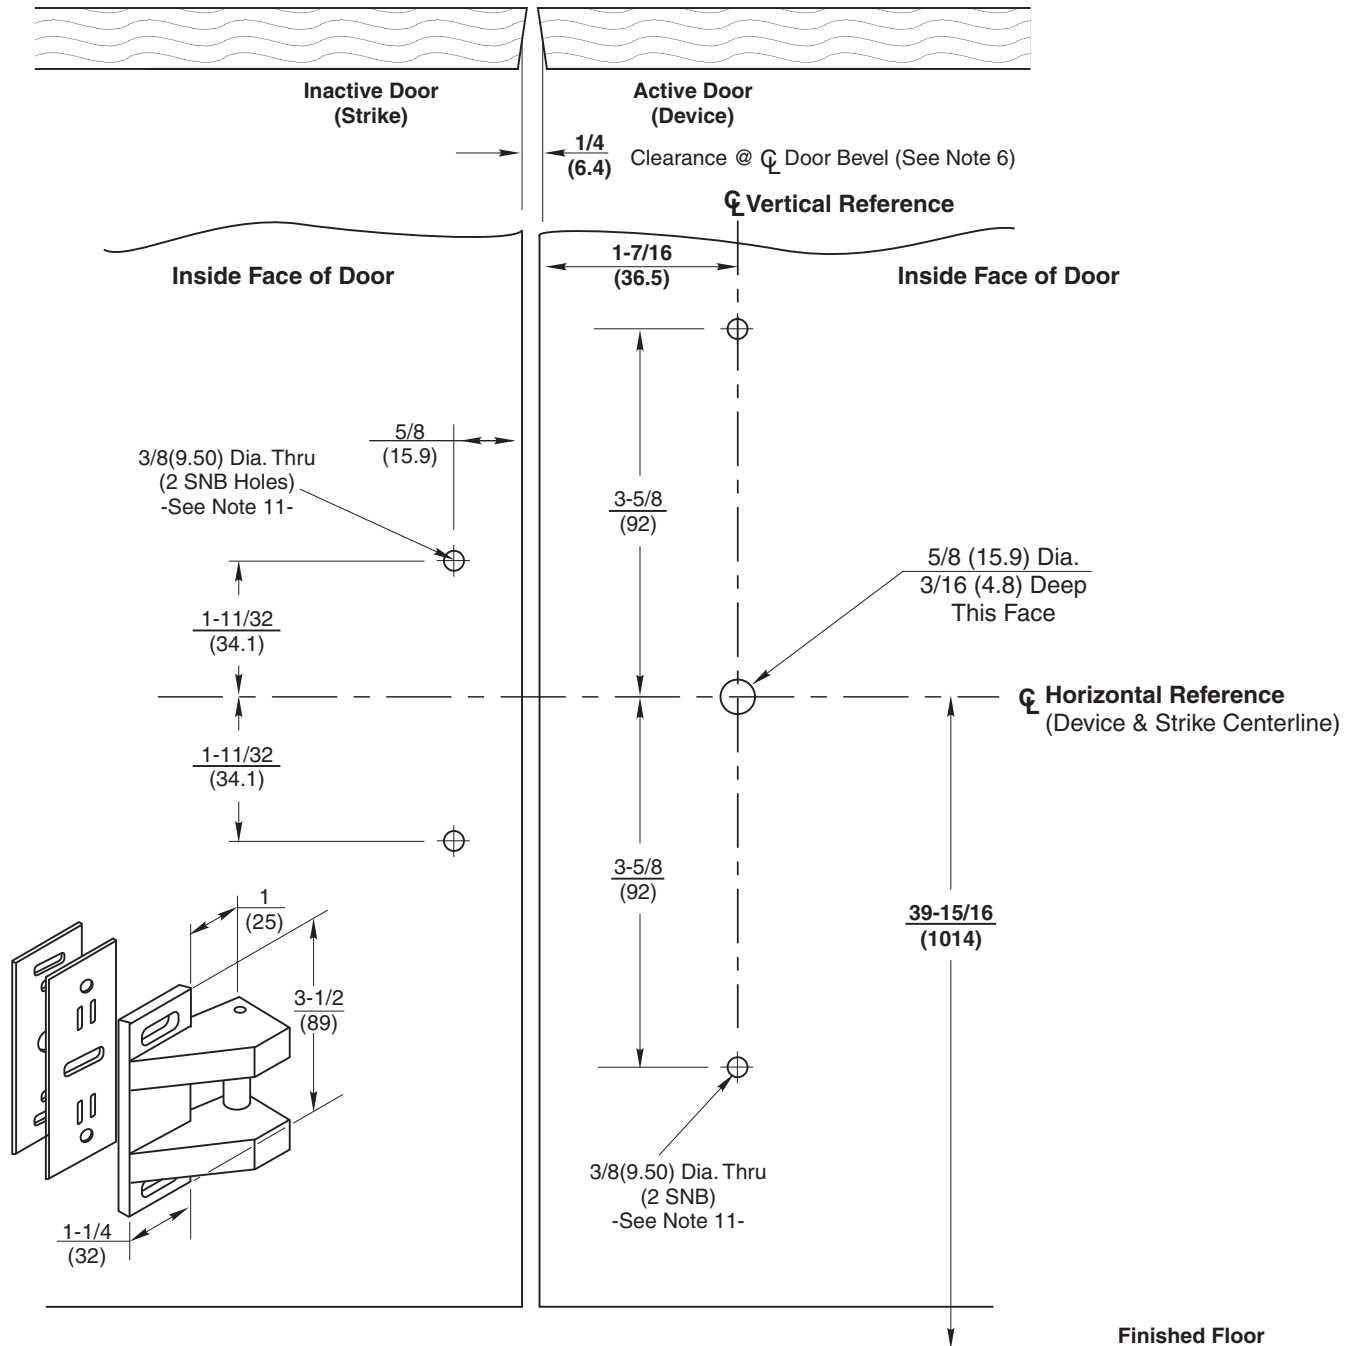

**ED4200M Series Rim Exit Devices Optional S02 Strike and SNB**  
 Application to Pair of Wood or Composite Doors  
 without Mullion (Not for Fire Labeled Devices)

**Corbin  
 Russwin**

**ASSA ABLOY**

www.corbinrusswin.com

SUPERSEDES	DO NOT SCALE DRAWING
TEMPLATE NUMBER	DATE
<b>T31092</b>	<b>05-09</b>