


**Notes:**

- 1) Do not scale drawing.
- 2) Dimensions are in inches(mm).
- 3) LHR active pair shown. Preparation is typical for both hands.
- 4) Minimum door stile width: 3-1/2 (89).
- 5) Prepare mounting holes when installing the device.
- 6) For square door edges, or other center clearance, compensate locating dimensions as required to maintain strike to device distance shown.
- 7) For recommended door reinforcements see template T30800. Unreinforced doors require SNB option to mount the hardware.
- 8) Holes for optional SNB: 9/32(7.00) dia., inside door face; 3/8(9.50) dia., outside door face.
- 9) Provide door stiffeners, as needed to prevent door collapse due to installation with power tools, door use, or abuse.
- 10) Device mount to hinge stile (not shown) requires holes location and preparation during device installation.
- 11) For trim preparation see appropriate trim template.
- 12) For electrical devices (suffixes M91, M92, M93, M94, M97) also see template T30890.

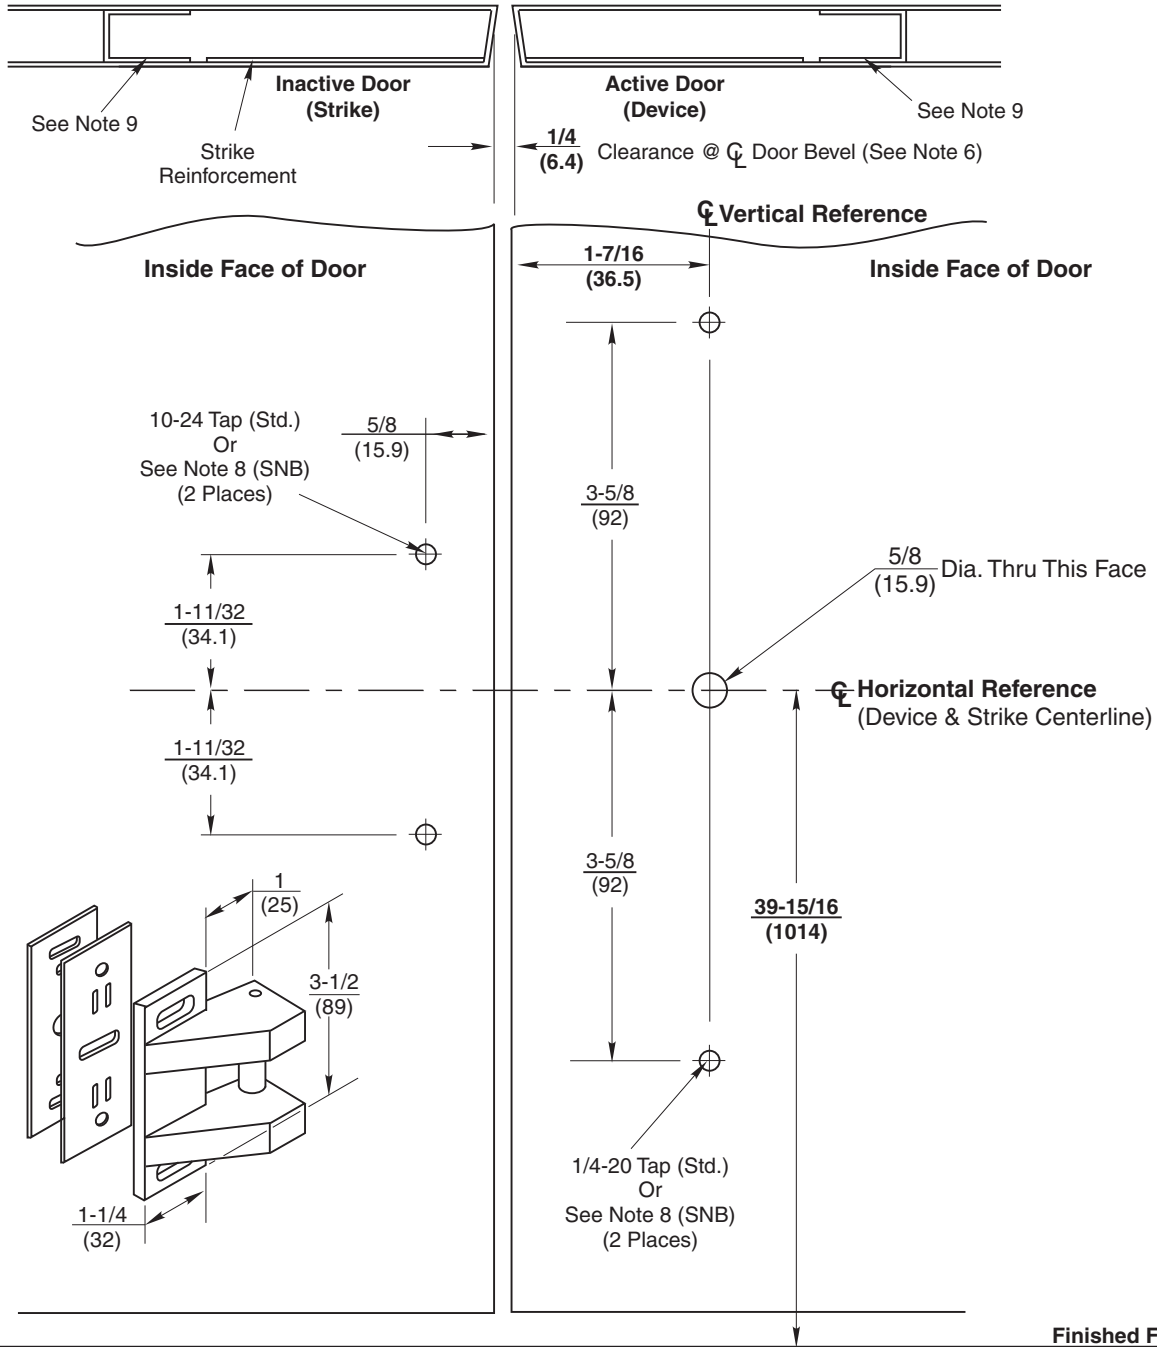

**ED4200SM Series SecureBolt™ Exit Devices**  
**Optional S02 Strike and SNB**  
 Application to Pair of Metal Doors without Mullion  
 (Not for Fire Labeled Devices)



**ASSA ABLOY**

www.corbinrusswin.com

SUPERSEDES	DO NOT SCALE DRAWING
TEMPLATE NUMBER	DATE
<b>T31152</b>	<b>05-09</b>