


- Notes:**
- 1) Do not scale drawing.
 - 2) Dimensions are in inches(mm).
 - 3) LHR active pair shown. Preparation is typical for both hands.
 - 4) Minimum door stile width: 3-1/2 (89).
 - 5) Prepare mounting holes when installing the device.
 - 6) For square door edges, or other center clearance, compensate locating dimensions as required to maintain strike to device distance shown.
 - 7) For trim preparation see appropriate trim template.
 - 8) Provide adequate structural support to maintain door integrity after device installation with power tools, door use, or abuse.
 - 9) Device mount to hinge stile (not shown) requires holes location and preparation during device installation. Door structural requirements are similar for both door stiles.
 - 10) For electrical devices (suffixes M91, M92, M93, M94, M97) also see template T30890.
 - 11) Wood screws (by others) permitted in solid core wood doors if pilot holes are used for installation. Device:#14x1-1/4"; Strike:#10x1-1/4".

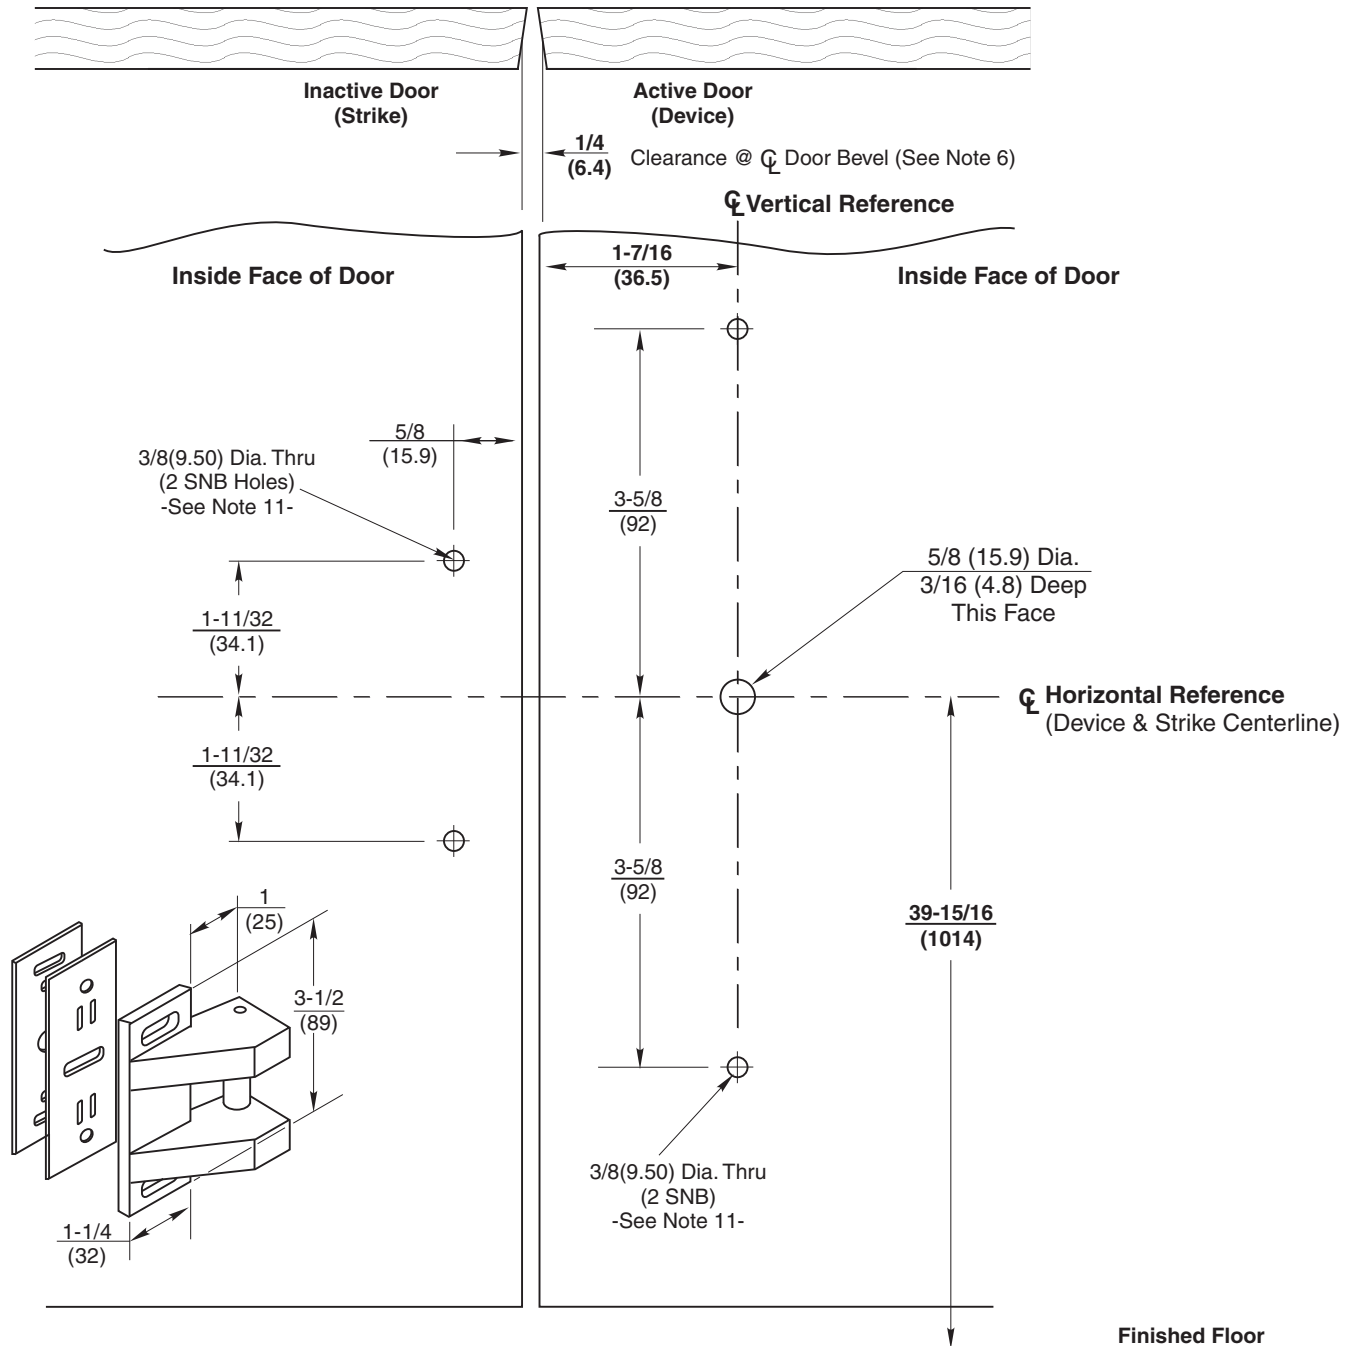

ED4200SM Series SecureBolt™ Exit Devices
Optional S02 Strike and SNB
 Application to Pair of Wood or Composite Doors
 without Mullion (Not for Fire Labeled Devices)



ASSA ABLOY

www.corbinrusswin.com

SUPERSEDES	DO NOT SCALE DRAWING
TEMPLATE NUMBER	DATE
T31151	05-09