

TH950

Heavy Duty Thumbpiece Trim For use with ED5000 Series Exit Device

Metal, Wood or Composite Doors

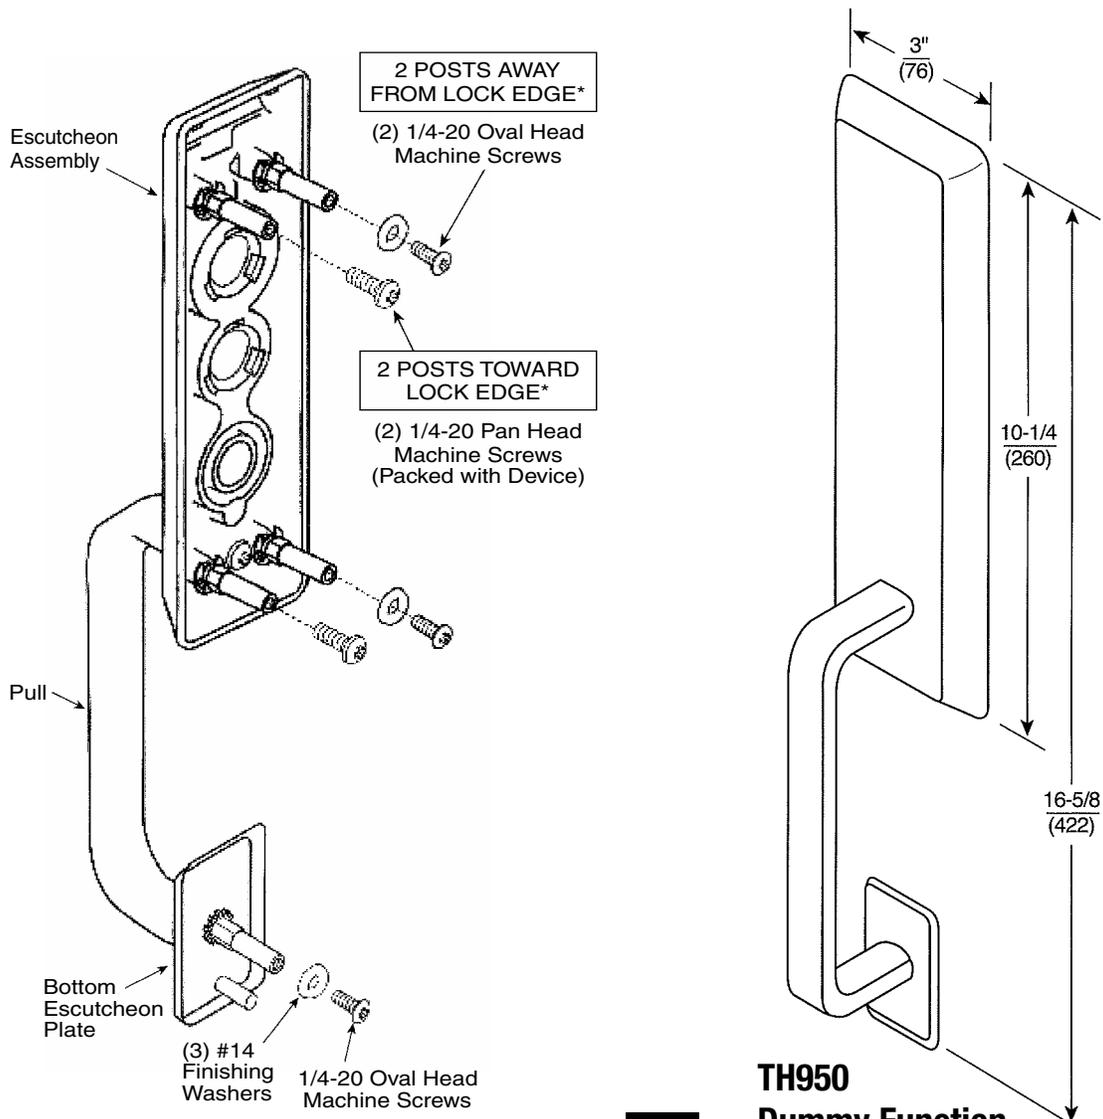


Figure 1

TH950 Dummy Function (Exit Only)

*Shown for LHR door

For installation assistance contact Corbin Russwin
1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2018 Corbin Russwin, Inc., an ASSA ABLOY Group company.
All rights reserved. Reproduction in whole or in part without the express written permission of Corbin Russwin, Inc. is prohibited.

(617417701) FM258 05/18

ASSA ABLOY, the global leader
in door opening solutions

TH950 Heavy Duty Thumbpiece Trim

For ED5000 Series Exit Device

Installation Instructions



ASSA ABLOY


1

Template Top

Holes Marked "X" (5 Places)	
Metal Doors:	
Inside Face	5/16" (8) Dia.
Outside Face	1/2" (13) Dia.
Wood Doors: 1/2" (13) Dia. Thru	

Dimensions in inches (mm).

CAUTION: Office copiers and desktop printers may change the size of a drawing and make the template inaccurate to use as a door marker. If this is not the original template packed with the trim, use only the dimensions written on the template to locate the holes on the door. Do not use the template as a door marker.

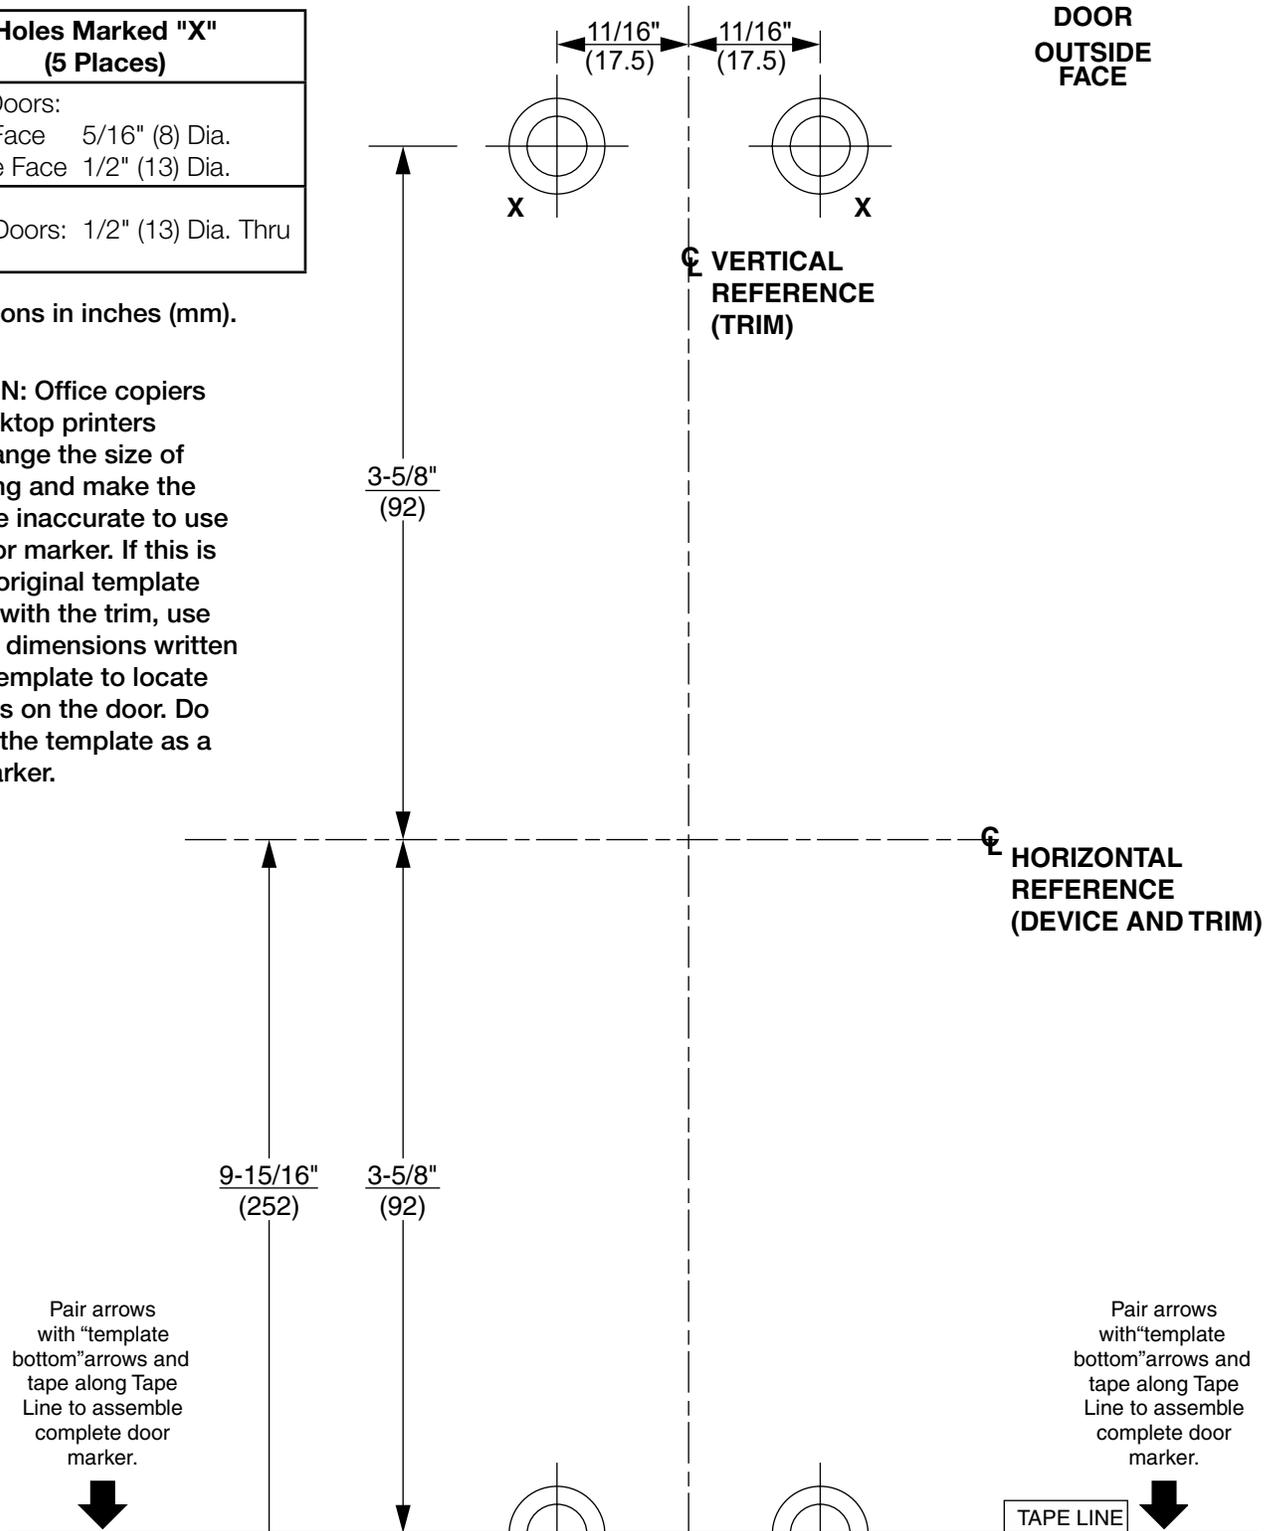

TH950 Heavy Duty Thumbpiece Trim

For ED5000 Series Exit Device


Installation Instructions



ASSA ABLOY

2

Template Bottom

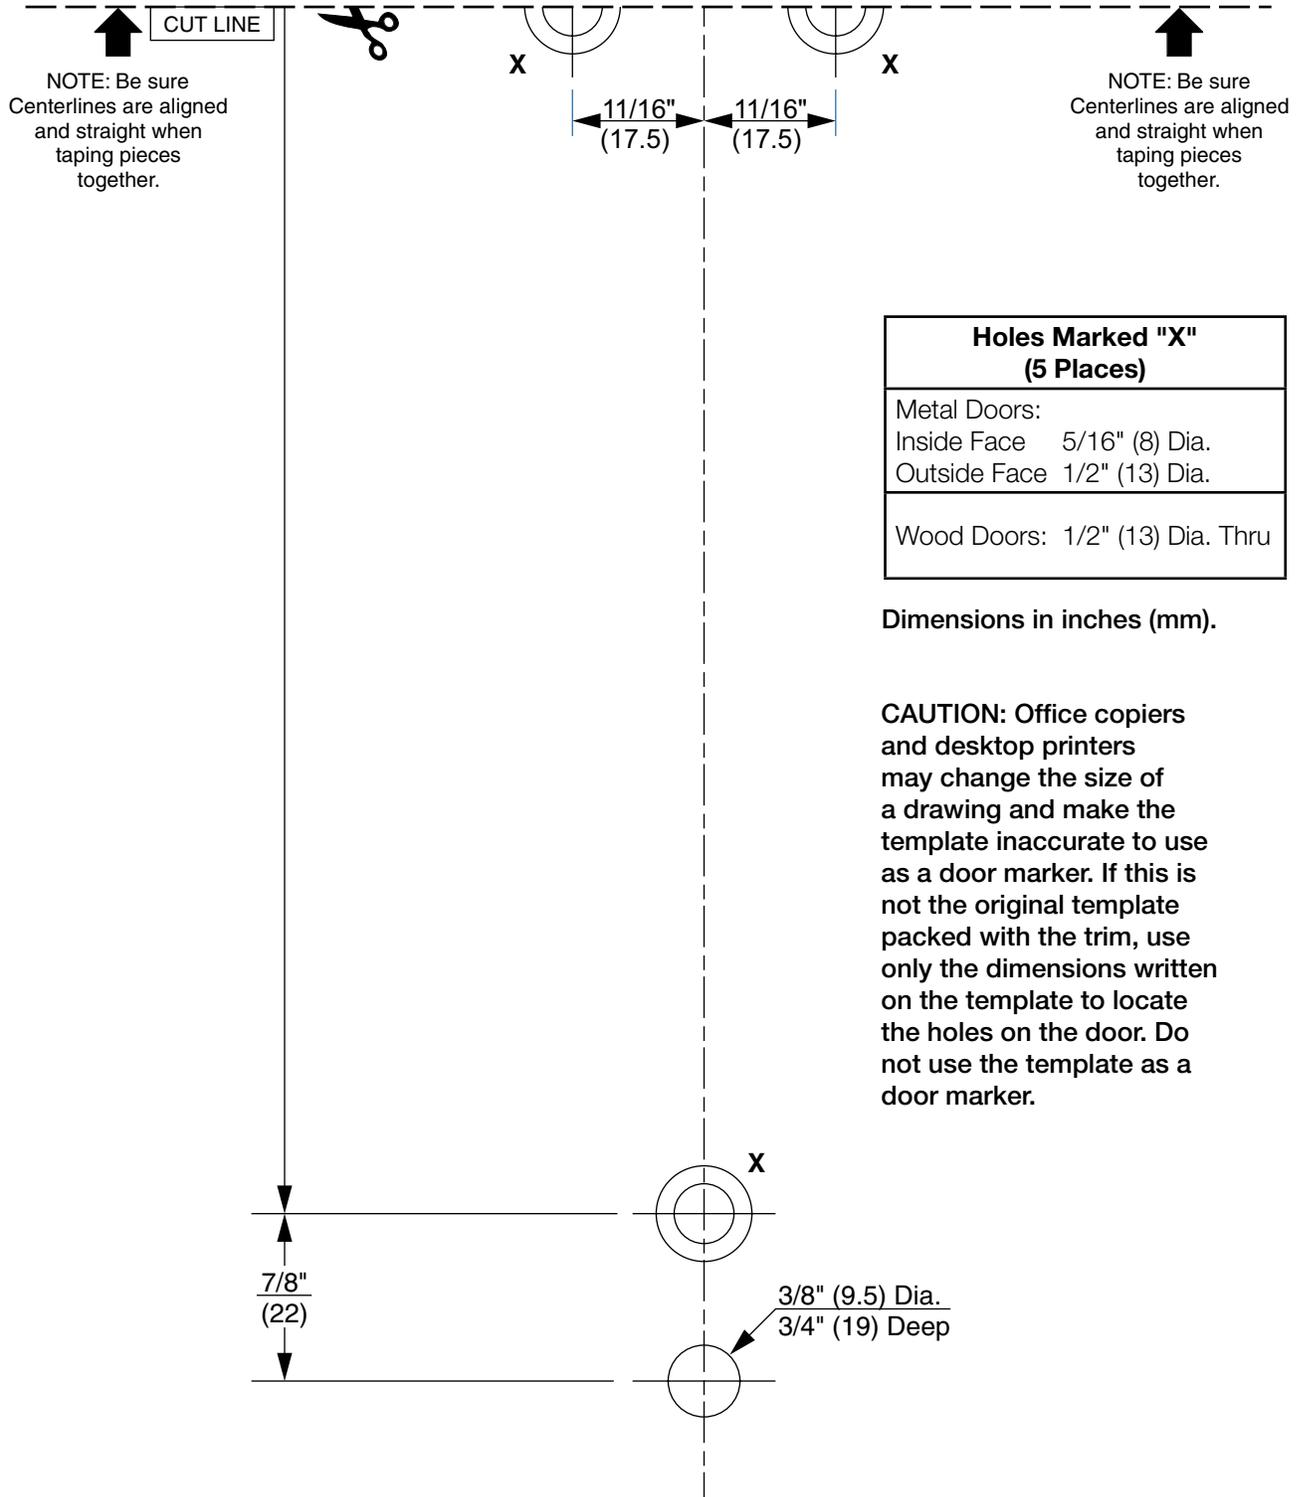

3

Installation

1. Check box contents. (Figure 1)
2. After marking door inside face for device location (Device Instructions), transfer “Vertical Reference Centerline” from inside to outside door face. (Figure 2)
3. Transfer “Horizontal Reference Centerline” from inside to outside door face.
4. Align trim template and tape to outside door face. (pages 2 and 3)
5. Spot holes and prepare door for trim.
6. Mount trim to door through holes “B”. Fasten, finger tight only, with three (3) screws and washers seating on door, as shown. (Figure 3) Bottom screw and washer engages lower post on pull.

NOTE:

- **Device is bolted to trim using holes “A” (closest to door lock edge).**
 - **Screws and washers bolt trim to door using holes “B”.**
7. Continue with device instructions.





Figure 2

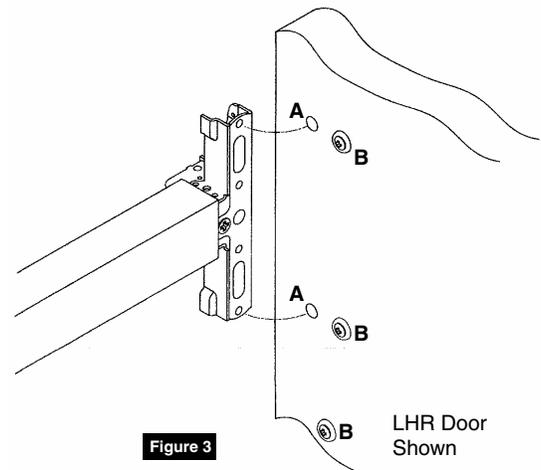


Figure 3