


Installation Instructions



1. Pull trim becomes handed after assembly (parts are universal). See other side for components and instructions.
2. After marking door inside face for device location (Device Instructions), carry "Centerline of Device Mounting Holes" from inside to outside door face. Follow steps 2a. and 2b. below.
3. Carry horizontal "Centerline of Device" from inside to outside door face.
4. Align trim template and tape to outside door face.
CAUTION: Office copiers and facsimile machines may change the size of a drawing and make the template inaccurate to use as a door marker. If this is not the original template packed with the trim, use only the dimensions written on the template to locate the holes on the door (do not use the template as a door marker).
5. Spot holes and prepare door for trim.
6. Mount trim to door, bolting escutcheon to device. Continue as shown on device instructions.



2a. MEASURE INSIDE LINE LOCATION.

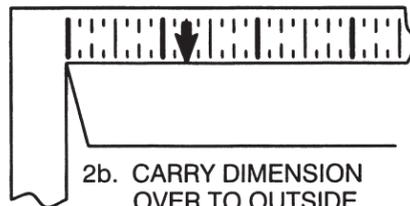

2b. CARRY DIMENSION OVER TO OUTSIDE FACE.

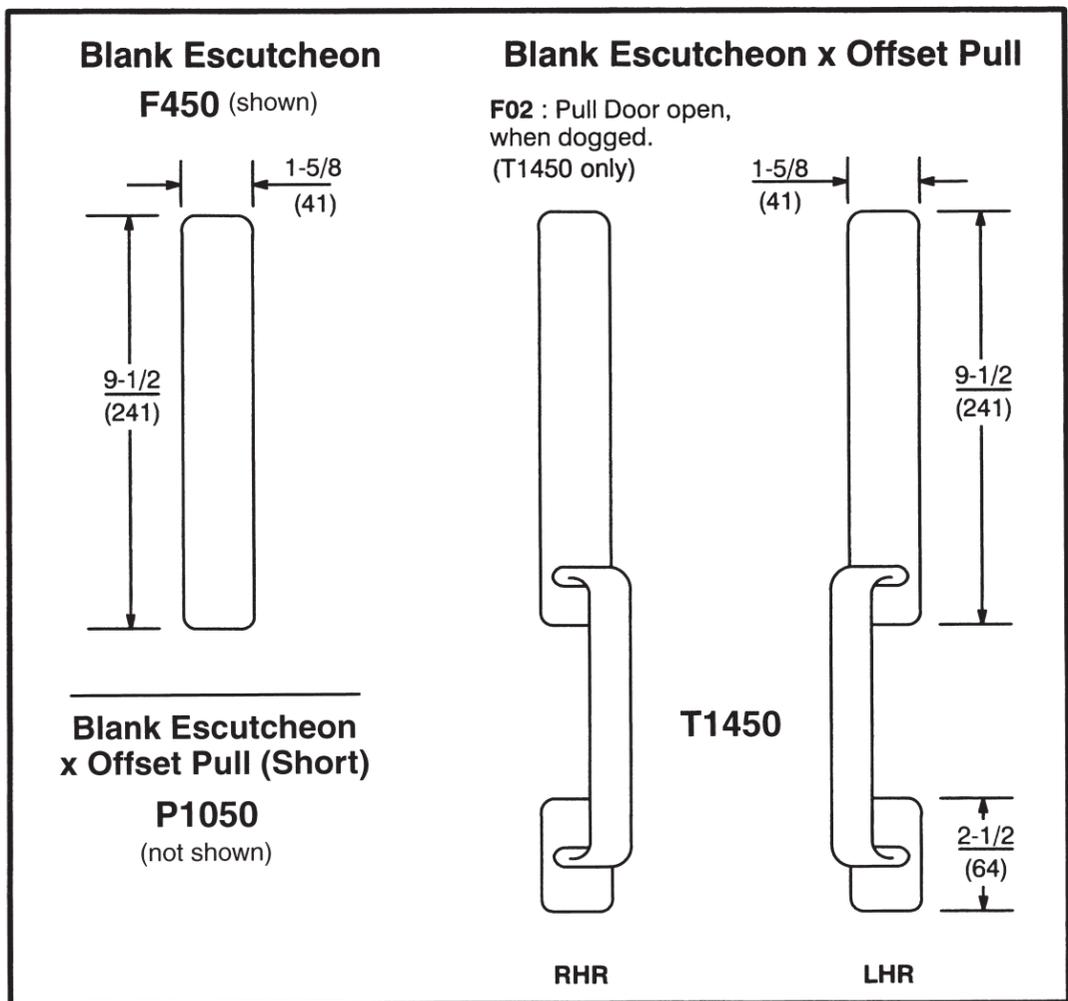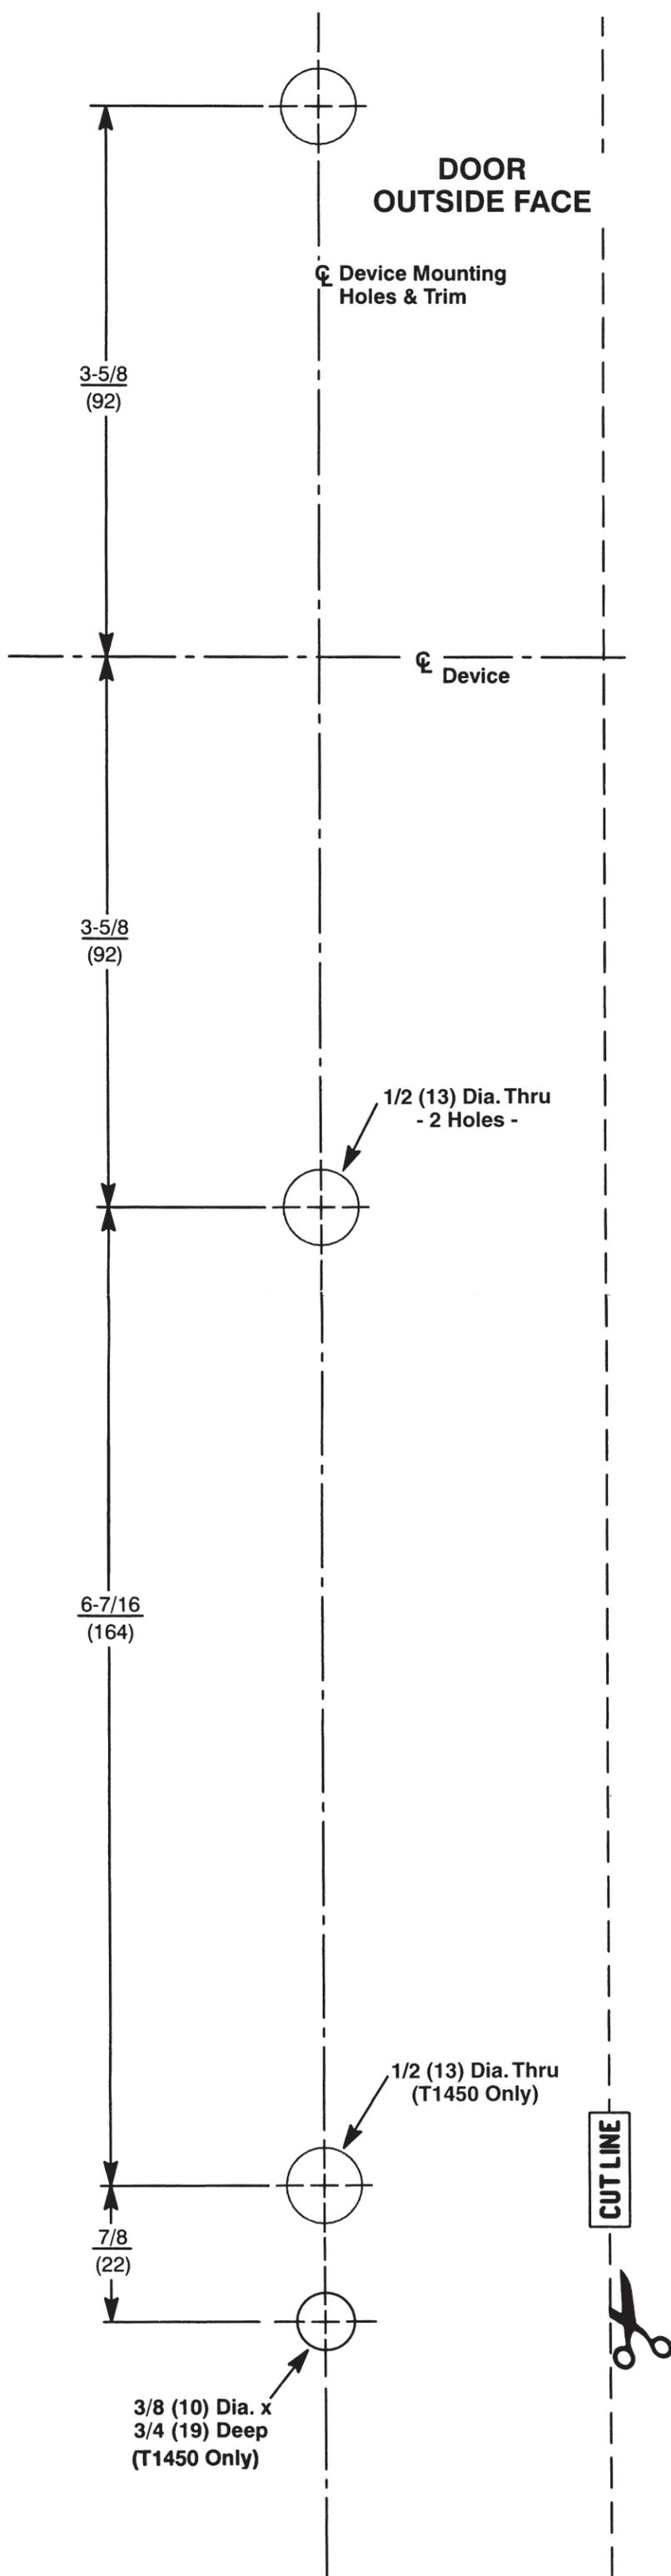

Dimensions given in inches (mm)

**F450, P1050, T1450
Trim
Installation Template**


Trim Assembly Instructions

F450, P1050, T1450 Trim

T1450 Trim Only: Assemble pull offset away from lock edge of door.
Use components marked (*).

P1050 Trim Only: (Not Shown)

Pull is assembled through (2) escutcheon holes with (2) threaded posts and lockwashers. Pull base assembly is omitted. Trim to be mounted with offset away from lock edge of door.

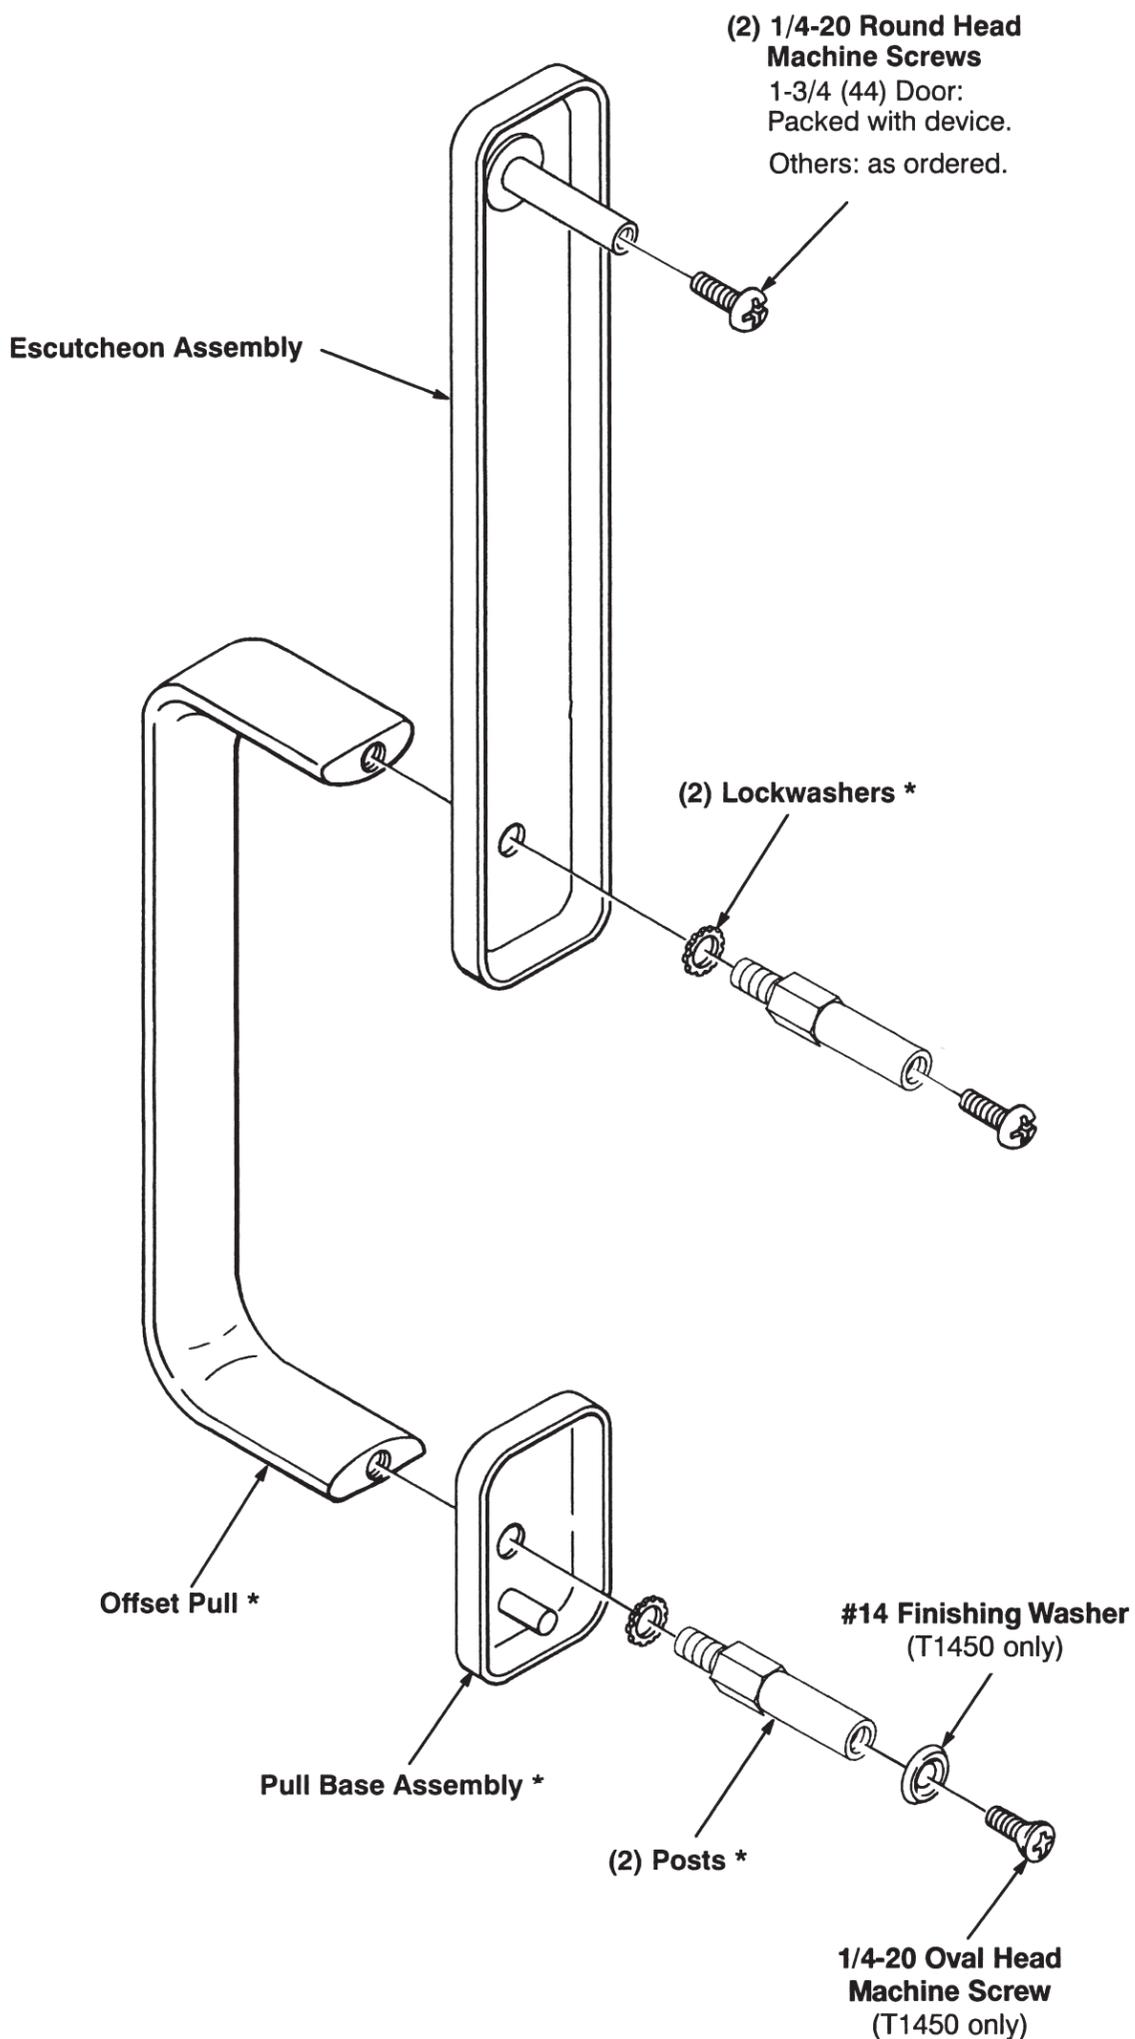

WARNING
This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.
08/2018

Corbin Russwin
ASSA ABLOY

In U.S.:
Corbin Russwin, Inc.
225 Episcopal Road
Berlin, CT 06037 USA
Phone: 800-543-3658

Technical Product Support:
Phone: 888-607-5703

In Canada:
ASSA ABLOY Door Security Solutions Canada
160 Four Valley Drive
Vaughan, Ontario, Canada L4K 4T9
Phone: 800-461-3007

FM 186 11/18