
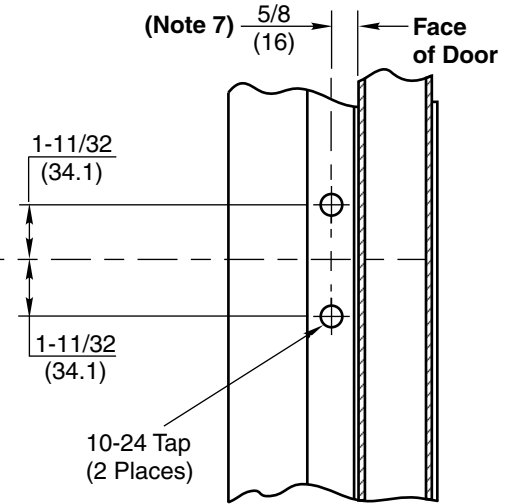


**Notes:**

1. Do not scale drawing.
2. Dimensions are in inches(mm).
3. LHR door shown. Preparation is typical for both door hands.
4. Minimum door stile width: 4-1/2 (114) Single Doors  
4-3/4 (121) Double Doors
5. Prepare mounting holes when installing the device.
6. Unreinforced frames require blind rivet nuts (by others) to mount the strike.
7. Dimension from door face.
8. For recommended door reinforcements see template T30800. Unreinforced doors require SNB option to mount the device components.
9. Holes for optional SNB: 9/32(7.00) dia., inside door face;  
3/8(9.50) dia., outside door face.
10. Provide door stiffeners, as needed to prevent door collapse due to installation with power tools, door use, or abuse.
11. Device mount to hinge stile (not shown) requires hole location and preparation during device installation.
12. For trim preparation see appropriate trim template.
13. For electrical devices (suffixes M91, M92, M93, M94, M97) also see template T30890.

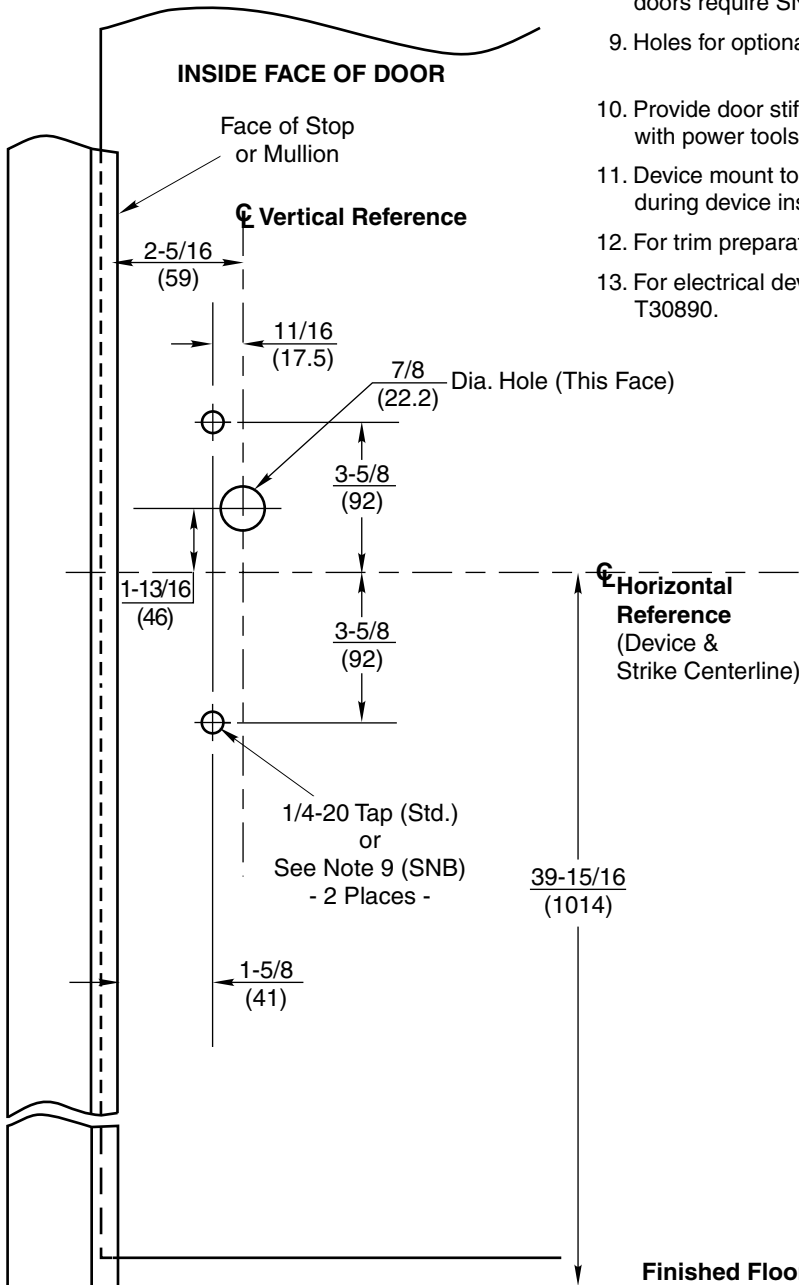

**Strike Preparation Detail**

FRAME TEMPLATE	MULLION		
	SERIES	SIZE	ILLUSTRATION
T30882	700 Series	1-1/2" x 3" (38 x 76)	<p>1-1/2" Mullion Width</p>
T31074	900 Series	2" x 3" (51 x 76)	<p>2" Mullion Width</p>
T31075	FE700 Series WS700 Series		

**CAUTION: Width of mullion used with exit device will affect device backset. Determine Mullion Series and Width before prepping doors for exit devices.**

**ED5202 Double Cylinder Rim Panic Devices with 650F30 Strike**  
Application for Metal Door and Frame or Mullion (Not for Fire Labeled Devices)

②



**ASSA ABLOY**

www.corbinrusswin.com

SUPERSEDES T30972-1 DO NOT SCALE DRAWING

TEMPLATE NUMBER **T30972-2** DATE **12-18**