


ED5602(A) Series

Mortise Exit Device

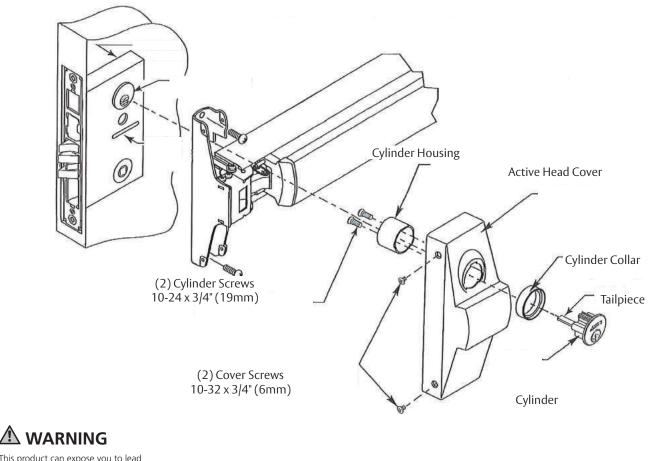

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

For installation assistance contact Corbin Russwin 1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2003, 2018, 2019, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

IMPORTANT

For use in conjunction with Corbin Russwin 955 Series trim.

FM220 11/19


Experience a safer and more open world

The ASSA ABLOY Group is the global leader in access solutions. Every day, we help billions of people experience a more open world.

ASSA ABLOY Opening Solutions leads the development within door openings and products for access solutions in homes, businesses and institutions. Our offering includes doors, frames, door and window hardware, locks, perimeter fencing, access control and service.

Cylinder Collar Chart

Cylinder Length	Collar
1-1/8" (29 mm)	270F15
1-1/4" (32 mm)	654F07
1-3/8" (35 mm)	654F08
1-1/2" (38 mm)	654F08

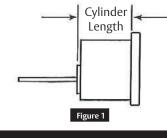


2

Double Cylinder Mounting Instuctions

NOTE

A Mortise Adapter Assembly is factory assembled in the cylinder hole on the device side of the mortise lock. Follow device mounting instructions. Once complete, continue with Double Cylinder instructions listed below.

- Pre-assemble cylinder through cylinder collar, active head cover, and cylinder housing as shown on the cover page. Secure cylinder housing to the cylinder with two (2) 10-24 x 3/4" cylinder screws. Keyway position should be vertical with the plug-in lower side of the cylinder.
- 2. Verify that cam orientation on Mortise Adapter Assembly is in "UP" position. (Figure 2) Then rotate plug slot on adapter 90° clockwise, to the vertical position. Insert key into cover cylinder and rotate 90° clockwise, to position cylinder tailpiece vertically.
- Assemble active head cover to device by aligning cylinder tailpiece with slot in Mortise Adapter Assembly (tailpiece length to be adjusted as needed for maximum engagement). Install and tighten two (2) 8-32 x 1/4" cover screws to the active head cover. Rotate key in cylinder 90° counter clockwise, to be vertical pisition and remove.
- 4. Check for proper functional operation of lock, trim, and exit device.

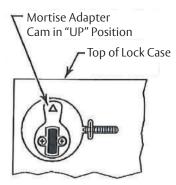

Looking Towards Trim Side of Lock

Figure 2

Corbin Russwin, Inc. 225 Episcopal Road Berlin, CT 06037 USA Phone: 800-543-3658 Fax: 800-447-6714 www.corbinrusswin.com

