


**For Notes & Frame Prep**  
**See Sheet 2**

**DOOR SPECIFICATION**

**Door Thickness:** 1-3/4" (45mm) Min.

**Door Construction:** Wood or composite door with fire or panic rating as required. Door may require metal channel edge which may alter backset dimensions. Consult door manufacturers listings.

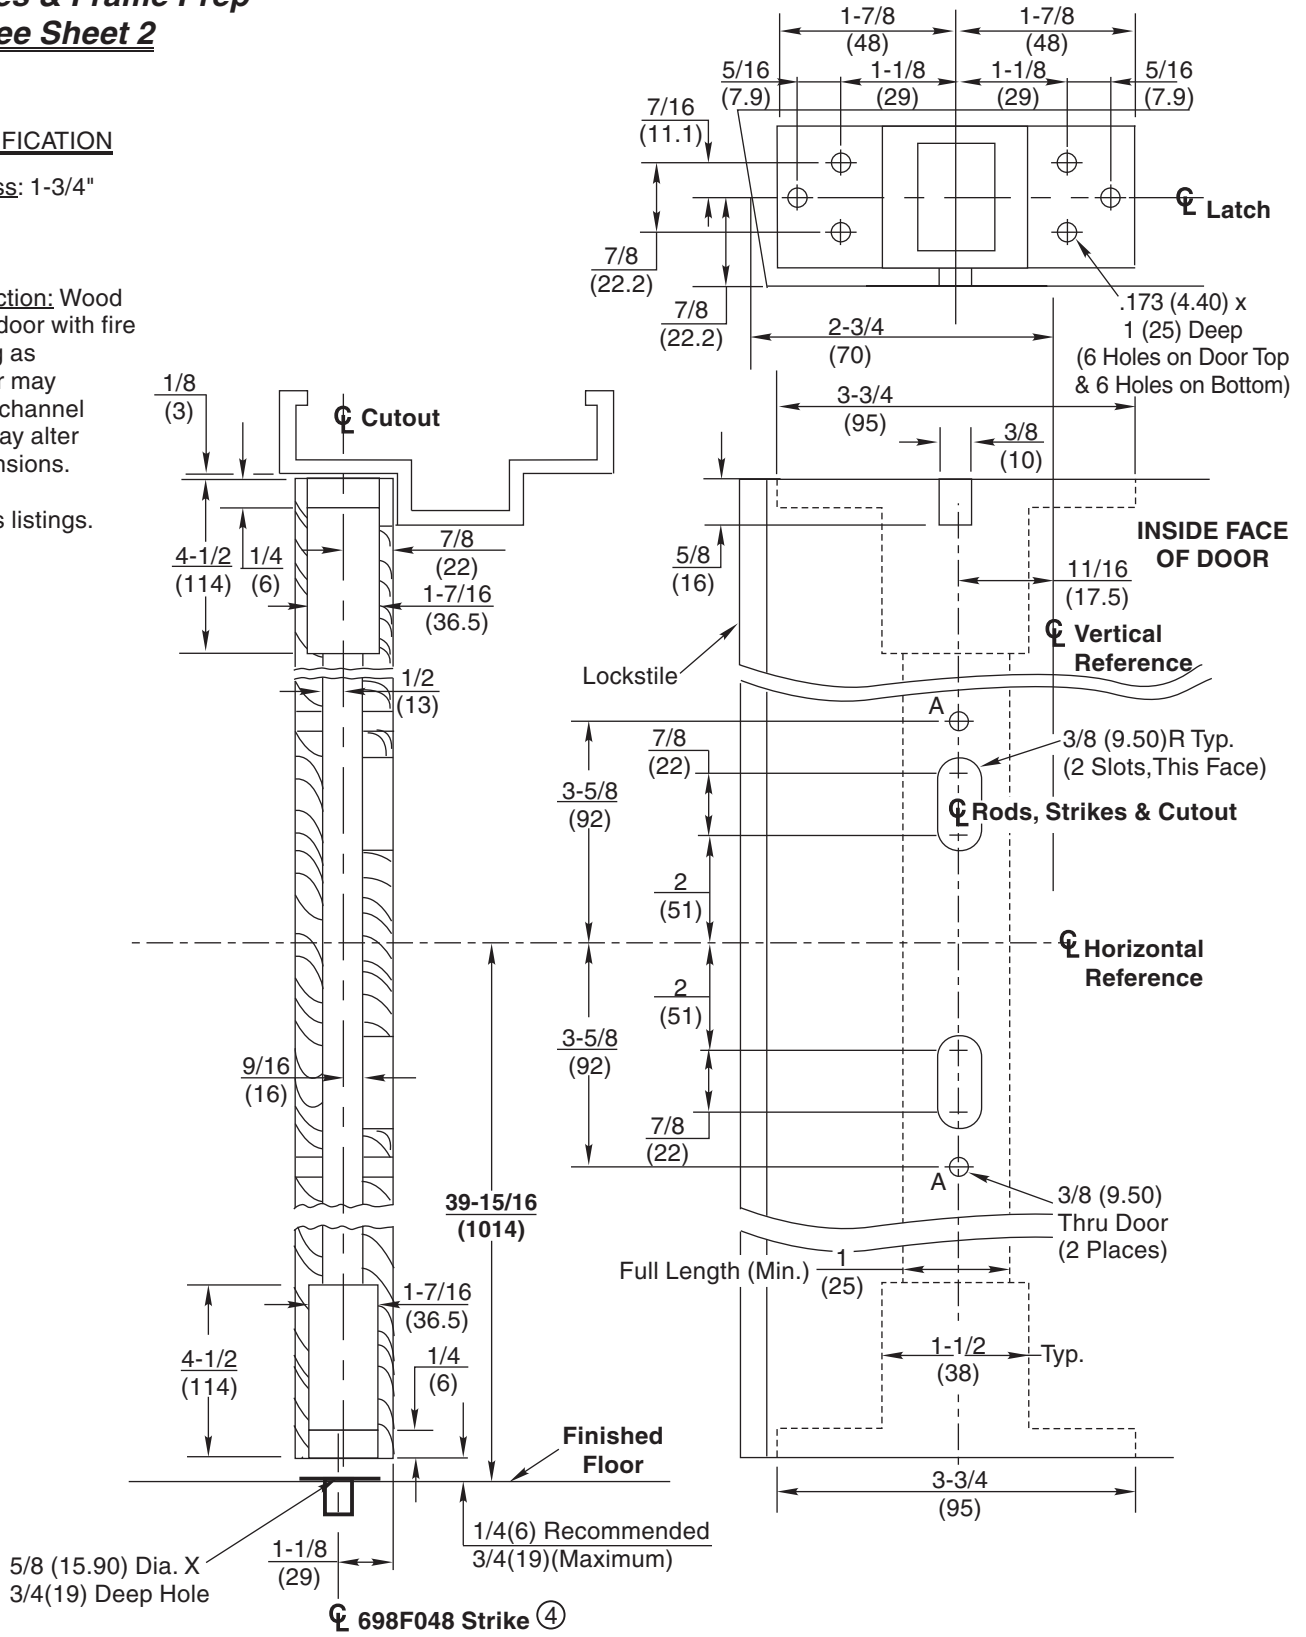


**ED5860 & ED5860B Series**  
**Concealed Vertical Rod Exit Devices**  
 Application for Wood Door with Metal Frame & 698F048 Floor Strike



SUPERSEDES	T30905-3	DO NOT SCALE DRAWING
TEMPLATE NUMBER	T30905-4	SHEET 1 of 2 DATE 05-09

ASSA ABLOY, the global leader in door opening solutions  
 Copyright© 2009 Corbin Russwin, Inc. All rights reserved.  
 Reproduction in whole or in part without the express written permission of Corbin Russwin, Inc. is prohibited.

# 681F77 Top Strike Preparation (See Note 6)

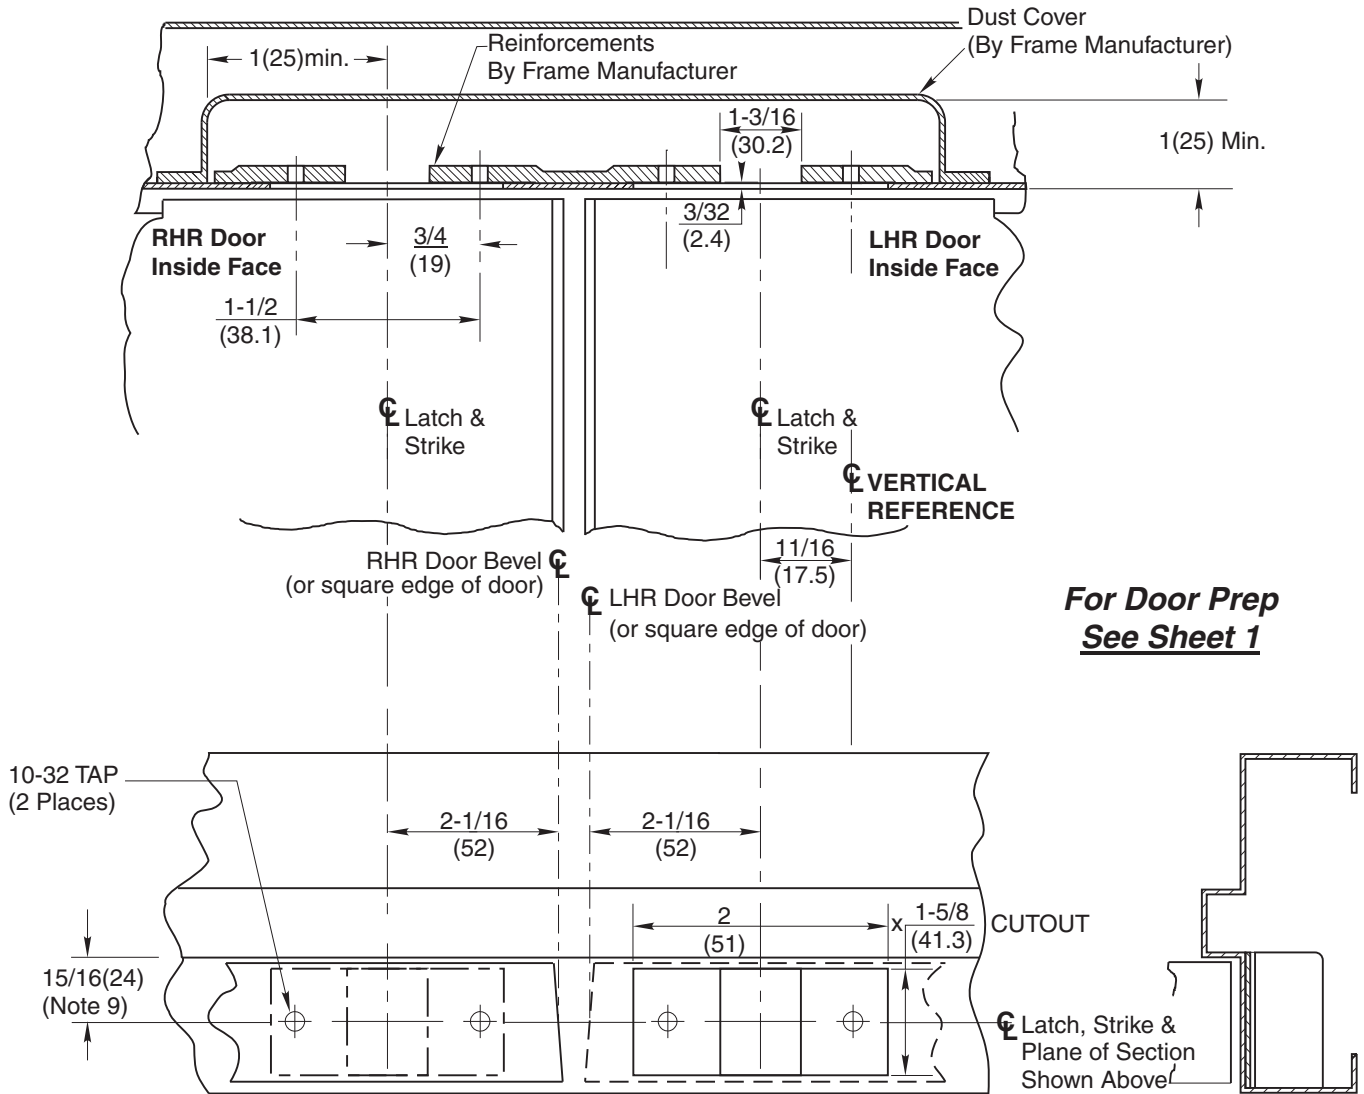

## Notes:

1. Do not scale drawing.
2. Dimensions are in inches (mm).
3. Preparation is typical for both hands.
4. Minimum door stile width: 4-1/2 (114).
5. Prepare mounting holes when installing the device.
6. Drawing shows elevation (frame bisected on strike center), bottom view looking up and side view.
7. Provide adequate structural support to maintain door integrity after device installation with power tools, door use, or abuse.
8. This template does not cover devices without bottom rod (M55 Option).
9. Door located in frame for door silencers. If not used, compensate this dimension to seat the door against the stop without rattle.
10. Device mount to hinge stile (not shown) requires hole location and preparation during device installation. Door structural requirements are similar for both stiles.
11. For outside trim preparation see appropriate trim template.
12. For electrical devices (suffixes M91, M92, M93, M94, M97) also see template T30890.
13. Bottom bolt should retract to 5/32 (4.0) above floor strike. Floor coverings in the door path must be laid accordingly.

## ED5860 & ED5860B Series Concealed Vertical Rod Exit Devices

Application for Wood Door with Metal Frame & 698F048 Floor Strike

**Corbin  
Russwin**

**ASSA ABLOY**

www.corbinrusswin.com

SUPERSEDES	T30905-3	DO NOT SCALE DRAWING
TEMPLATE NUMBER	T30905-4	SHEET 2 of 2 DATE 05-09