

# MOUNTING INFORMATION

- For Non-Fire Rated Exit Devices:  
Sex nuts or through bolts are recommended for wood core, wood and plastic covered composite doors, and any type of door without reinforcements.


FRAME STOP	BACKSET A	MINIMUM STILE
5/8 (15.9)	2-5/32 (54.8)	3-1/2 (88.9)
1/2 (12.7)	2-1/32 (51.6)	3-3/8 (85.7)

# SINGLE DOOR APPLICATIONS ONLY

# TEMPLATE CROSS REFERENCE

DESCRIPTION	TEMPLATE
ED6200 SERIES RIM DEVICE	T30566

LHR SHOWN  
RHR OPPOSITE

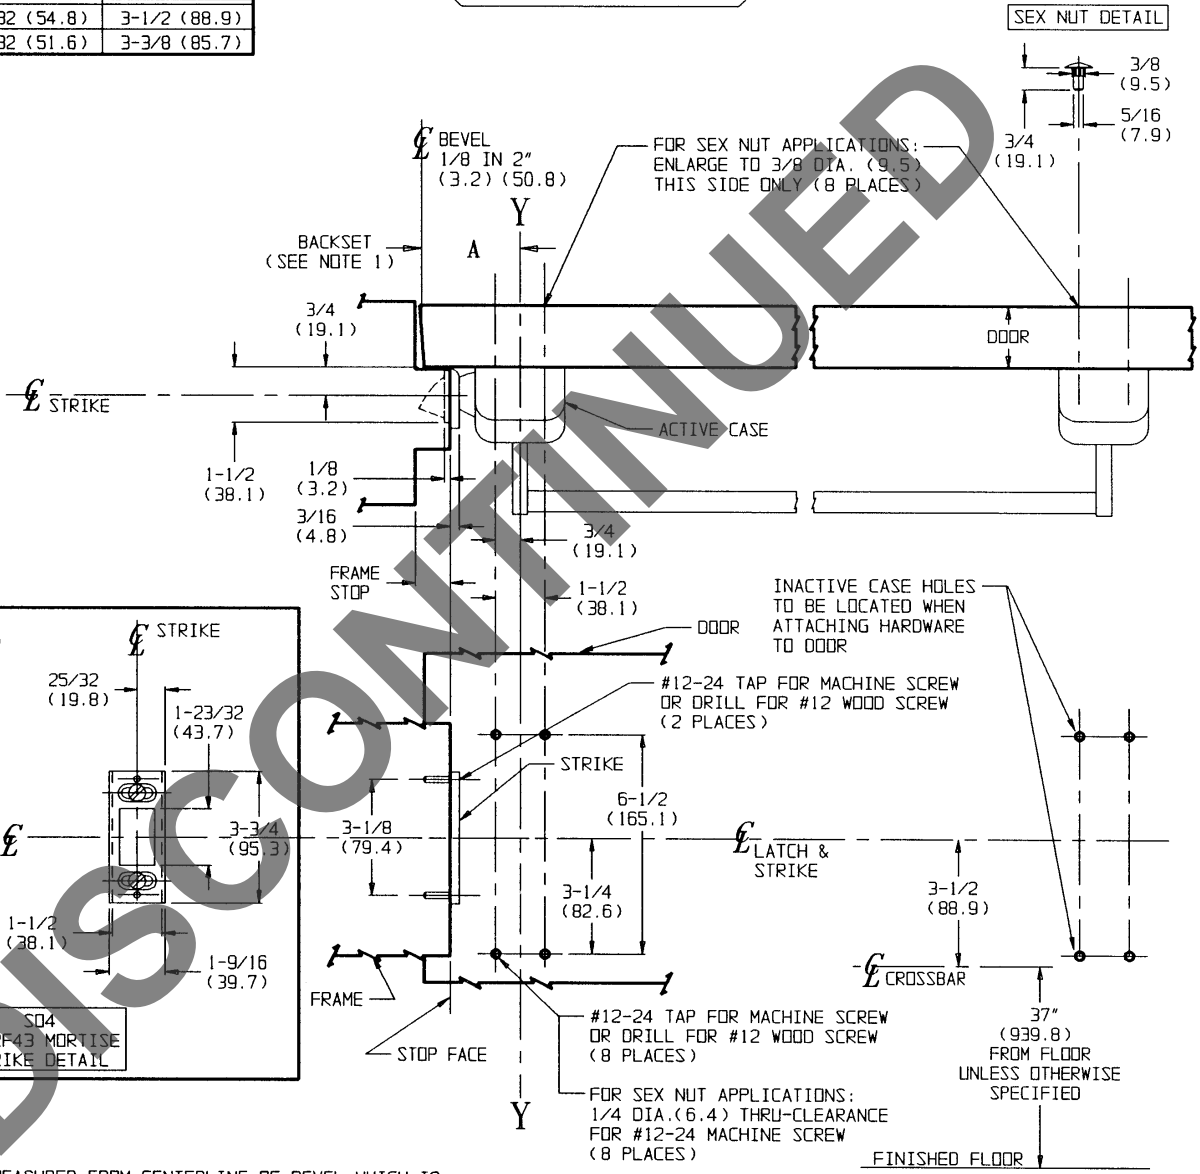

- NOTES:
- BACKSET IS MEASURED FROM CENTERLINE OF BEVEL WHICH IS CENTERPOINT OF DOOR THICKNESS.
  - CAUTION:** THIS TEMPLATE IS FOR SINGLE DOOR APPLICATIONS ONLY.
  - FOR PREPARATION OF TRIM, REFER TO SEPARATE TEMPLATE.
  - DIMENSIONS GIVEN IN INCHES AND (MM).

INSIDE FACE OF DOOR (DEVICE SIDE)

SUPERSEDES:  
V-25709, V-25714  
23202-A, 23197-A

## RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

ED6200 SERIES BY S04

CROSSBAR RIM DEVICE BY MORTISE STRIKE



DO NOT SCALE DRAWING

SUPERSEDES	SEE ABOVE	DR.	BTH
DATE	03/29/93	TEMPLATE NUMBER	T 30589