

# MOUNTING INFORMATION



**- For Fire Rated Exit Devices:**  
Sex nuts or through bolts are required for wood core, wood and plastic covered composite doors, and any type of door without reinforcements.

**NOTES:**

- BACKSET IS MEASURED FROM CENTERLINE OF BEVEL WHICH IS CENTERPOINT OF DOOR THICKNESS.
- RECOMMENDED MINIMUM STILE 4-1/8 (104.8)
- FOR PREPARATION OF TRIM, REFER TO SEPARATE TEMPLATE.
- DIMENSIONS GIVEN IN INCHES AND (MM).
- REFER TO TEMPLATE T30597 FOR S06 OPTIONAL BOTTOM THRESHOLD STRIKE 304F34.


D	REMARKS
7/16 (11.1)	WITHOUT SILENCERS
3/8 (9.5)	WITH SILENCERS

#12-24 TAP FOR MACHINE SCREW (4 PLACES)

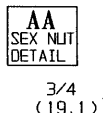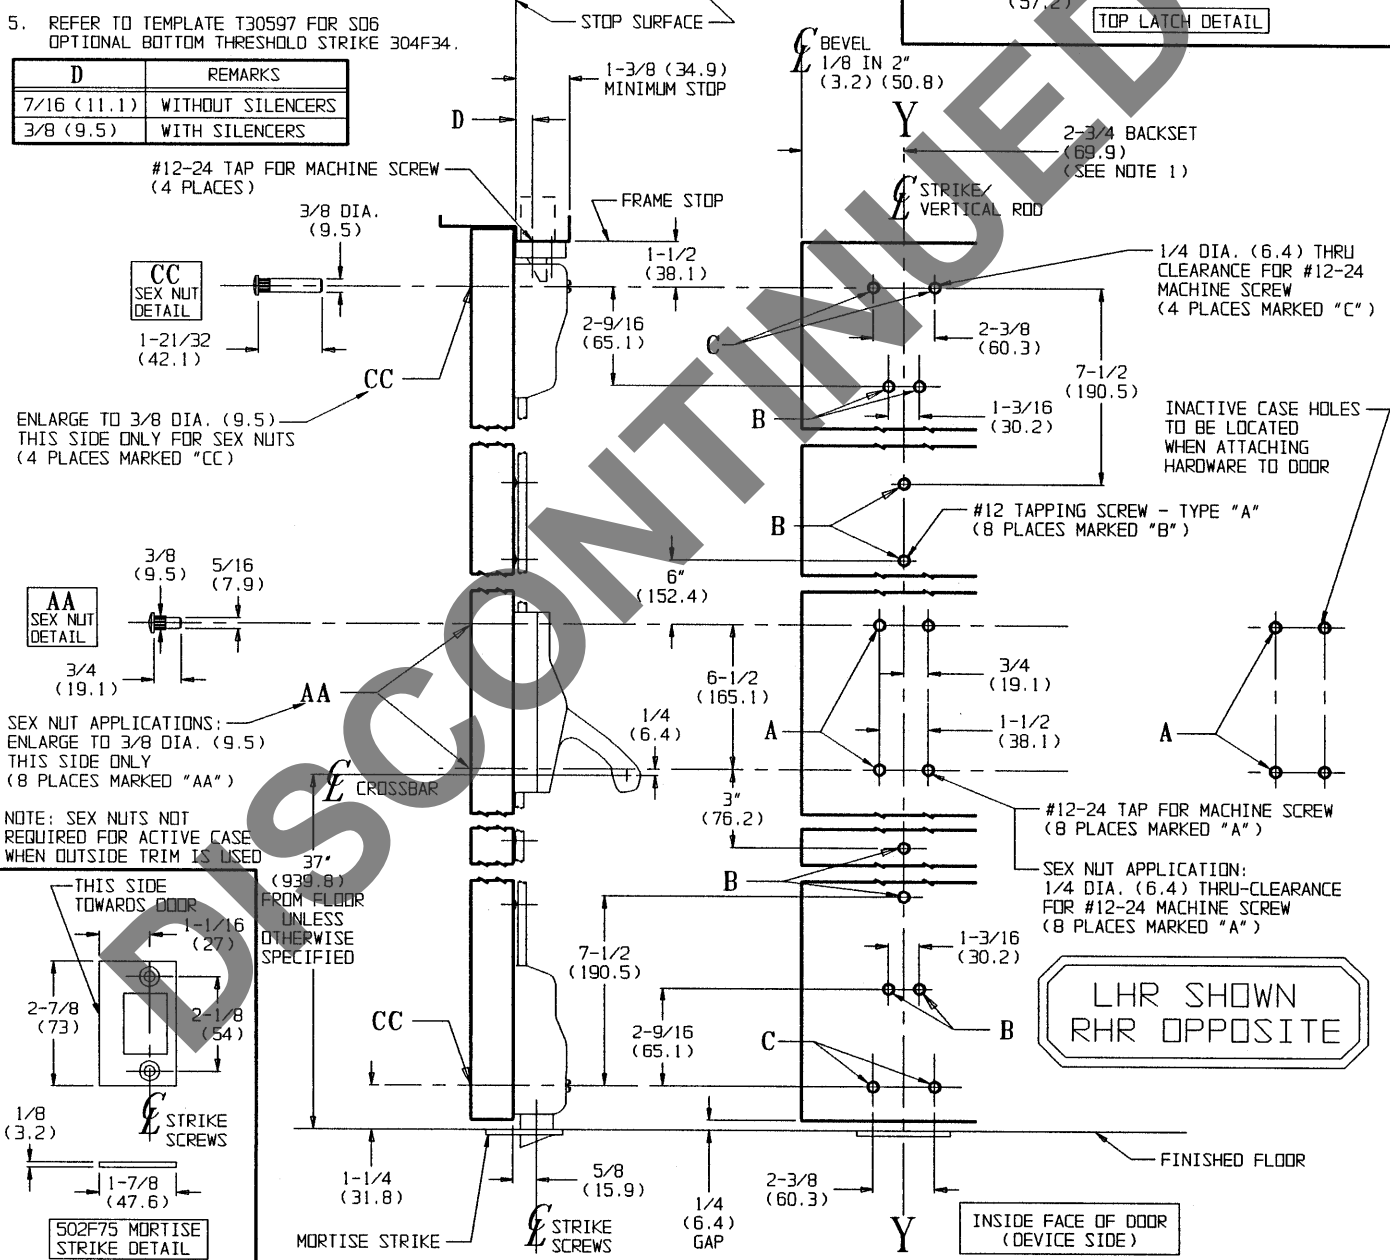

SEX NUT APPLICATIONS:  
ENLARGE TO 3/8 DIA. (9.5)  
THIS SIDE ONLY  
(8 PLACES MARKED "AA")

NOTE: SEX NUTS NOT  
REQUIRED FOR ACTIVE CASE  
WHEN OUTSIDE TRIM IS USED

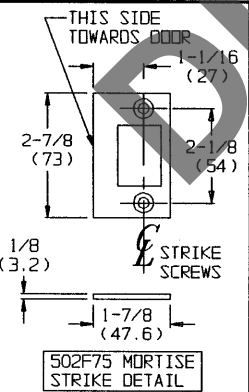

LHR SHOWN  
RHR OPPOSITE

## RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

## ED6400A Series

### CROSSBAR VERTICAL ROD DEVICE

FIRE RATED



DO NOT SCALE DRAWING			
SUPERSEDES	T30596-1	DR. OLD	APP. <i>SLW</i>
DATE	1-98	TEMPLATE NUMBER	T30596-2