

Exit Device Shim Kits


697F338, 697F348, 697F358 and 697F368

Installation Instructions – FM 551 10/18

Shim Locations

697F348 Kit for Surface Vertical Rod - Exit Device

697F368 Kit for Narrow Stile Surface Vertical Rod - Exit Device

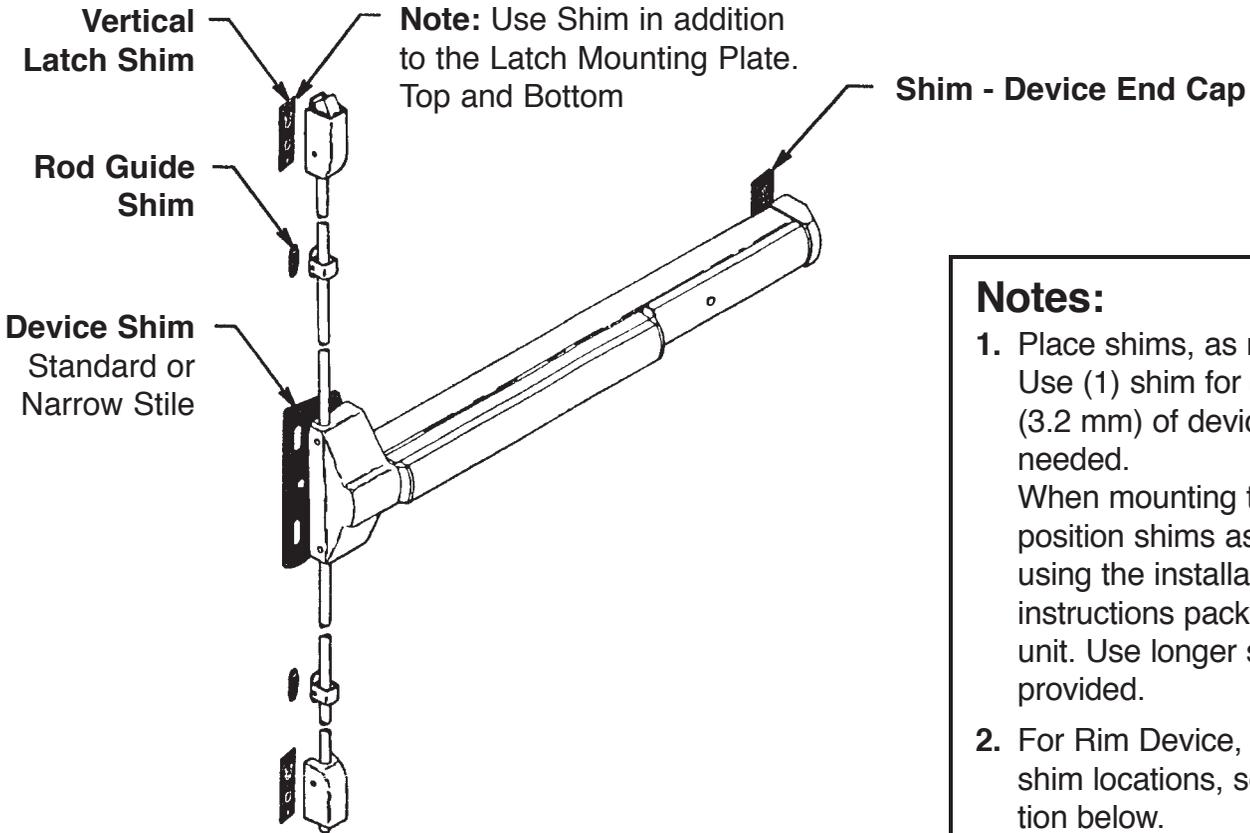


Notes:

1. Place shims, as required. Use (1) shim for each 1/8" (3.2 mm) of device lift needed. When mounting the device, position shims as shown, using the installation instructions packed with the unit. Use longer screws provided.
2. For Rim Device, strike and shim locations, see illustration below.
3. For Concealed Vertical Rod Device, see yoke pin shim location per illustration on reverse side.


697F338 Kit for Rim Mortise & CVR - Exit Device

697F358 Kit for Narrow Stile Rim & CVR - Exit Device

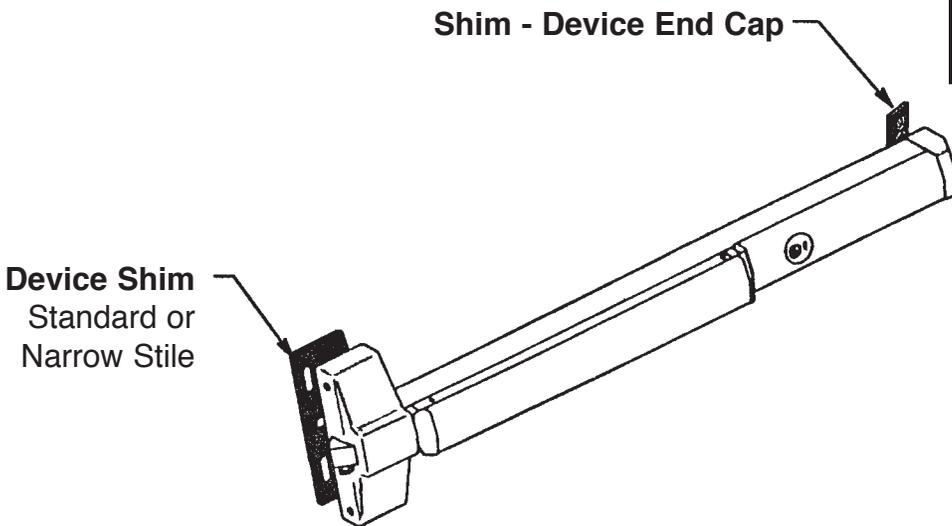

WARNING
This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.
08/2018

Caution: Strike Location Will Vary

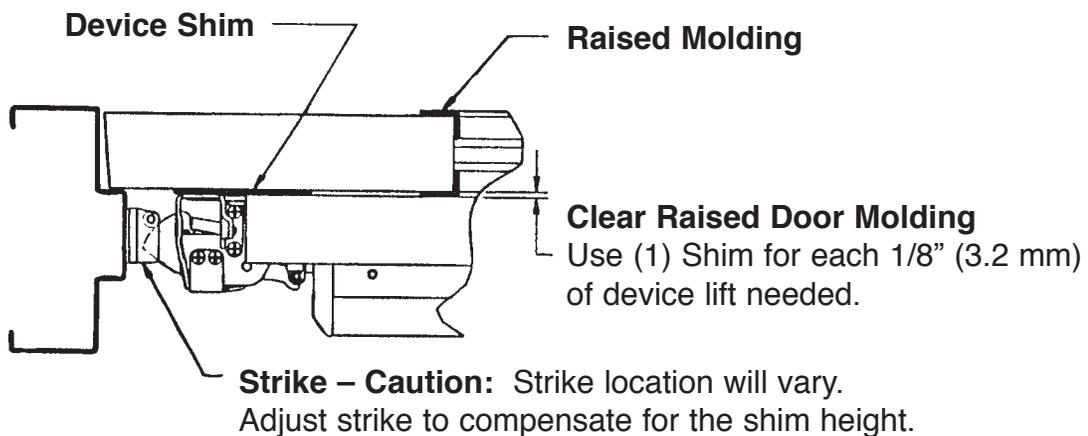

Exit Device Shim Kits


697F338, 697F348, 697F358 and 697F368

Installation Instructions – FM 551 10/18




ASSA ABLOY

Yoke Pin Shim Location

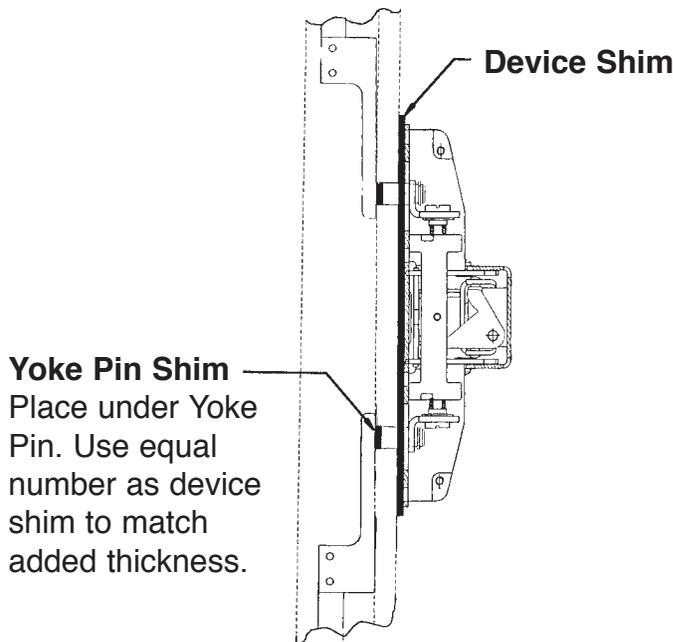

Yoke Pin Shim
Place under Yoke Pin. Use equal number as device shim to match added thickness.


FIGURE 1

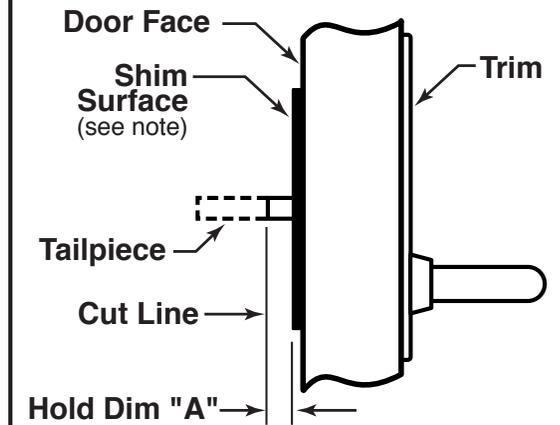

NOTE: Measure Cut Line from Shim Surface for Dim "A".

TRIM SERIES	DIM "A"
Wide Stile	5/16" (8 mm)
Narrow Stile	1/4" (6.4 mm)

Spindle Assembly

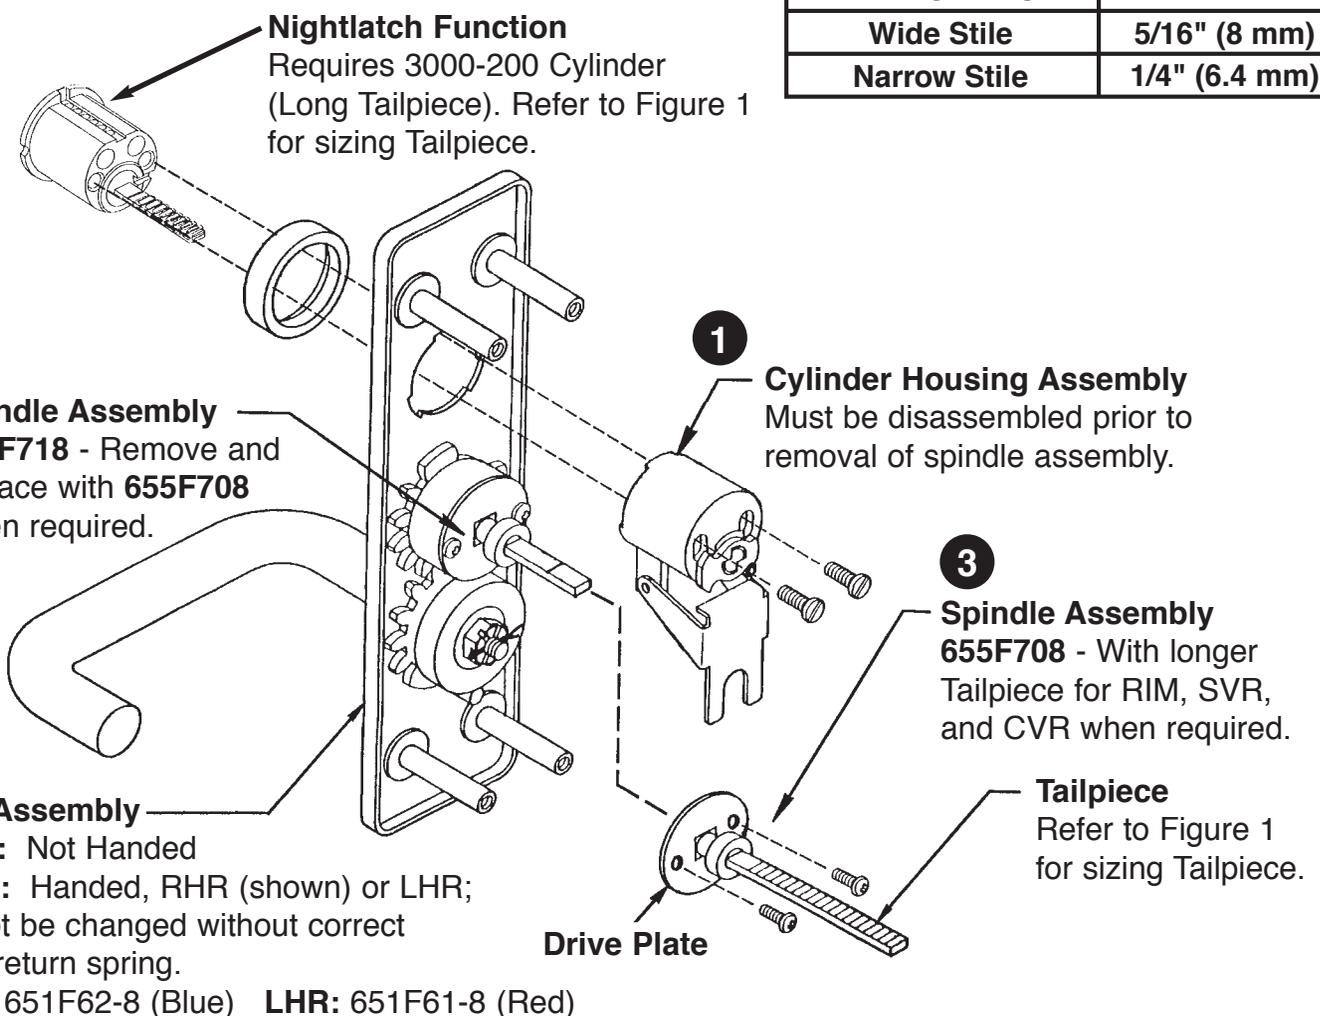

CAUTION: When removing the spindle assembly from the trim, keep the clutch spring and screws, they are needed for reassembly. When finished, check the lock and unlock function before mounting. Refer to Figure 1 for sizing the tailpiece to the door thickness and shims.

For Thumbpiece Applications: Thumbpiece applications follow the same procedure as above, but the original smaller drive plate must be used with the new tailpiece included in the kit. To do this remove the cylinder housing assembly and the original spindle assembly from the trim (steps 1 & 2 above).

Remove the retaining ring from both spindle assemblies, switch the tailpieces and reassemble (longer tailpiece to the smaller drive plate) with a retaining ring. Reattach



ASSA ABLOY

In U.S.:
Corbin Russwin, Inc.
225 Episcopal Road
Berlin, CT 06037 USA
Phone: 800-543-3658

In Canada:
ASSA ABLOY Door Security Solutions Canada
160 Four Valley Drive
Vaughan, Ontario, Canada L4K 4T9
Phone: 800-461-3007

Technical Product Support:
Phone: 888-607-5703