
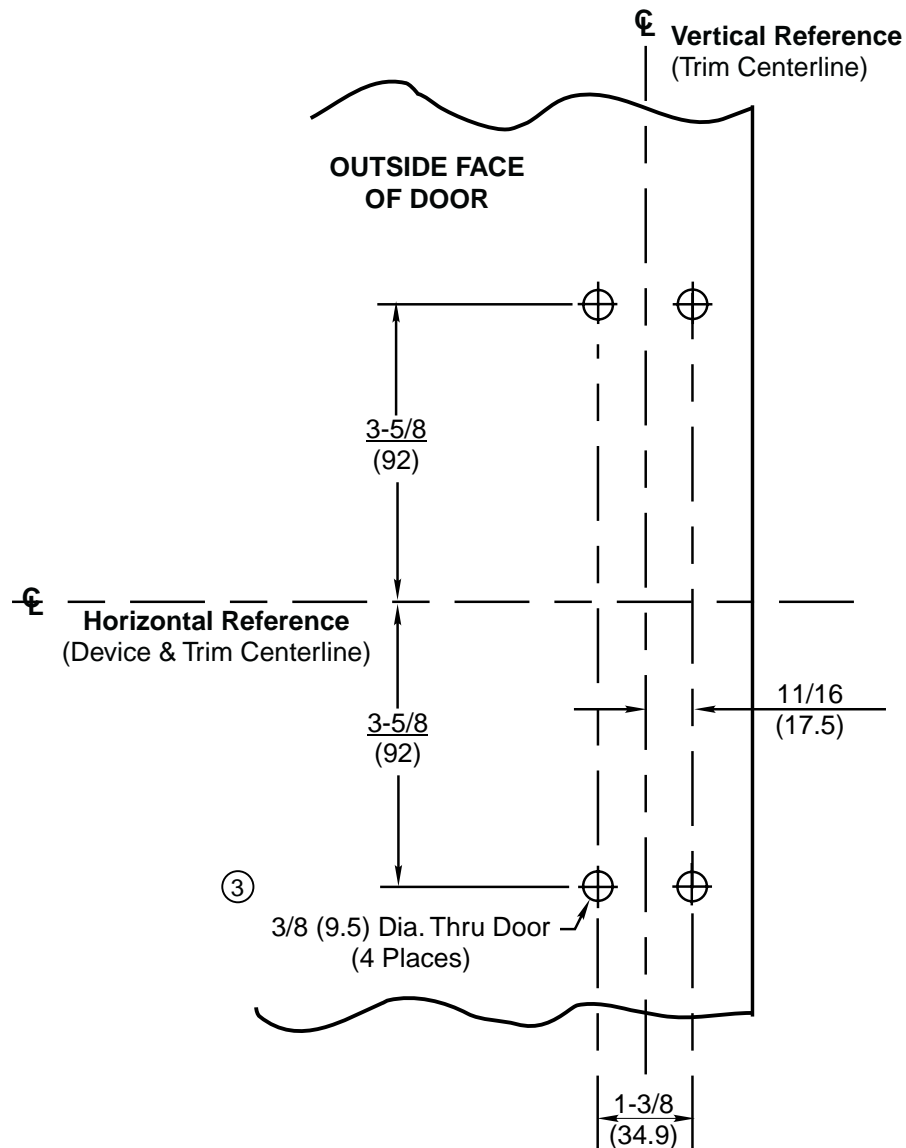


**Notes:**

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Prepare mounting holes when installing trim.

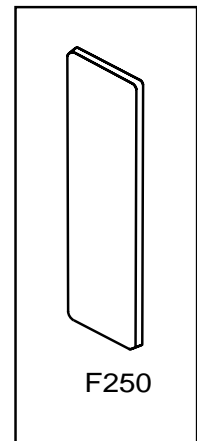

**F250 Trim**  
With ED5200, ED5400, ED5600 or ED5800 Series  
Rim, SecureBolt, Mortise and Vertical Rod Exit Devices  
**Wood or Composite Door Preparation**

**Corbin  
Russwin**<sup>®</sup>  
www.corbinrusswin.com

SUPERSEDES	T30853-2	DO NOT SCALE DRAWING
TEMPLATE NUMBER	<b>T30853-3</b>	DATE <b>10-01</b>