

Notes:

- This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
- 2. Do not scale drawing.
- 3. Dimensions are in inches (mm).
- 4. LHR door shown. Preparation is typical for both door hands.
- 5. Provide adequate structrual support to maintain door integrity during operation.
- 6. Prepare mounting holes when installing trim.
- 7. Shaded area represents mortise lock cavity from device template.





F2M57 TrimWith ED5600 Series Mortise Exit Devices
Wood or Composite Door Preparation

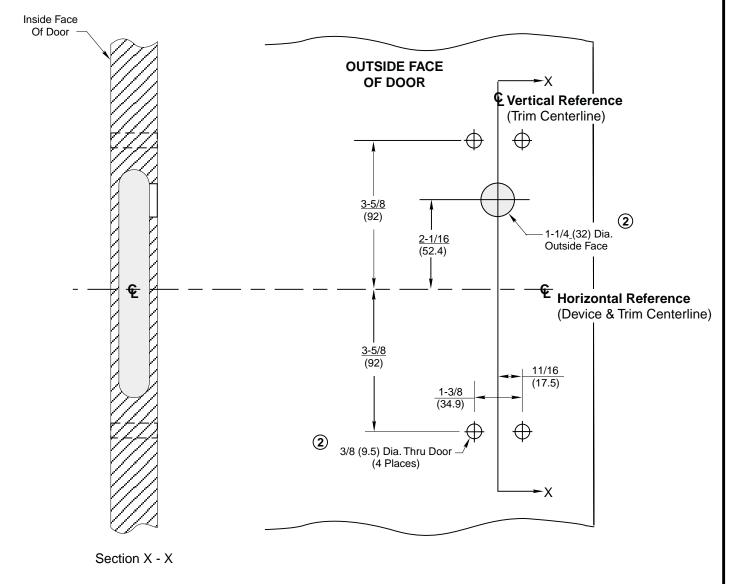

www.corbinrusswin.com

SUPERSEDES T30864-1 DO NOT SCALE DRAWING

TEMPLATE NUMBER

T30864-2 DATE 9-01