

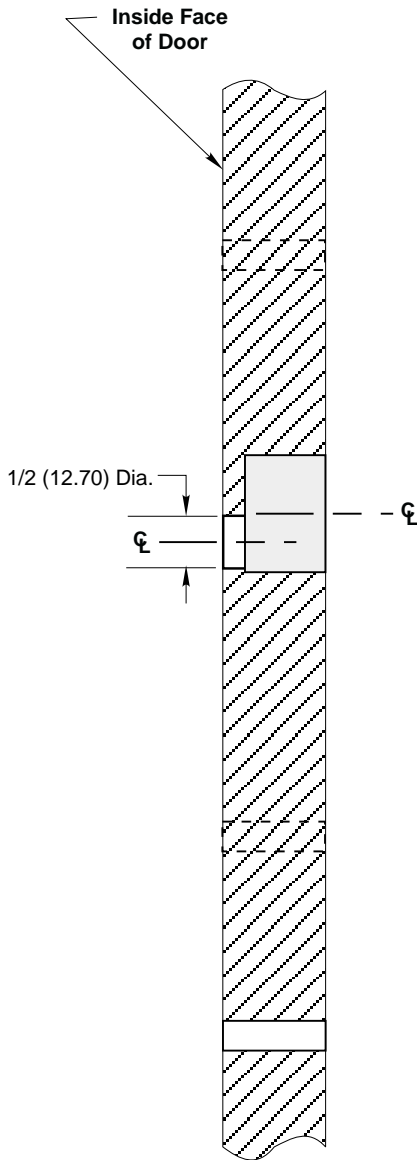


Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate internal support to maintain door integrity during operation.
6. Prepare mounting holes when installing trim.
7. Dimensions given about a centerline are symmetrical.

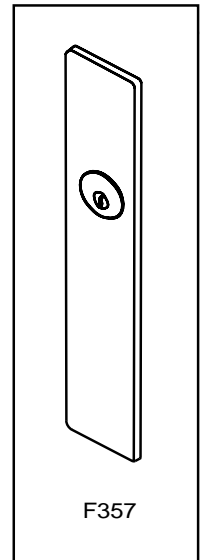

Section X - X

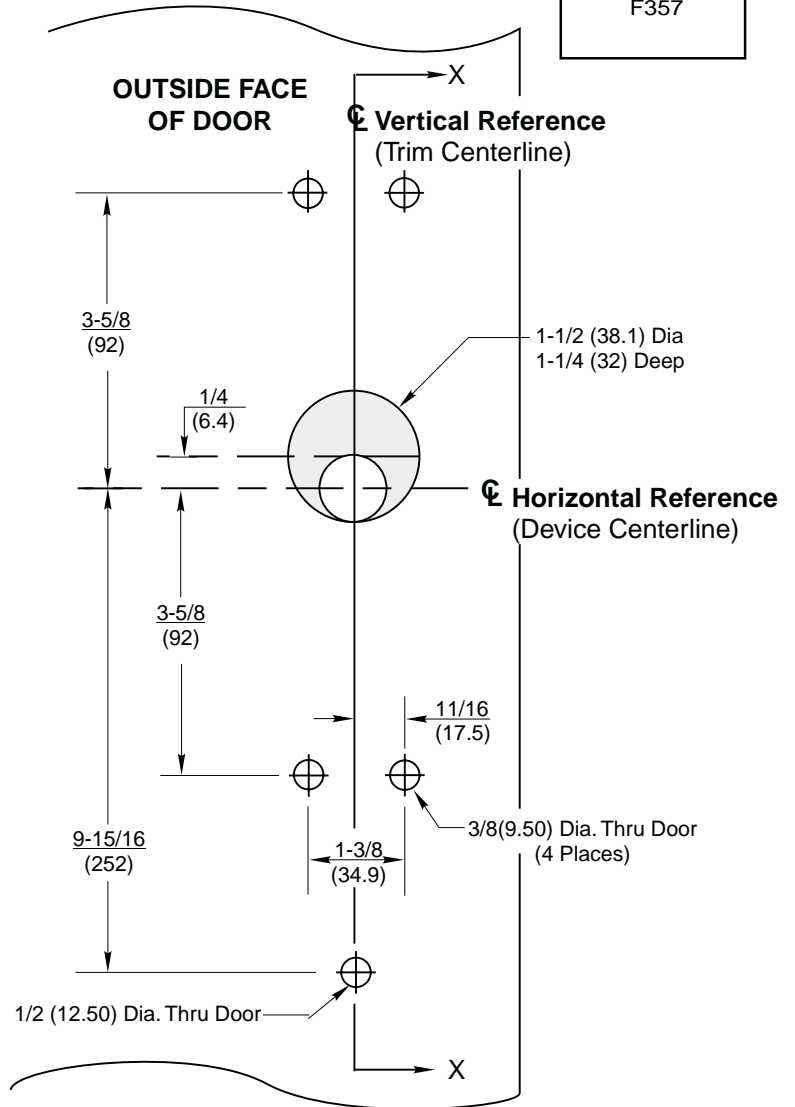

F357 Trim
with ED5200, ED5400 or ED5800 Series
Rim and Vertical Rod Exit Devices
Wood or Composite Door Preparation



SUPERSEDES T30859-1 DO NOT SCALE DRAWING
TEMPLATE NUMBER **T30859-2** DATE **8-99**