



Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. For door reinforcement see template T30800.
6. Prepare mounting holes when installing trim.
7. Provide adequate internal support to prevent door deformation after trim is bolted to the device.

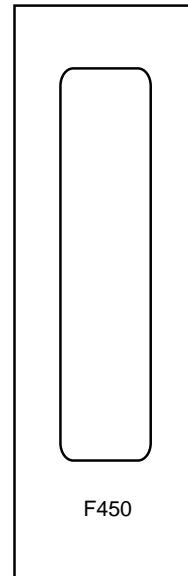

F450

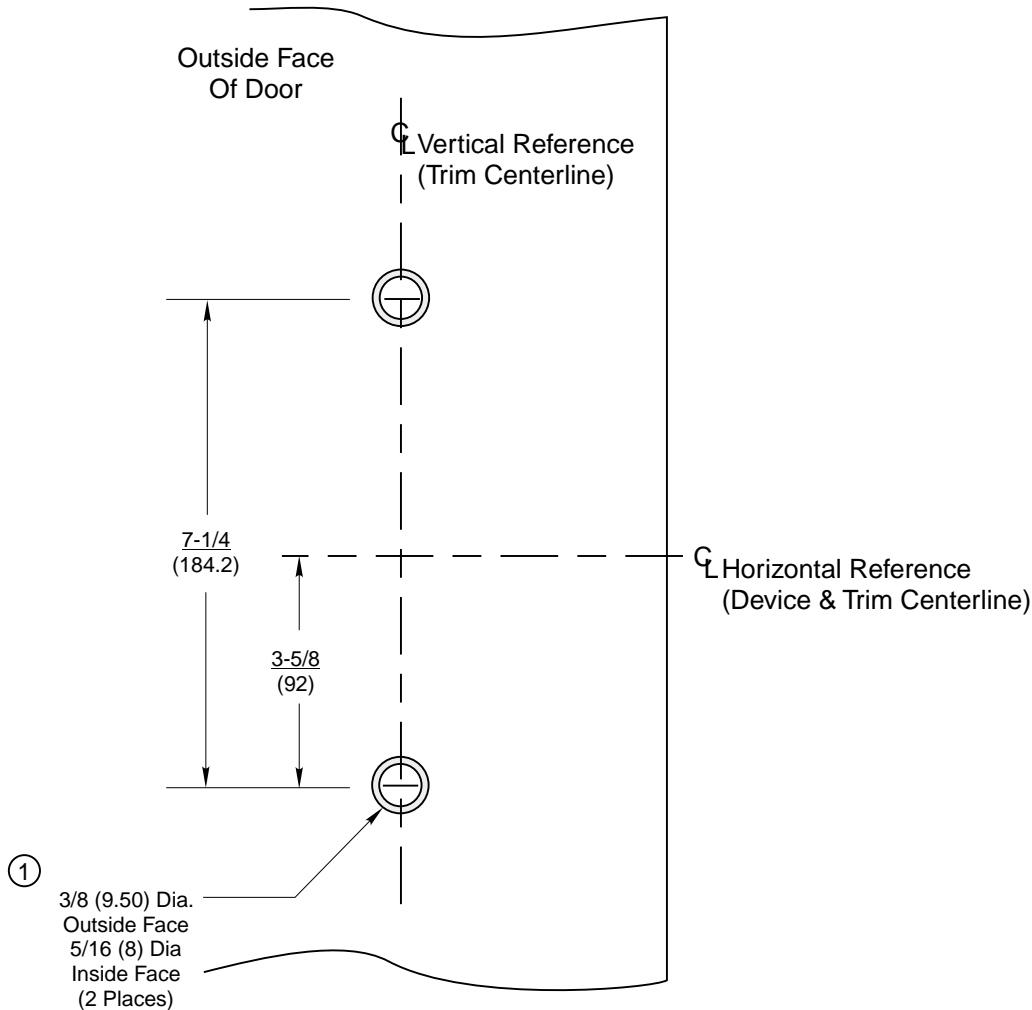

**F450 Narrow Escutcheon Trim**  
 With ED4200, ED4400, or ED4800 Series  
 Rim and Vertical Rod Exit Devices  
**Metal Door Preparation**



SUPERSEDES	T30811	DO NOT SCALE DRAWING
TEMPLATE NUMBER	<b>T30811-1</b>	DATE <b>9-99</b>