
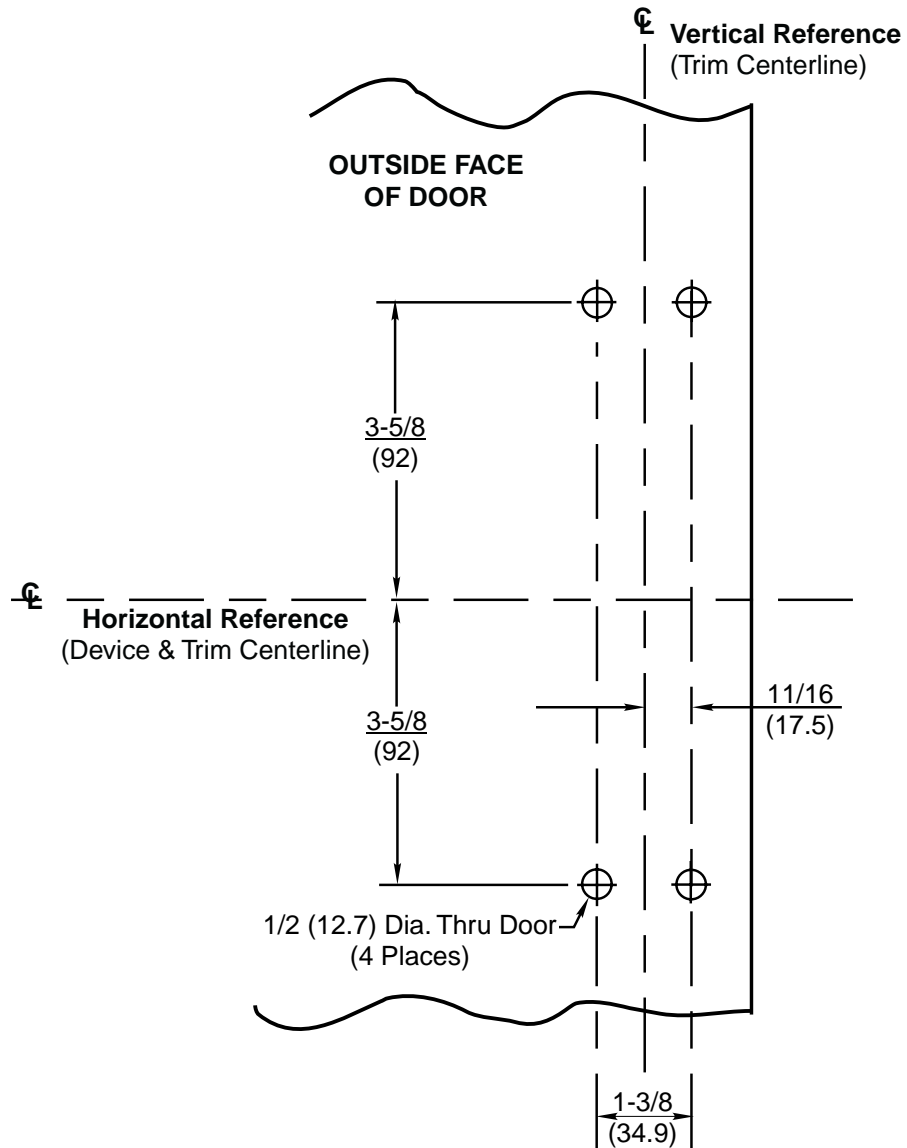


Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Prepare mounting holes when installing trim.

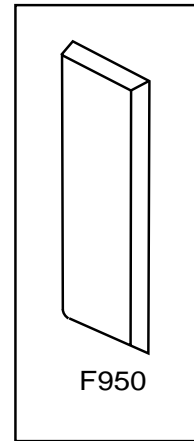

F950 Trim

With ED5200, ED5400, ED5600 or ED5800 Series
Rim, SecureBolt, Mortise and Vertical Rod Exit Devices
Wood or Composite Door Preparation



www.corbinrusswin.com

SUPERSEDES

DO NOT SCALE DRAWING

TEMPLATE NUMBER

T30950

DATE **10-01**