

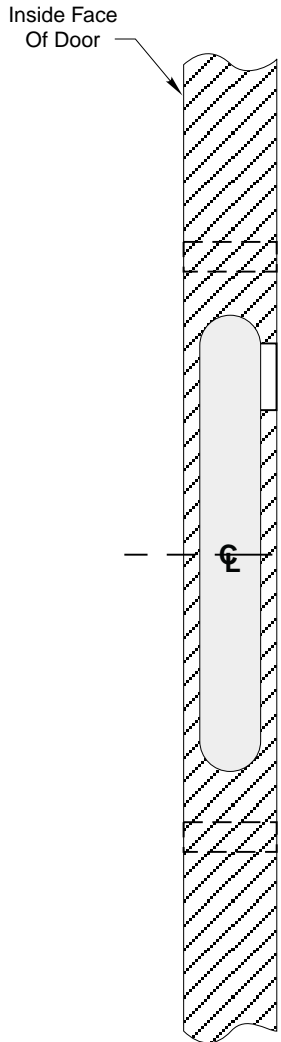


**Notes:**

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate structural support to maintain door integrity during operation.
6. Prepare mounting holes when installing trim.
7. Shaded area represents mortise lock cavity from device template.

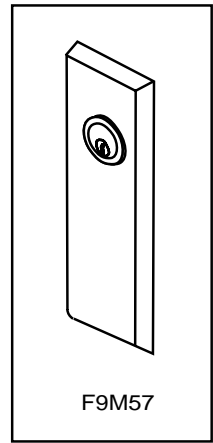

Section X - X

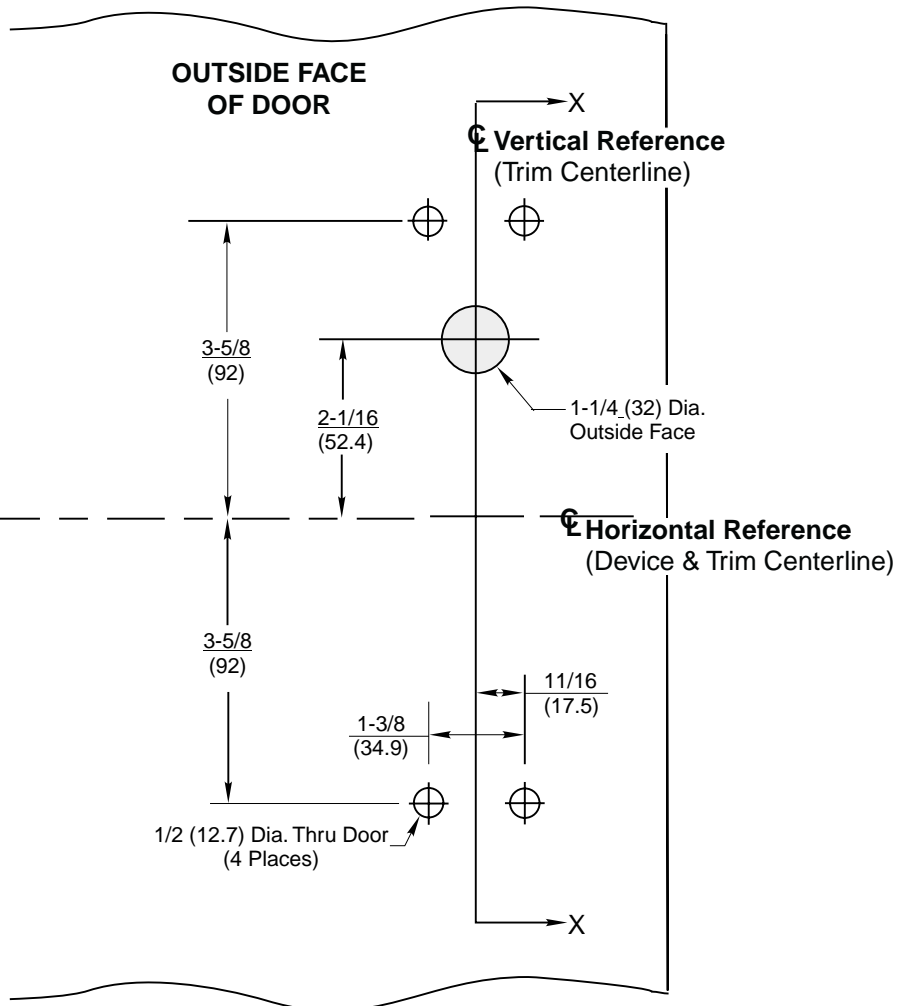

**F9M57 Trims**  
 With ED5600 Series Mortise Exit Devices  
**Wood or Composite Door Preparation**

**Corbin  
 Russwin**<sup>®</sup>  
 www.corbinrusswin.com

SUPERSEDES	DO NOT SCALE DRAWING
TEMPLATE NUMBER	DATE
<b>T30955</b>	<b>9-01</b>