


TEMPLATE CROSS REFERENCE

Description	Template
ML2000, ML2200 Series Mortise Lock (HT)	T30607

Notes:

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Dimensions given in inches and (mm).

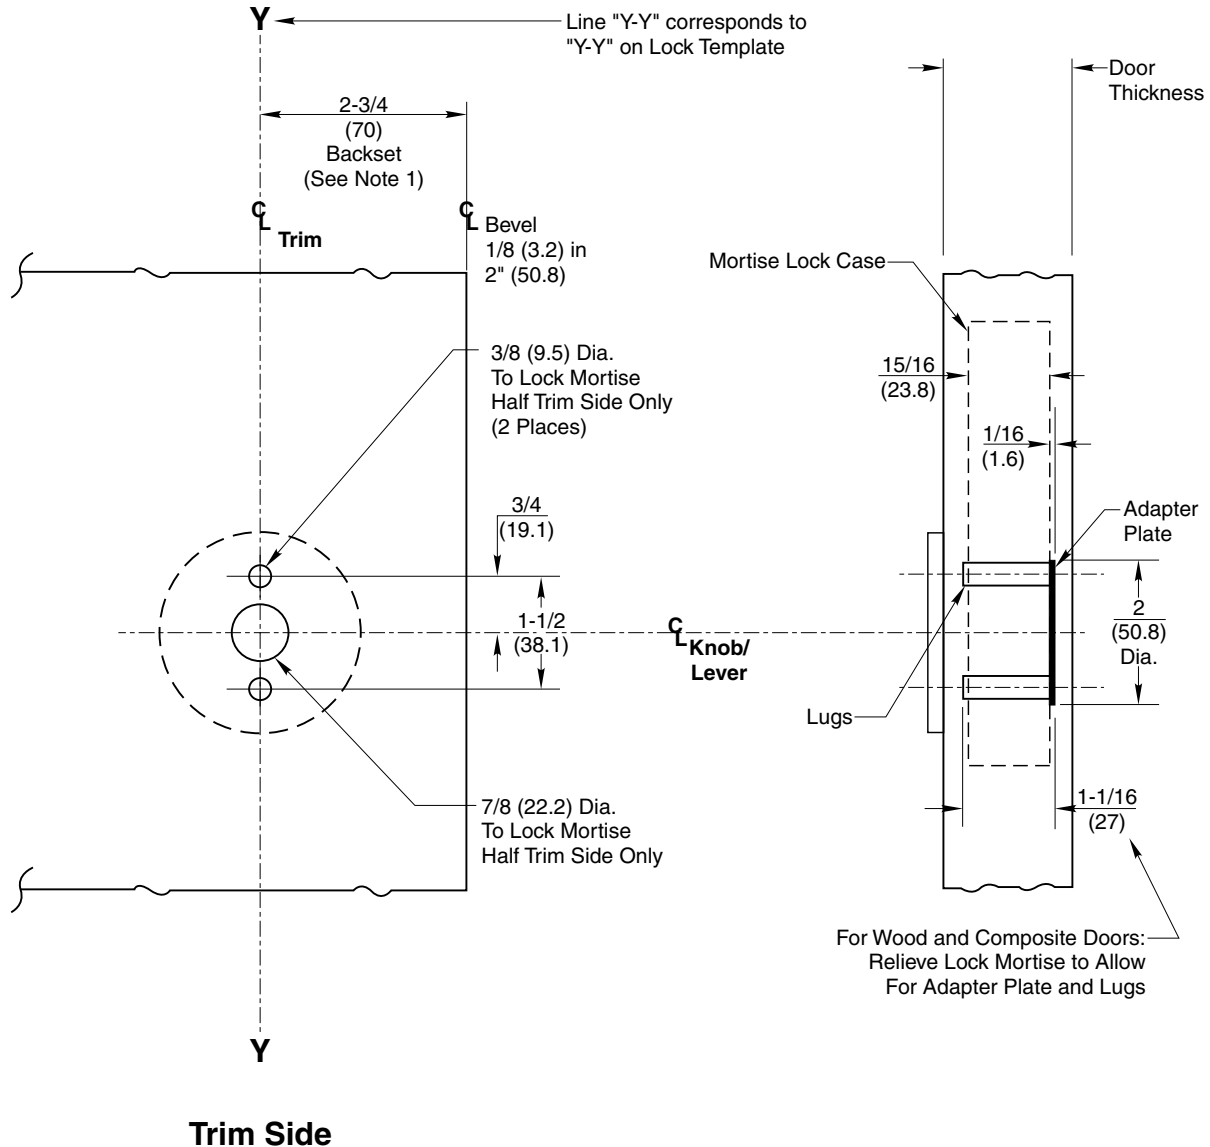

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

ASA	DSA	FSG	LSB	NSA	RSA	TSG
ASB	DSB	GZA	LSF	NSB	RSB	YZA
ASF	DSF	GZB	LWA	NSF	RSF	YZB
CSA	ESA	GZF	LWB	PSA	RWA	YZF
CSB	ESB	GZH	LWF	PSB	RWB	YZH
CSF	ESF	LSA	MSG	PSF	RWF	ZSG

Mortise Lock Rose Half Working Trim ⑤



ASSA ABLOY

www.corbinrusswin.com

SUPERSEDES T30547-4 DO NOT SCALE DRAWING

TEMPLATE NUMBER **T30547-5** DATE **11-18**