


**TEMPLATE CROSS REFERENCE**

| Description                             | Template |
|---|----------|
| ML2000, ML2200 Series Mortise Lock      | T30600   |
| ML2000, ML2200 Series Mortise Lock (MR) | T30605   |

**Notes:**

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Dimensions given in inches and (mm).

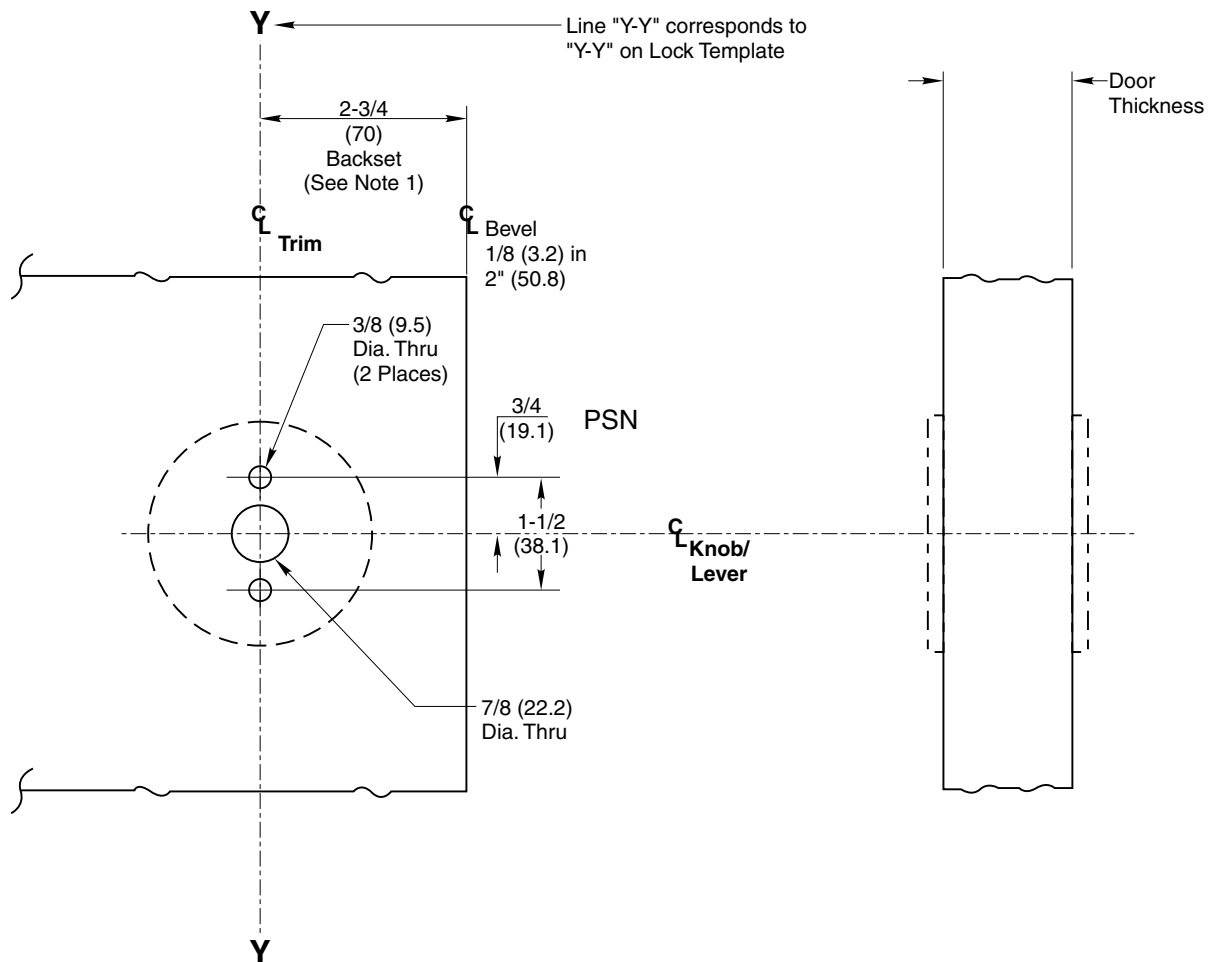

**RESPONSIBILITY**

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

|     |     |     |     |     |     |     |
|-----|-----|-----|-----|-----|-----|-----|
| ASA | DSA | FSG | LSB | NSA | RSA | TSG |
| ASB | DSB | GZA | LSF | NSB | RSB | YZA |
| ASF | DSF | GZB | LWA | NSF | RSF | YZB |
| CSA | ESA | GZF | LWB | PSA | RWA | YZF |
| CSB | ESB | GZH | LWF | PSB | RWB | YZH |
| CSF | ESF | LSA | MSG | PSF | RWF | ZSG |

**Mortise Lock Rose Trim** ⑤



**ASSA ABLOY**

www.corbinruswin.com

|                 |                 |                      |
|-----------------|-----------------|----------------------|
| SUPERSEDES      | T30546-4        | DO NOT SCALE DRAWING |
| TEMPLATE NUMBER | <b>T30546-5</b> | DATE <b>11-18</b>    |