


TH9M10 and TH9M55

Heavy Duty Thumbpiece Trim


For use with ED5600 Series Mortise Exit Device

Metal, Wood or Composite Doors

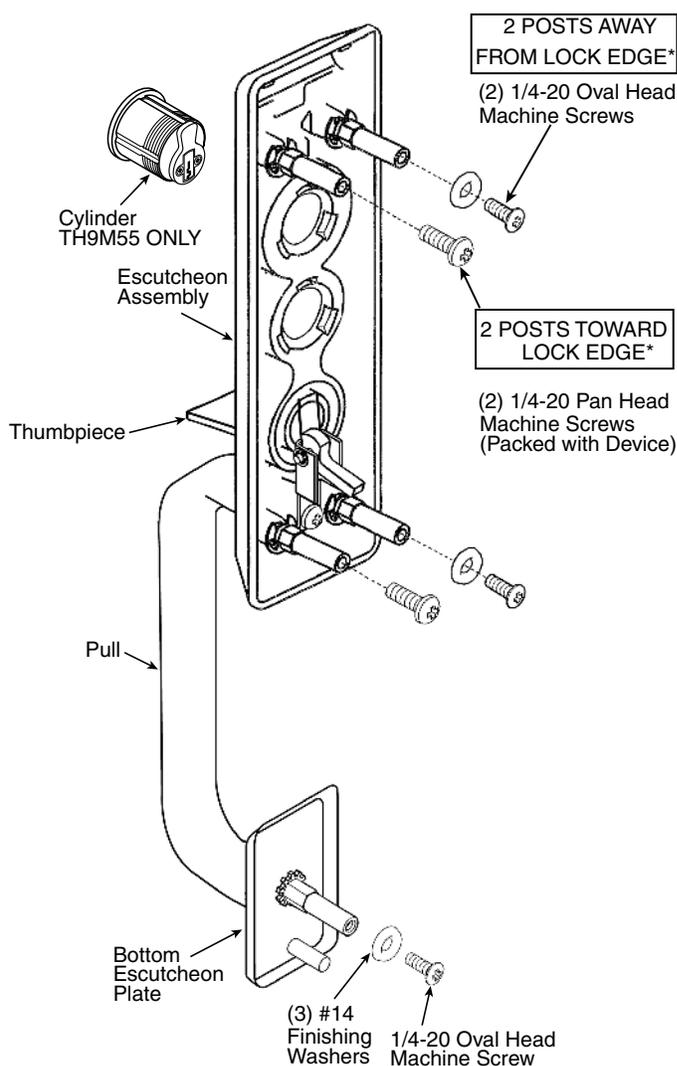

*Shown for LHR Door

Figure 1

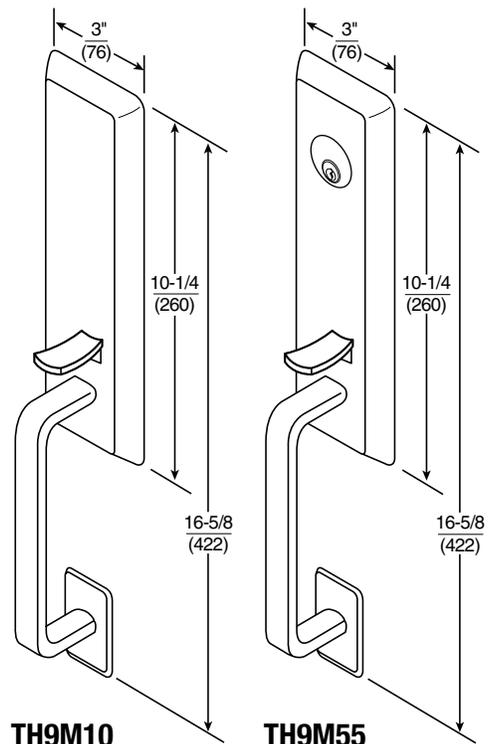

TH9M10
Passage Function
 Thumbpiece
 always active

TH9M55
Classroom Function
 Key locks/unlocks
 thumbpiece

! WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

TH9M10 and TH9M55 Heavy Duty Thumbpiece Trim

For ED5600 Series Mortise Exit Device



ASSA ABLOY


Installation Instructions

1 Template Top

Holes Marked "X" (5 Places)	
Metal Doors:	
Inside Face	5/16" (8) Dia.
Outside Face	1/2" (13) Dia.
Wood Doors: 1/2" (13) Dia. Thru	

Dimensions in inches (mm).

CAUTION: Office copiers and desktop printers may change the size of a drawing and make the template inaccurate to use as a door marker. If this is not the original template packed with the trim, use only the dimensions written on the template to locate the holes on the door. Do not use the template as a door marker.

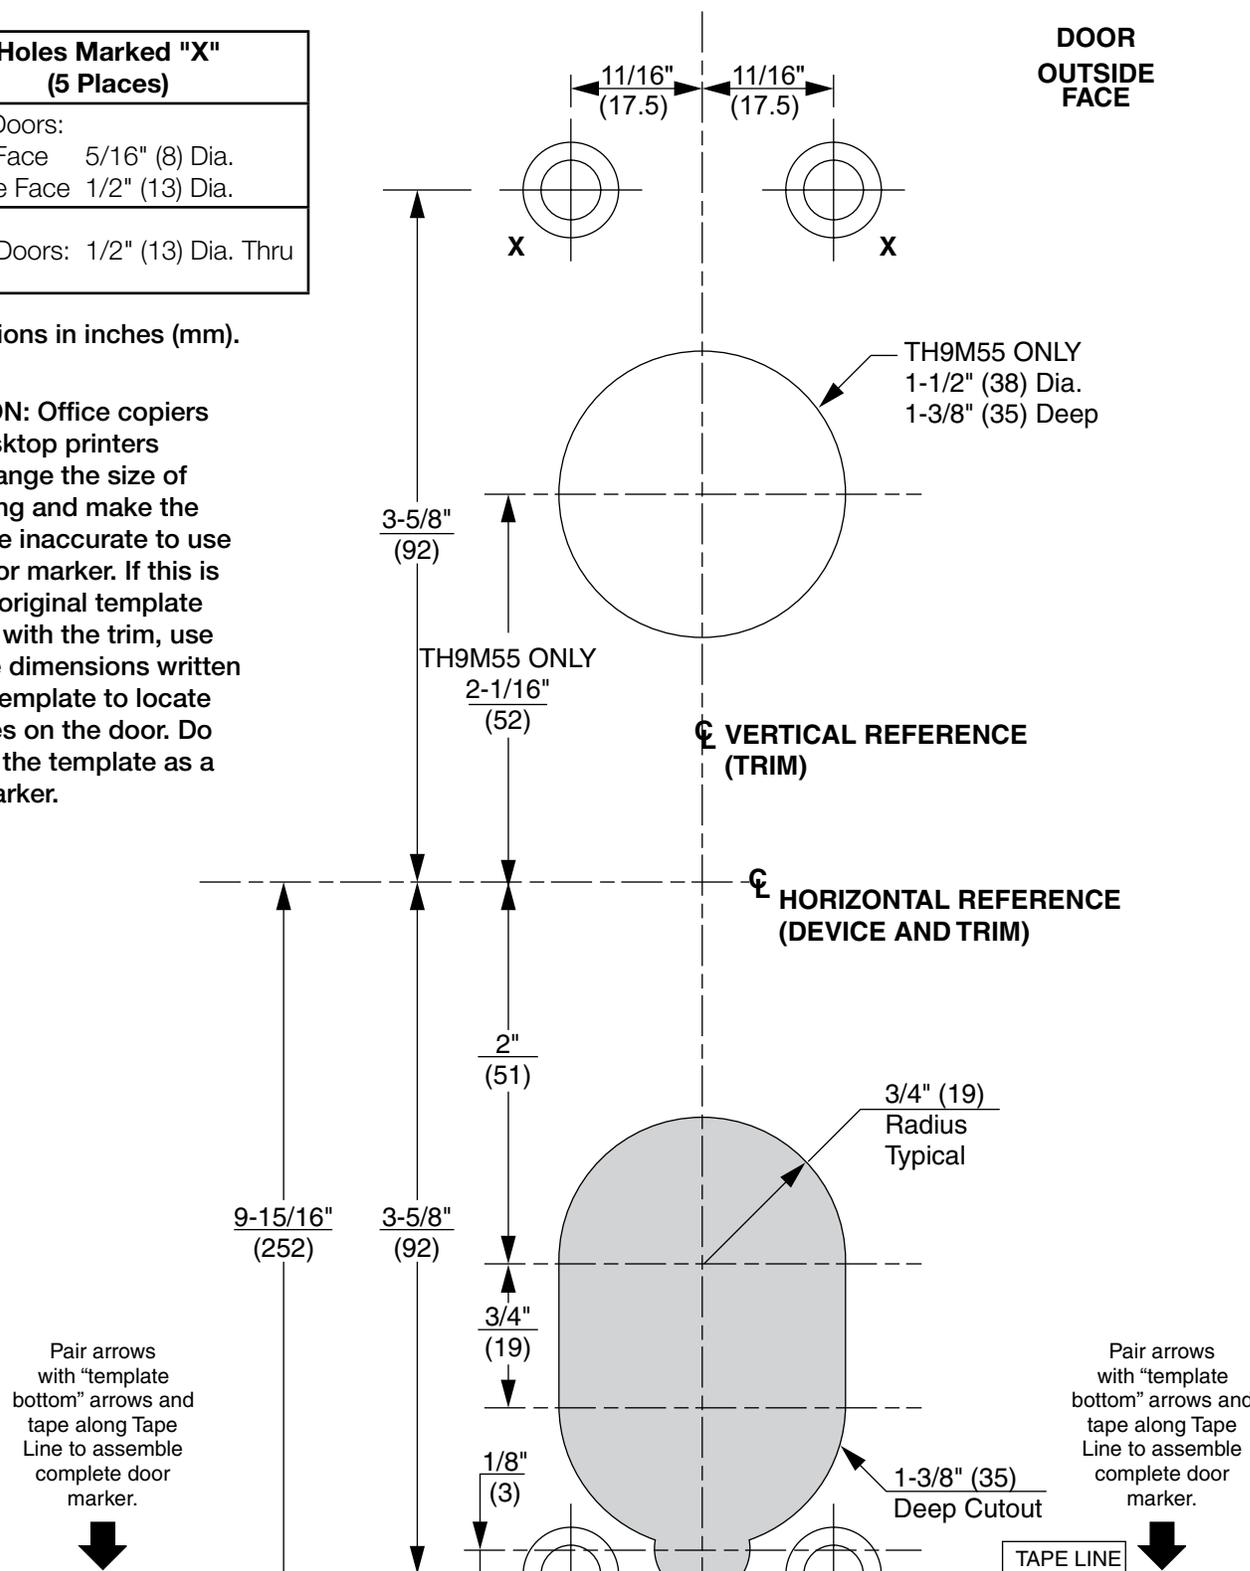

TH9M10 and TH9M55 Heavy Duty Thumbpiece Trim

For ED5000 Series Mortise Exit Device




ASSA ABLOY

Installation Instructions

2

Template Bottom

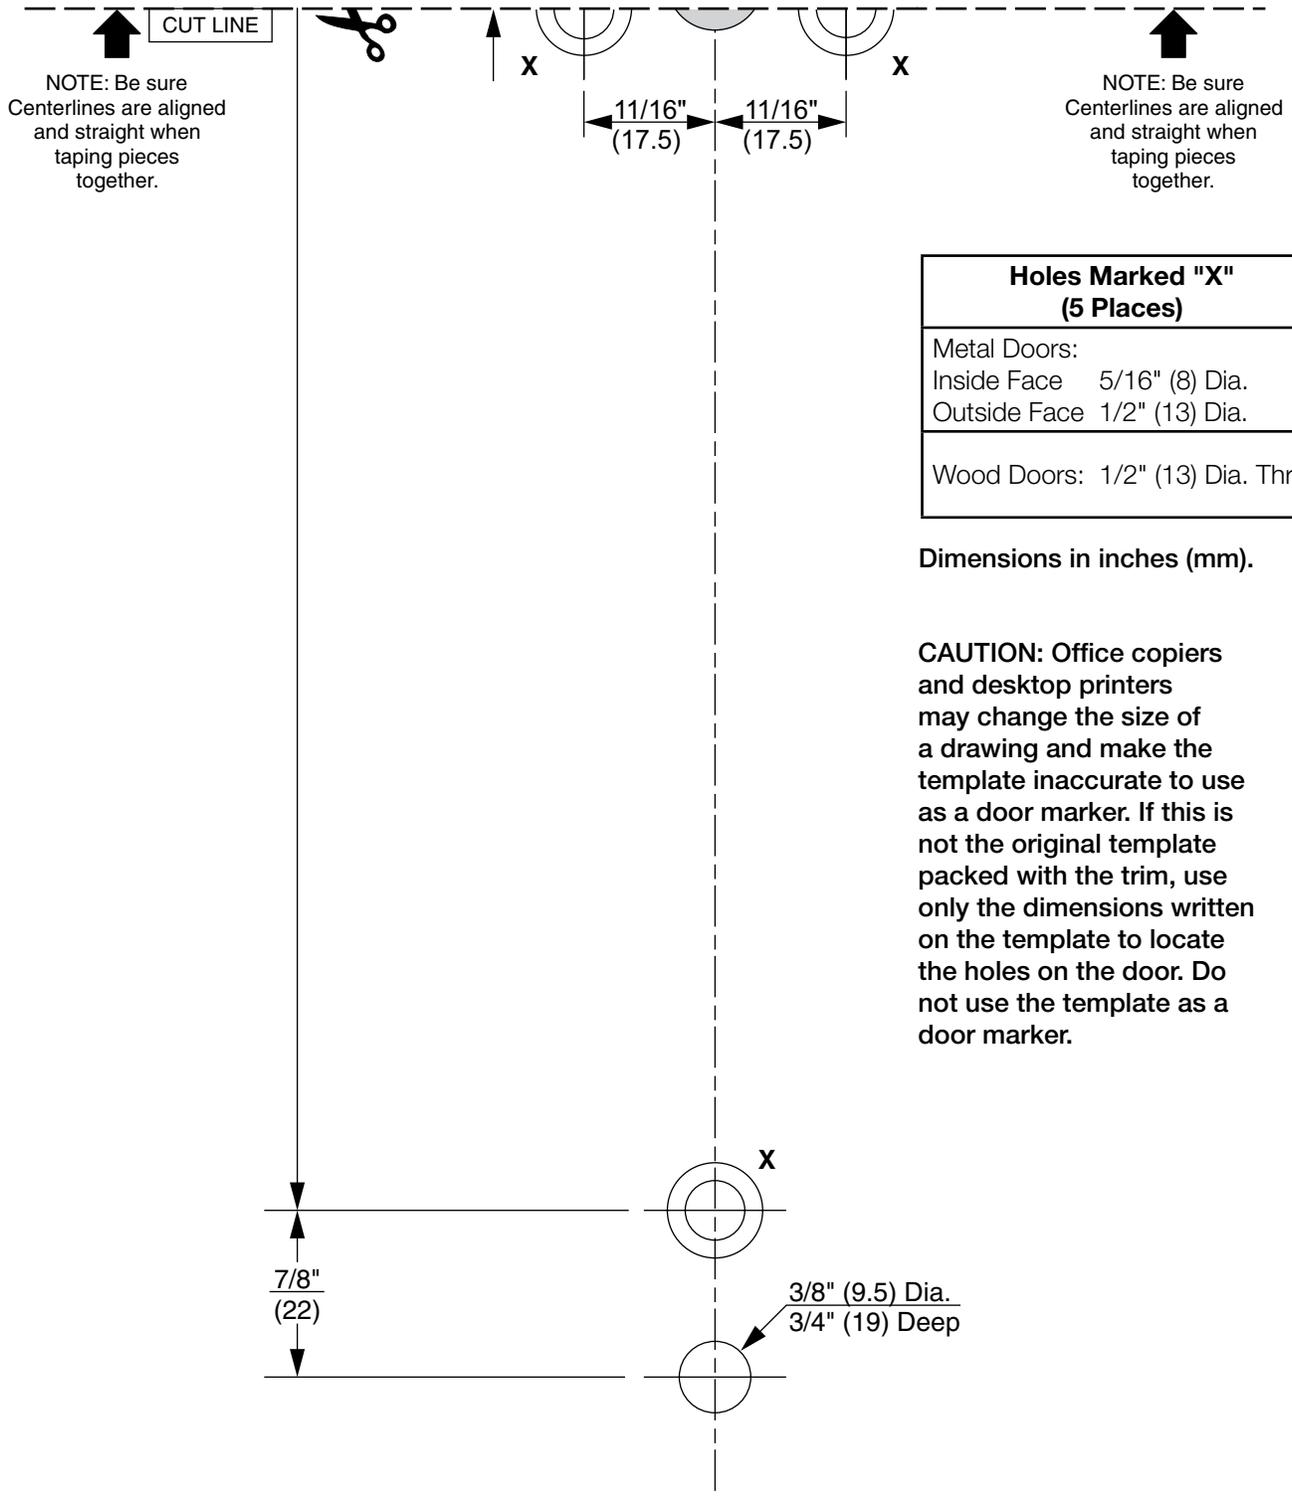

TH9M10 and TH9M55 Heavy Duty Thumbpiece Trim

For ED5600 Series Mortise Exit Device

Installation Instructions

**Corbin
Russwin**

ASSA ABLOY

3

Installation

1. Check box contents. (Figure 1)
2. After marking door inside face for device location (Device Instructions), transfer "Vertical Reference Centerline" from inside to outside door face. (Figure 2)
3. Transfer "Horizontal Reference Centerline" from inside to outside door face.
4. Align trim template and tape to outside door face. (Pages 2 and 3)
5. Spot holes and prepare door for trim.
6. Mount trim to door through holes "B". Fasten, finger tight only, with three (3) screws and washers seating on door, as shown. (Figure 3)
7. **FOR TH9M55 ONLY:**
Thread cylinder into mortise lock until seated within escutcheon recess with keyway positioned vertically and with plug in lower cylinder as shown. (Figure 3)
Tighten cylinder locking screw through mortise lock front.
8. Continue as shown in device instructions.




Figure 2

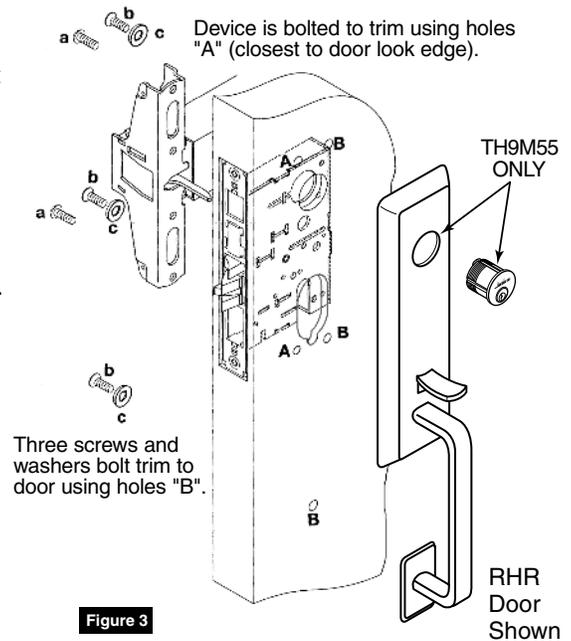


Figure 3

Corbin Russwin
225 Episcopal Road
Berlin, CT 06037
Phone: 800-543-3658
Fax: 800-447-6714
corbinrusswin.com

ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience