


Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template. Refer to device template for device mounting dimensions and locations.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate structural support to maintain door integrity during operation.
6. Shaded area represents mortise lock cavity from device template.

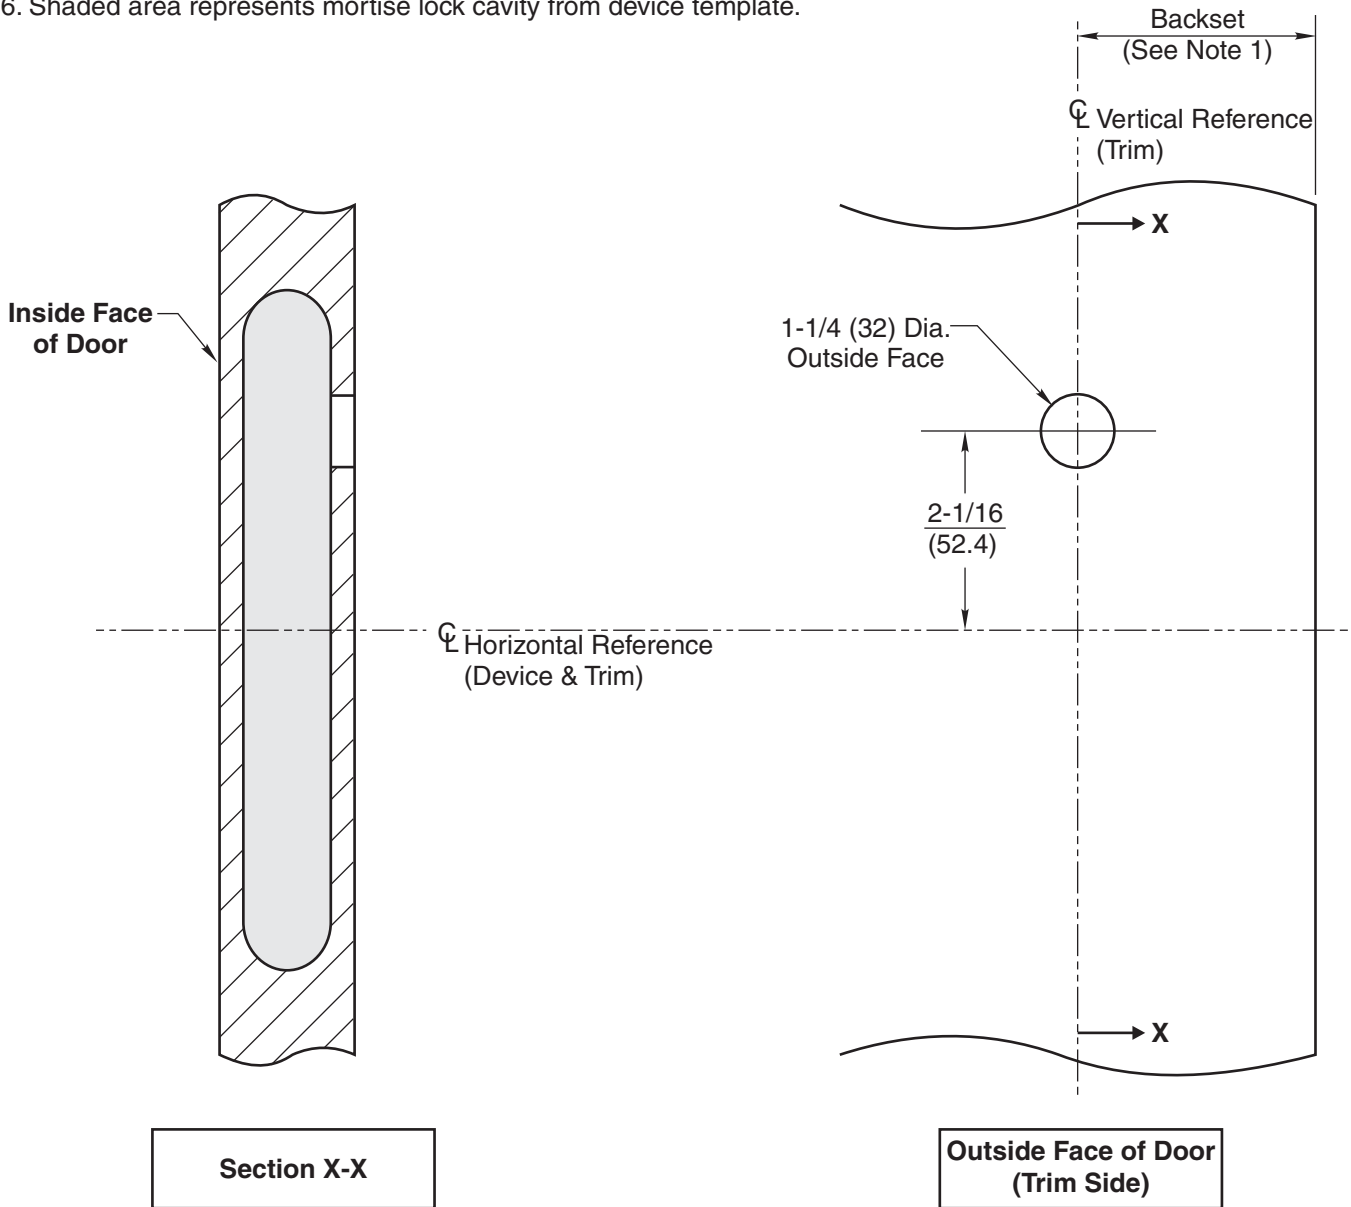

**RESPONSIBILITY**  
 DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

**K1M57 Key Only Trim  
 With ED5600(A) Series  
 Exit Mortise Devices  
 Metal, Wood or Composite Doors**

**Corbin  
 Russwin**  
**ASSA ABLOY**  
 www.corbinrusswin.com

SUPERSEDES	DO NOT SCALE DRAWING
TEMPLATE NUMBER	DATE
<b>T31190</b>	<b>04-11</b>