


Notes:

1. Refer to exit device template for location of vertical and horizontal centerline of cylinder.
2. Important: For all cutouts on inside of door refer to exit device template.

FUNCTION	HOLE NUMBER					
	1	2	3	4	5	6
*3350 (DUMMY FUNCTION)					•	•
*3310, *3355, & *33V57 (DUMMY, CLASSROOM & SVR NIGHTLATCH FUNCTION)	•	•			•	•
*3357 (NIGHTLATCH FUNCTION)			•	•	•	•
*33M57 (NIGHTLATCH FUNCTION)			•		•	•

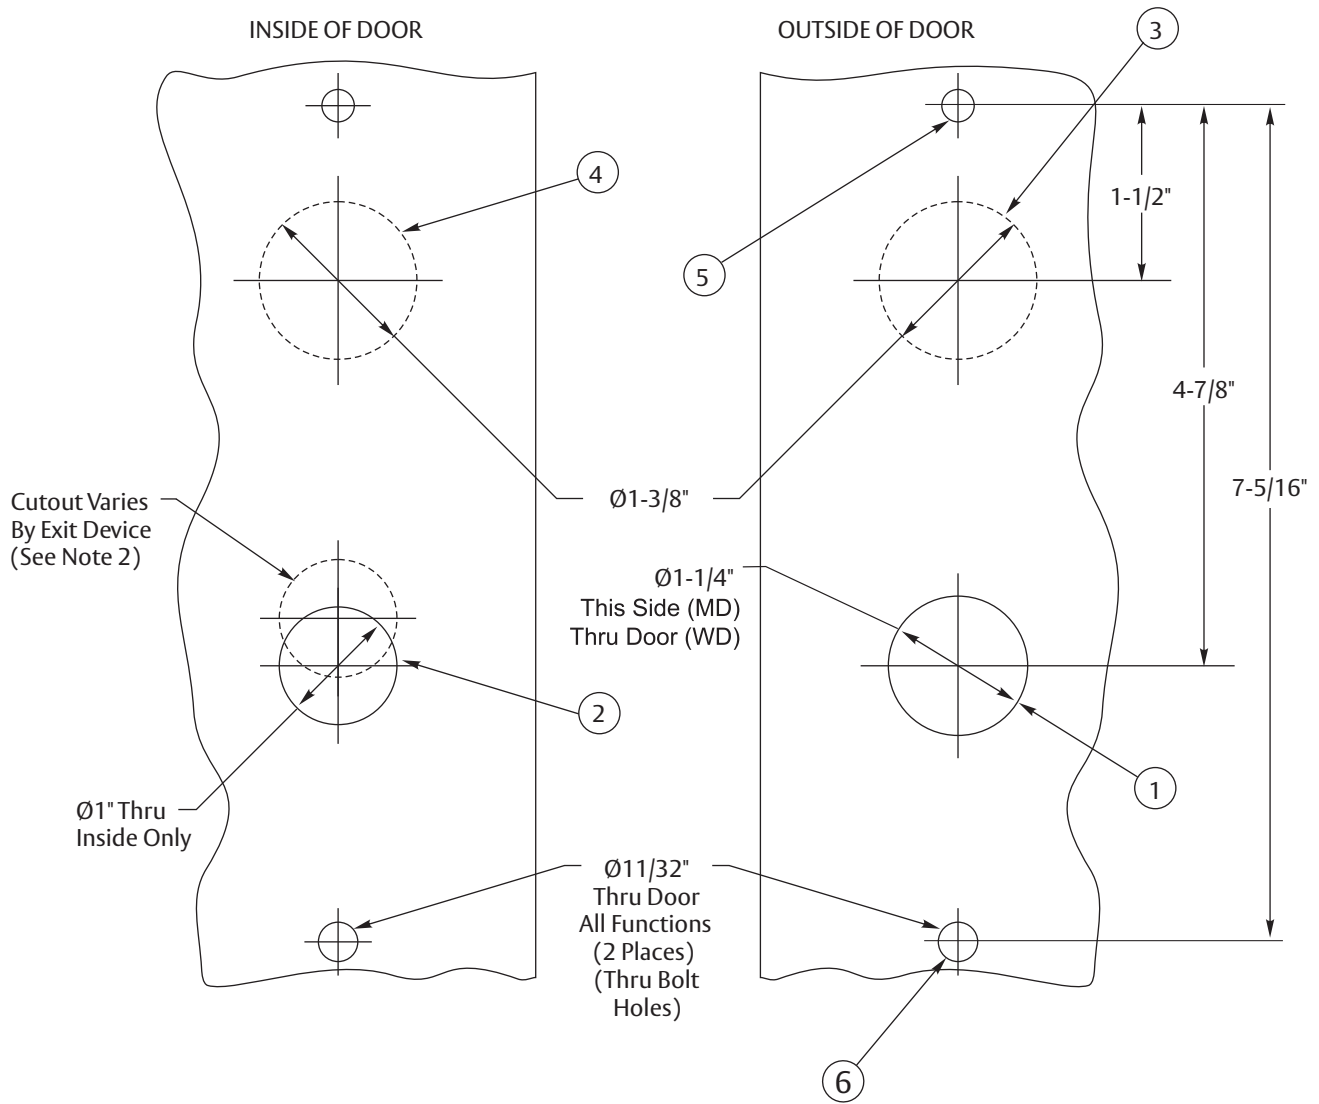

**RESPONSIBILITY**  
 DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

## ED3000 Lever Trim Metal & Wood Door



**ASSA ABLOY**  
[www.corbinrusswin.com](http://www.corbinrusswin.com)

SUPERSEDES	DO NOT SCALE DRAWING	
TEMPLATE NUMBER	T31223	DATE
		06/23