
Notes:

- 1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
- 2. Refer to respective lock series template listed in template cross reference chart for all other dimensions.
- 3. Dimensions given in inches and (mm).

)	Template Cross Reference			
	Description	Template		
	CL3100 SERIES VR LEVER LOCK	T31193		
	CL3300 SERIES CYLINDRICAL LEVER LOCK	T30684		
	CLX3300 SERIES CYLINDRICAL LEVER LOCK	T31253		
	CL33900 ELECTRIC LOCK	T30971		

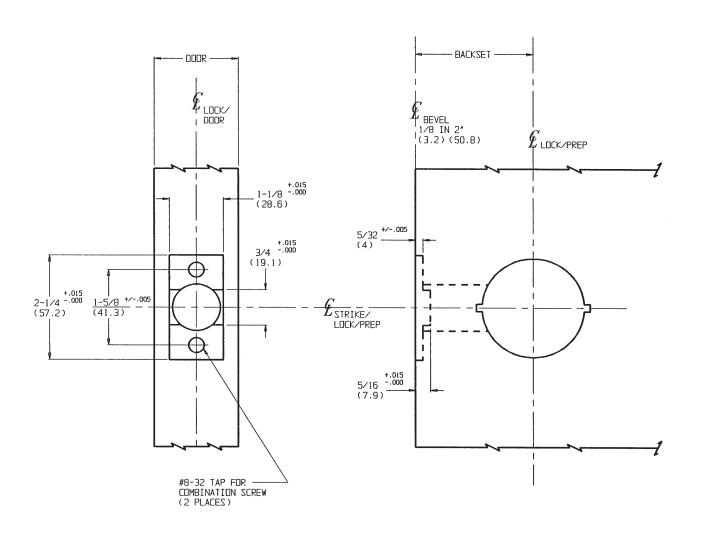

3

Tolerance Conversion	
Inches	(mm)
.005	(.127)
.015	(.381)

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

M16 3/4" Latch Assembly

ASSA ABLOY

www.corbinrusswin.com

SUPERSEDES T30528-2 DO NOT SCALE DRAWING 03/21 T30528-3