

# Installation Instructions

## Mortise Multi-Function M30 Half Trim Kit


### Tools Required

- 3/8" socket
- #2 Phillips screwdriver

### Handing Chart


(Side of lock plate should be installed based on door hand):  
RH/RHR = Case Side  
LH/LHR = Cap Side

1. Install plate on outside of lockbody. (Use chart to determine case/cap side of lock.)

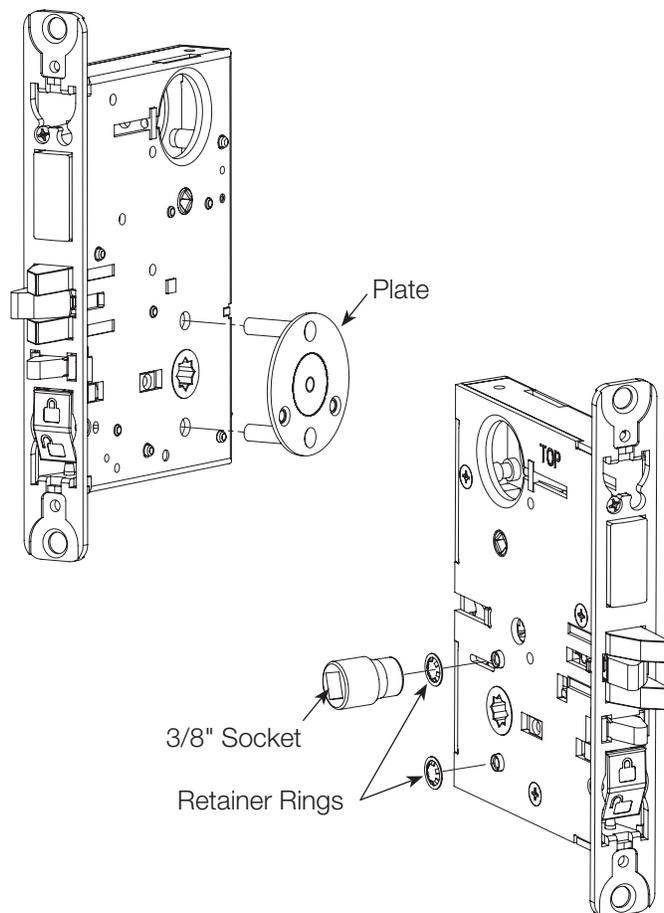

2. Install two (2) retainer rings using 3/8" socket.

3. Insert mounting screws into I/S adapter plate and thread spacers onto each screw.

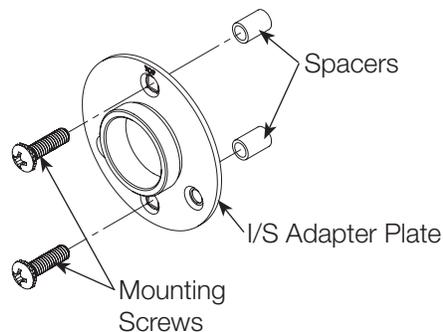

Corbin Russwin  
225 Episcopal Road  
Berlin, CT 06037  
Phone: 800-543-3658  
Fax: 800-447-6714  
corbinrusswin.com

ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience

For installation assistance contact Corbin Russwin  
1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com