


TEMPLATE CROSS REFERENCE

Description	Template
ML2000 Series Mortise Lock x Museo	T31046

②

Notes:

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Refer to appropriate mortise lock template for cylinder and turnpiece preps when required.
3. Dimensions given in inches and (mm).

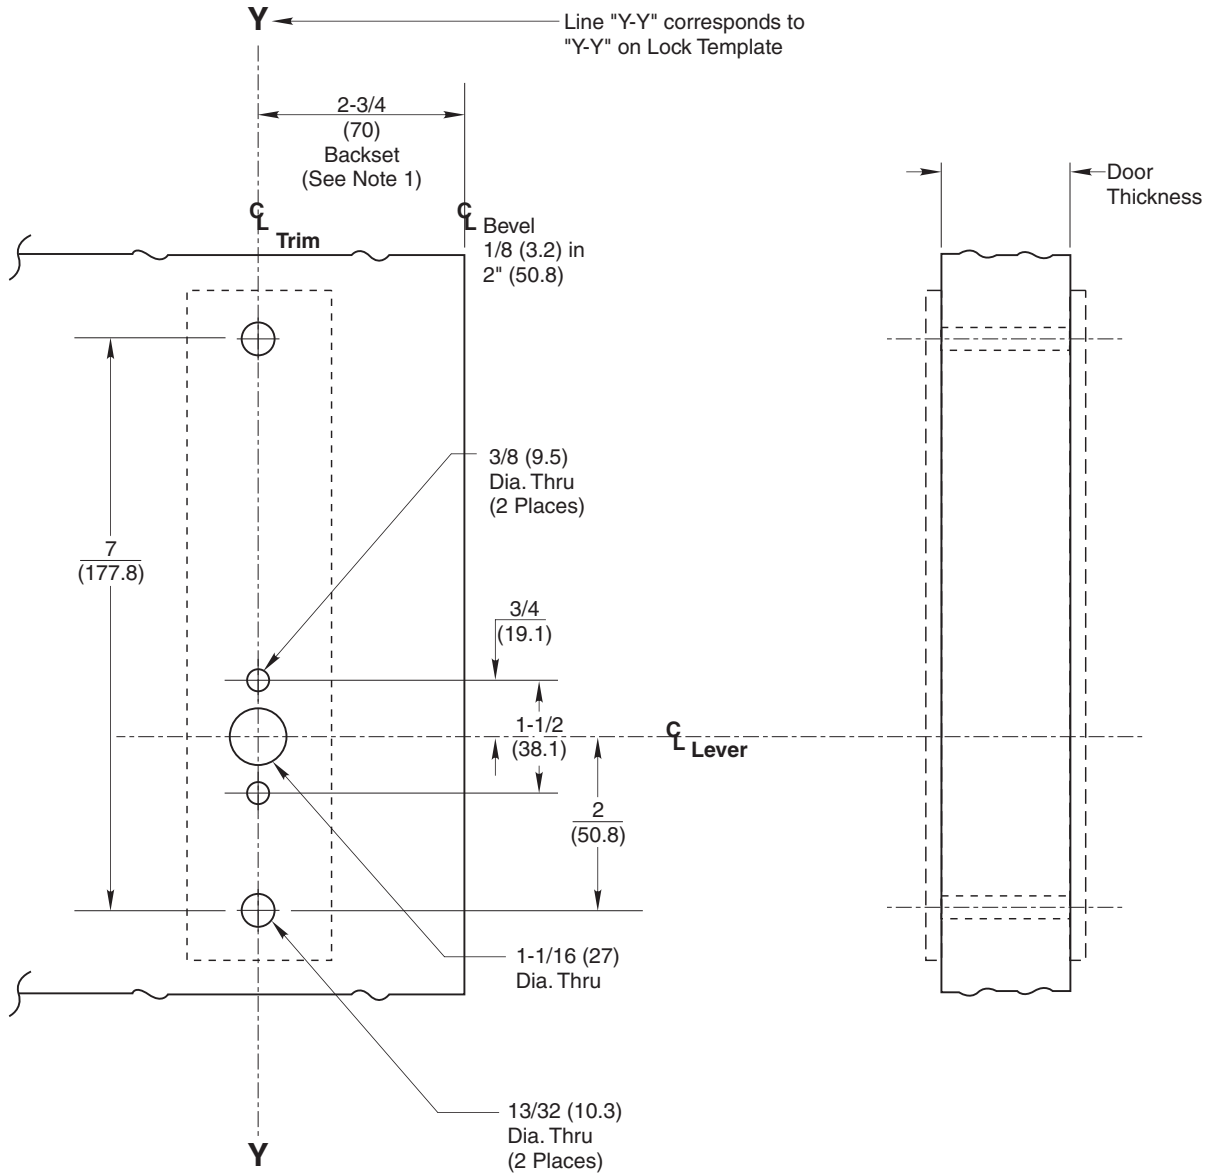

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

②

ML2000 Series  
"R" and "L" Escutcheon  
Using Museo Lever Designs

Corbin  
Russwin®

ASSA ABLOY

www.corbinrusswin.com

SUPERSEDES	T31047-1	DO NOT SCALE DRAWING
TEMPLATE NUMBER	T31047-2	DATE 07-14