


② Notes:

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Dimensions given in inches and (mm).

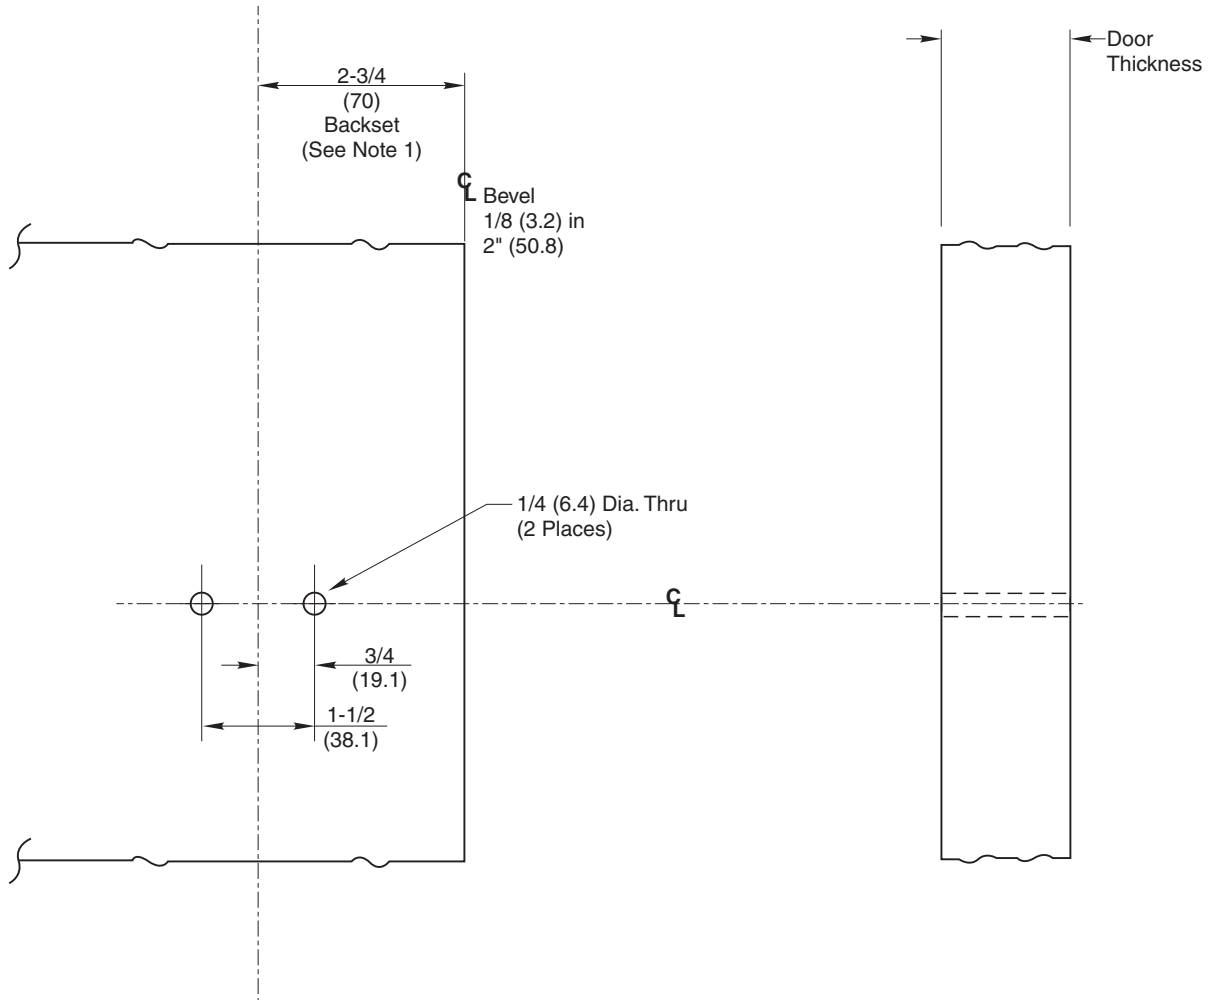

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

Museo Trim
ML2000 Series
Full & Half Dummy
Sectional
(ML2050 & ML2070)

**Corbin
Russwin**

ASSA ABLOY

www.corbinruswin.com

SUPERSEDES T31163-1 DO NOT SCALE DRAWING

TEMPLATE NUMBER T31163-2 DATE 06-17