

Occupancy Indicators

with cylinder

Mortise Lockset



! WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

1

Prep Door

1. Using door marker FM298, mark holes. (Figure 1)
2. Drill two .125" diameter holes where marked, through inside door surface. (Figure 2)

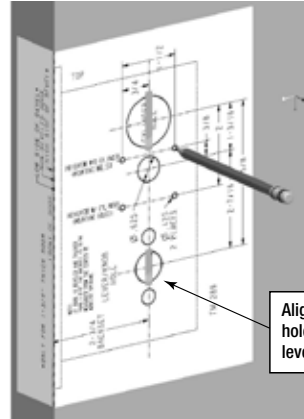


Figure 1



Figure 2

2

Install Lock and Indicator

1. Install lock.
2. Screw indicator onto door. (Figure 3)

NOTE: When installing, make sure lock is unlocked, deadbolt is retracted and indicator shows green window (unsecure / vacant). (Figure 4)

NOTE: For doors 2-1/2" or over, use chart to cut indicator spindle. (Figure 5)



Figure 3

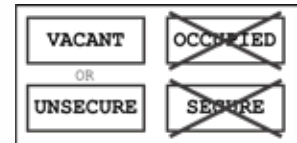


Figure 4

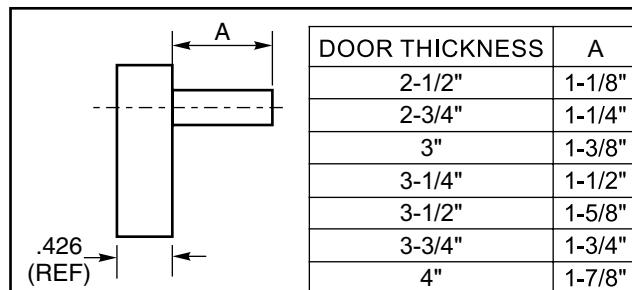


Figure 5

Corbin Russwin
225 Episcopal Road
Berlin, CT 06037
Phone: 800-543-3658
Fax: 800-447-6714
corbinrusswin.com

ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience