
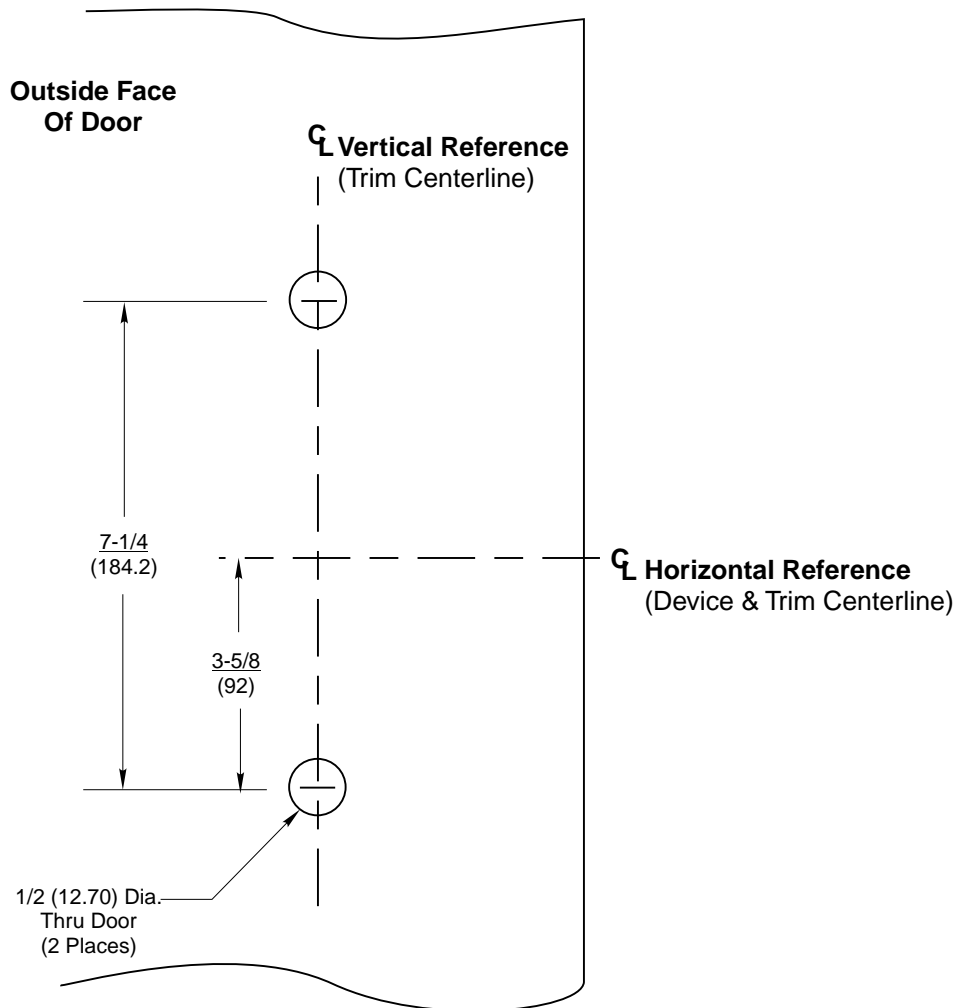


Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Prepare mounting holes when installing trim.

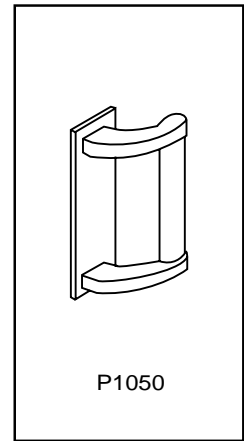

P1050 Narrow Escutcheon Trim
With ED4200, ED4400 or ED4800 Series
Rim and Vertical Rod Exit Devices
Wood or Composite Door Preparation

**Corbin
Russwin**®
www.corbinrusswin.com

SUPERSEDES

DO NOT SCALE DRAWING

TEMPLATE NUMBER

T30937

DATE **9-99**