
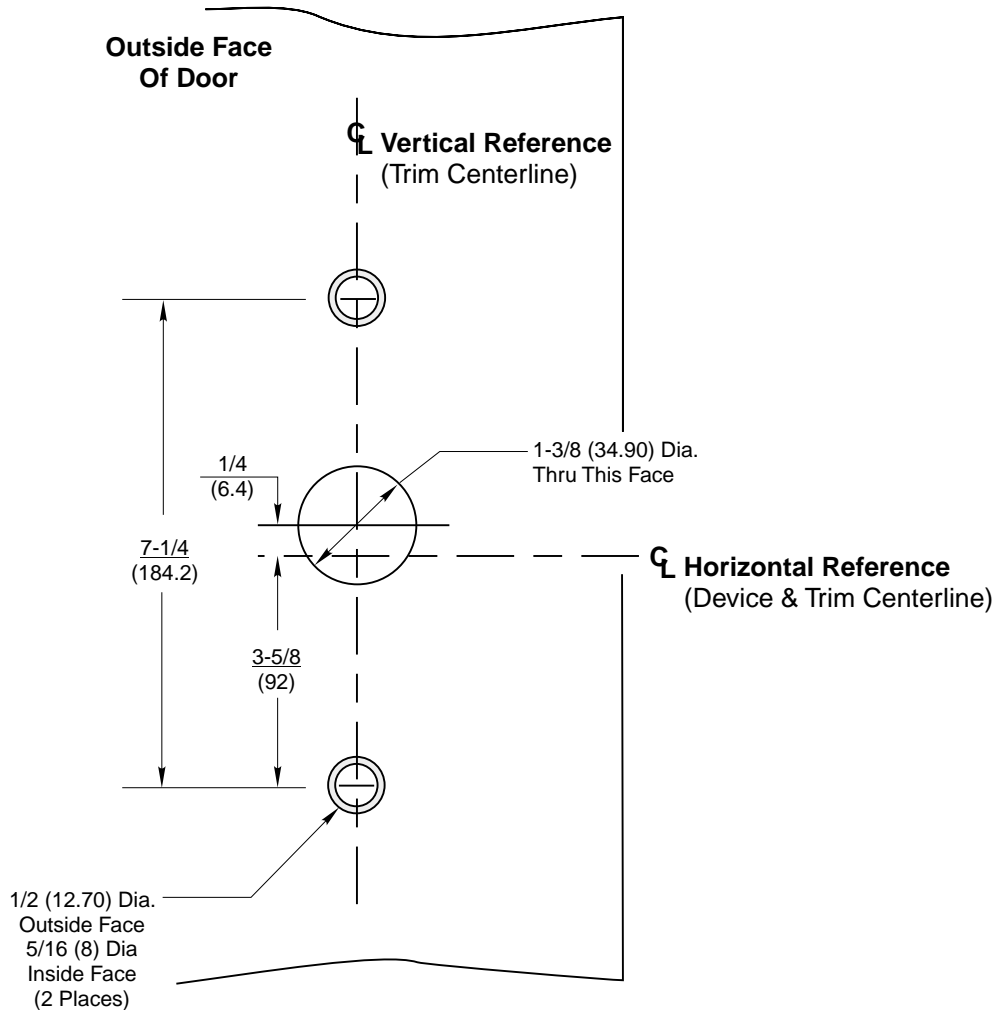


Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. For door reinforcement see template T30800.
6. Prepare mounting holes when installing trim.
7. Provide adequate internal support to prevent door deformation after trim is bolted to the device.

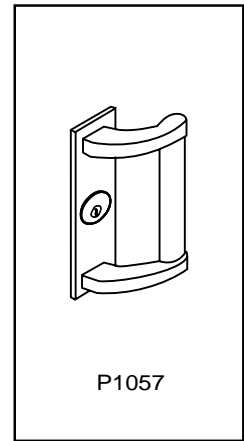

P1057 Narrow Escutcheon Trim
With ED4200, ED4400 or ED4800 Series
Rim and Vertical Rod Exit Devices
Metal Door Preparation

**Corbin
Russwin**[®]
www.corbinrusswin.com

SUPERSEDES

DO NOT SCALE DRAWING

TEMPLATE NUMBER

T30938

DATE

9-99