
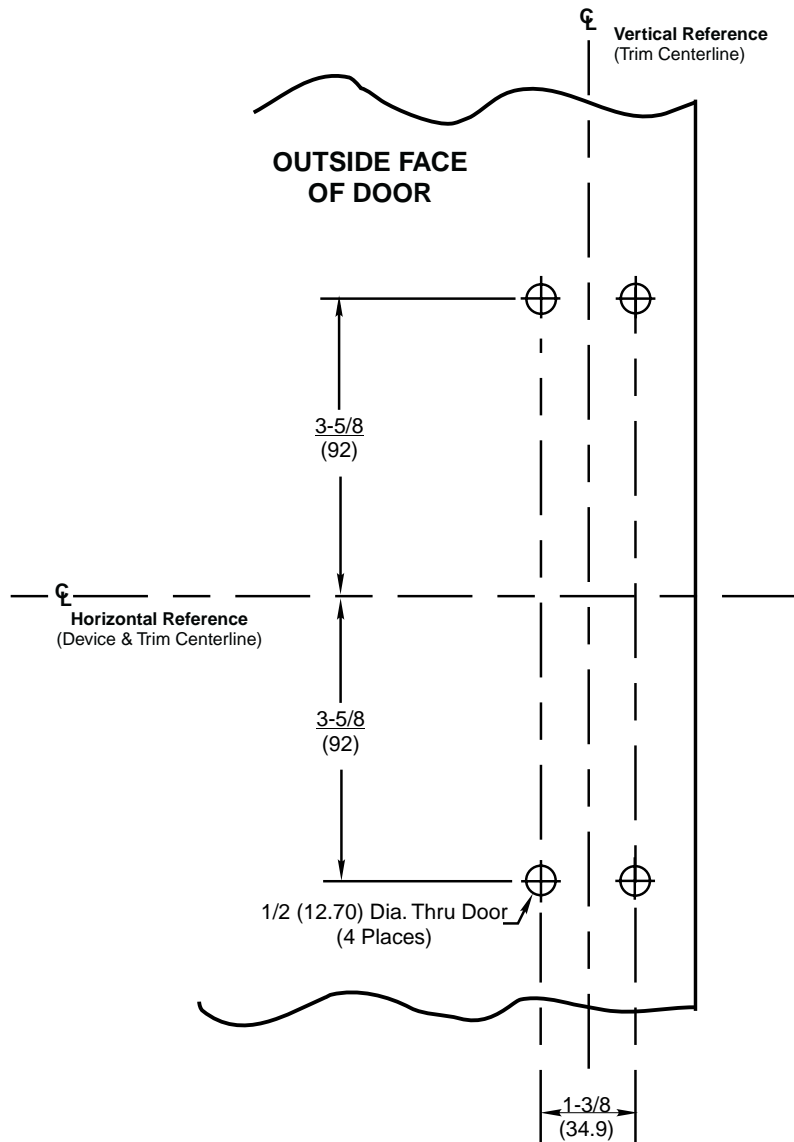


**Notes:**

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Prepare mounting holes when installing trim.

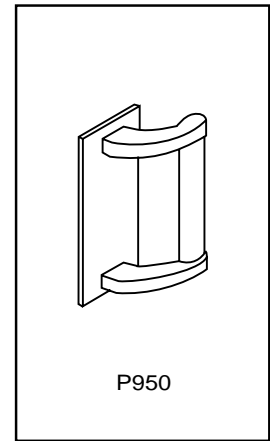

**P950 Trim**  
With ED5200, ED5400 or ED5800 Series  
Rim and Vertical Rod Exit Devices  
**Wood or Composite Door Preparation**

**Corbin  
Russwin**®  
www.corbinrusswin.com

SUPERSEDES

DO NOT SCALE DRAWING

TEMPLATE NUMBER

**T30933**

DATE **9-99**