
Installation Instructions



Auxiliary Control with Concealed Vertical Rod Exit Devices PED159, PED155, PED159WD & PED155WD

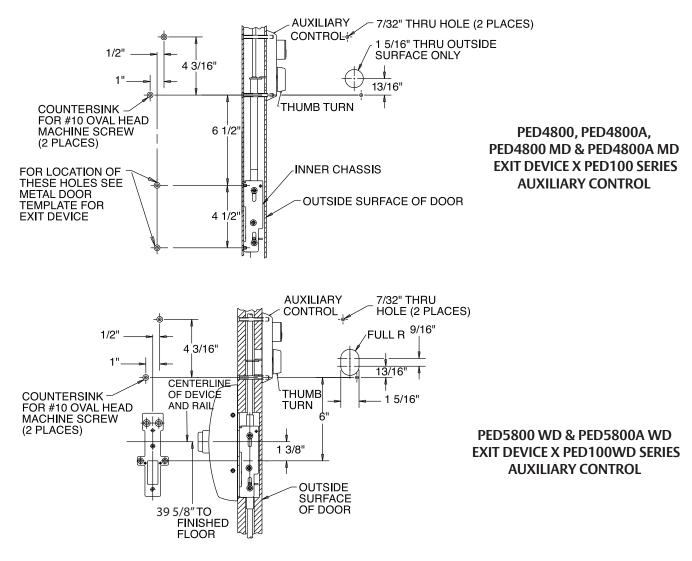

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www. P65warnings.ca.gov.

For installation assistance contact Corbin Russwin 1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Attention Installer: Improper installation may result in damage to the product and void the factory warranty.

FM586 01/23

Experience a safer and more open world

PED159, PED155, PED159WD & PED155WD

Installation Instructions

Russwin 2 ASSA ABLOY




Using the exit device instructions, prepare the door for the exit device.

2

Prepare the door for auxiliary control as illustrated on page 1.

3

For wood doors, follow steps to install the auxiliary control bracket.

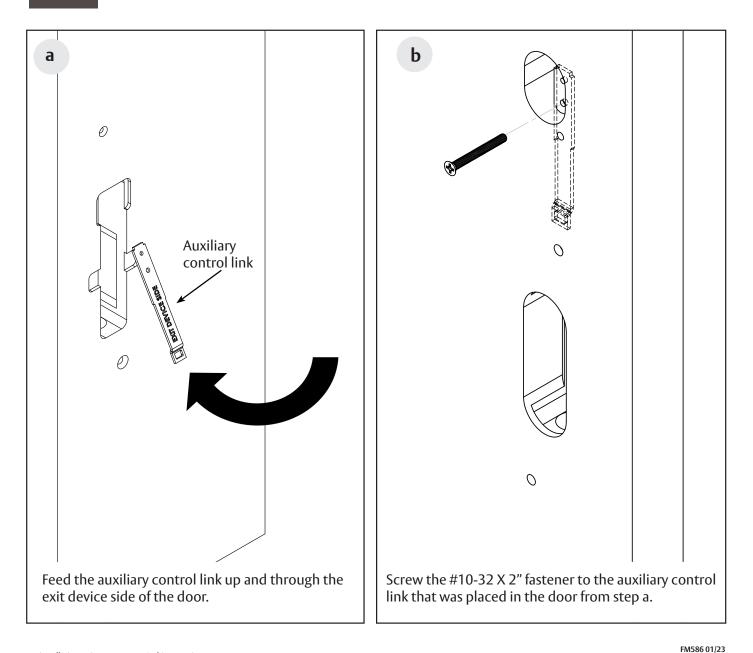

2


Experience a safer and more open world


d

PED159, PED155, PED159WD & PED155WD

Installation Instructions



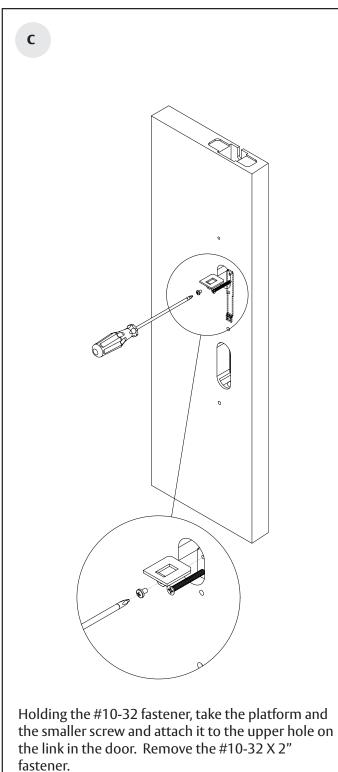

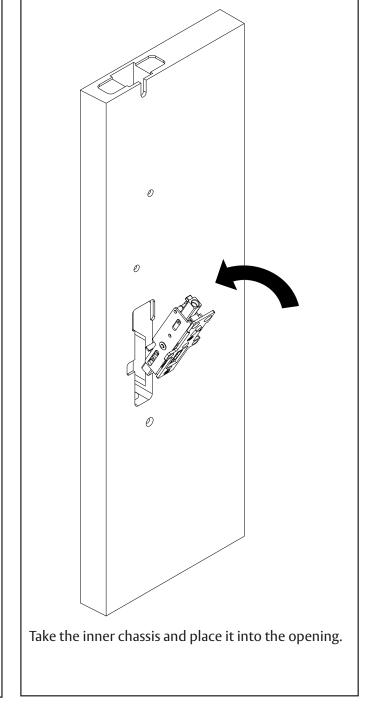


Experience a safer and more open world

PED159, PED155, PED159WD & PED155WD

Installation Instructions

e

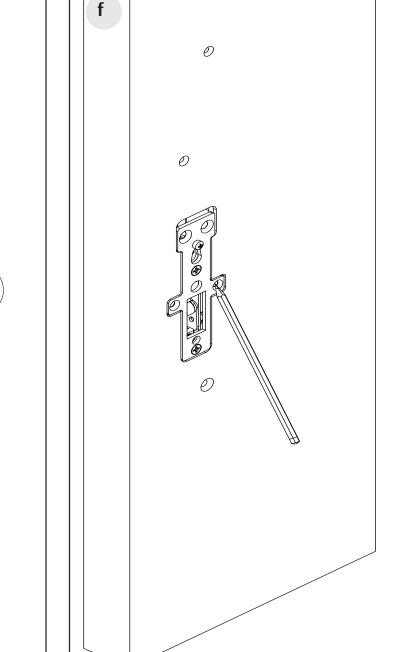

Mark the inner chassis mounting holes.

Hook the inner chassis into the link.

Copyright © 2023, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.




ASSA ABLOY

PED159, PED155, PED159WD & PED155WD

Installation Instructions



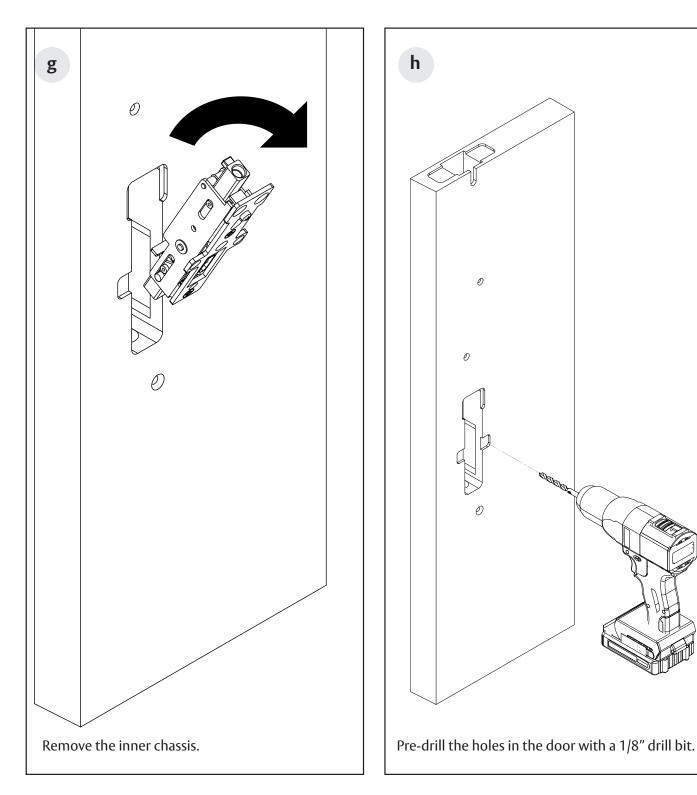


CopyingIt © 2023, ASSA ABLOY ACCESS and Egress Hardware Group, inc. All ngitts reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Experience a safer and more open world


PED159, PED155, PED159WD & PED155WD

Installation Instructions



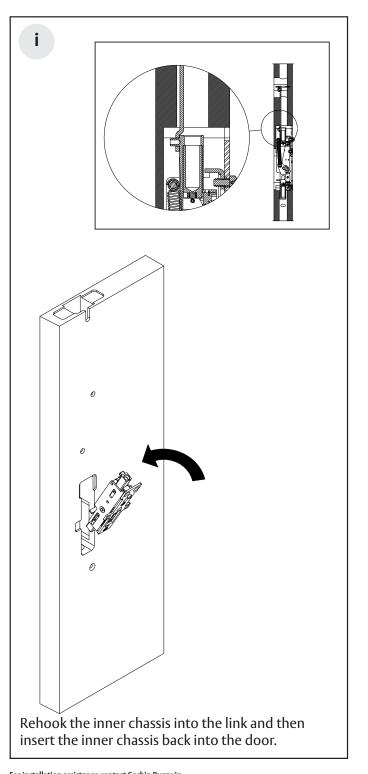



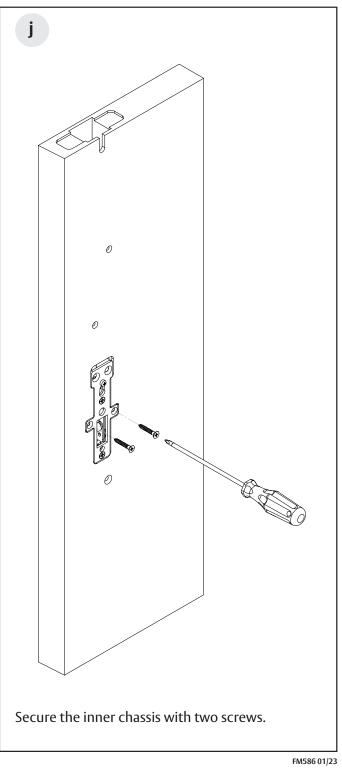


6

PED159, PED155, PED159WD & PED155WD

Installation Instructions



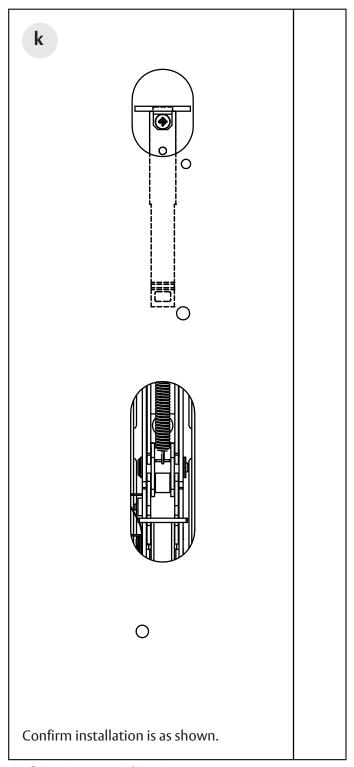

For installation assistance contact Corbin Russwin 1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com


Copyright © 2023, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Experience a safer and more open world

FM586 01/23



Using exit device instructions, mount exit device to the door.

Mount auxiliary control to door.

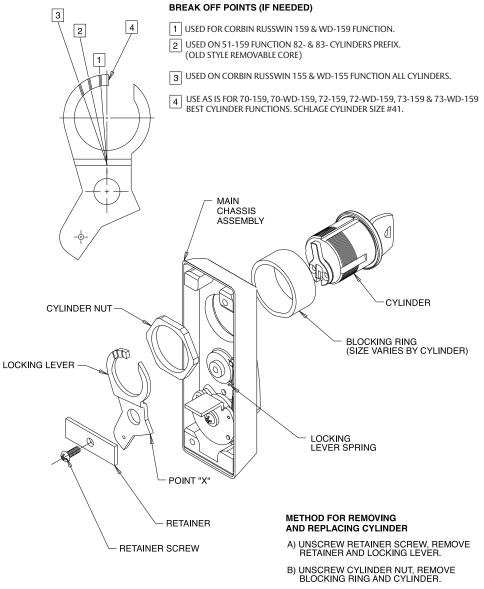

C) REPLACE CYLINDER BY REVERSING PROCEDURES ABOVE. MAKE SURE THAT CYLINDER CAM FACES UP AND THAT LOCKING LEVER SPRING ENGAGES LOCKING LEVER AT POINT "X".

For installation assistance contact Corbin Russwin 1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

FM586 01/23

Experience a safer and more open world

4