


WOOD DOOR

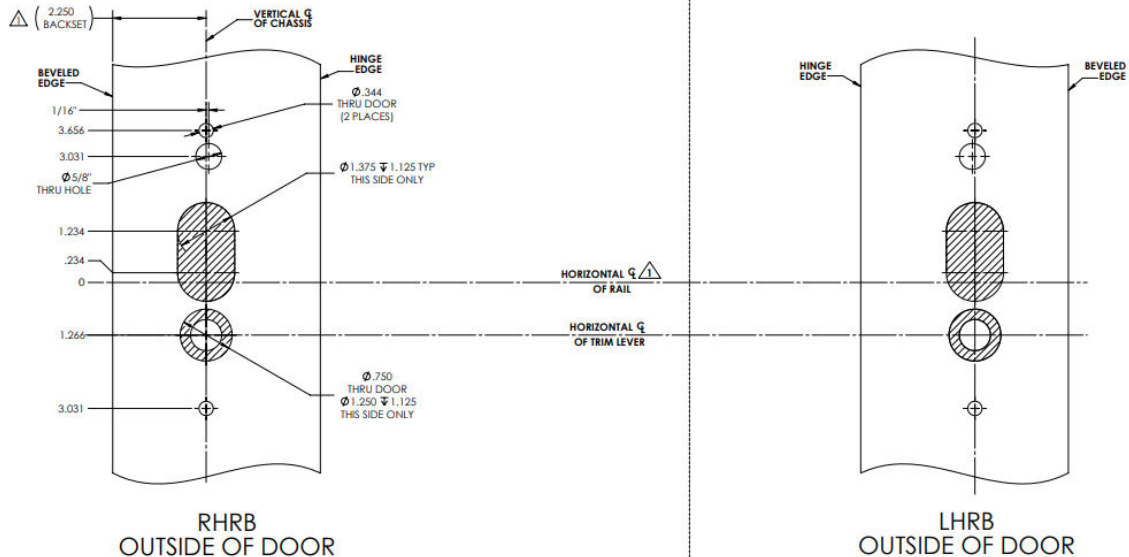

NOTES:

1. FOR LOCATION OF VERTICAL CENTERLINES, HORIZONTAL CENTERLINES AND ALL ADDITIONAL EXIT DEVICES PREP. REFER TO APPROPRIATE EXIT DEVICE TEMPLATE.
2. SUITABLE REINFORCEMENT REQUIRED FOR METAL DOORS.
3. BEVEL REQUIRED (NOT SHOWN), PREP TO ANSI A115 SPECIFICATIONS.
4. TOLERANCE ALL DIMENSIONS ± 0.15 .
5. FOR TRIM DIMENSIONS OR METAL DOOR PREP SEE SHEET 1.

| | | |
|---|--|-------------------------|
| ASSAULT Exit Hardware | | RELEASE DATE 5/16/22 |
| DOOR HINGE TEMPLATE, LEVER MOUNTING, & ESCAPE EXIT TRIM CONTROL FOR USE WITH NARROW STYLE RIM TYPE EXIT DEVICES | | REPLICATE NO. MED141 |
| METAL DOOR (SHEET 2 OF 2) | | |