



DOOR TO DOOR

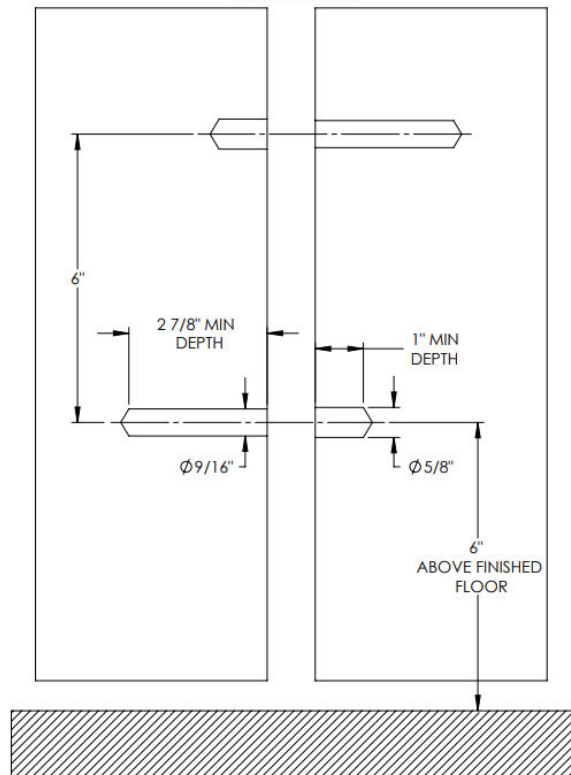

DOOR TO FLOOR

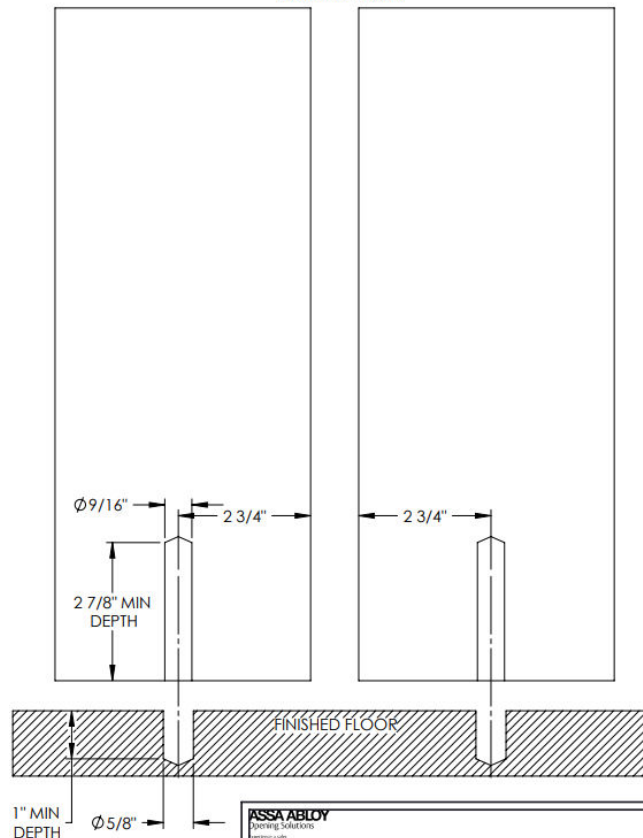

NOTES:

1. **CONSULT DOOR MANUFACTURE FOR PROPER THERMAL PIN ORIENTATION!**
2. THERMAL PIN TO BE CENTERED IN DOOR THICKNESS.
3. GAP BETWEEN THERMAL PIN AND RECEIVING HOLE MAX 1/2" INCH
4. 20 MIN LISTED DOORS DO NOT REQUIRE THERMAL PINS
5. DOORS WITH GP BLUE CORE DO NOT REQUIRE THERMAL PINS
6. HANG THE DOORS PER THE MANUFACTURES INSTRUCTIONS. THE DOORS SHOULD BE SQUARE AND PLUMB AND HAVE THE CORRECT GAPS BETWEEN THE DOORS AND FINISHED FLOOR.

ASSA ABLOY
Spring Solutions

METAL AND WOOD DOOR
MANUFACTURERS TEMPLATE
APPLICATION OF THERMAL PINS

RELEASE DATE
04/20/22
TEMPLATE NO.
MEDT28