

Positive Pull Stop Retrofit Kit Used with HPSK Mortise and HP3000 Tubular Locks

HPSK Mortise Lock Shown

Step 1: Remove the cover and the paddle on the pull side of the door.

Step 2: Remove both surface mount screws from pull side of door.



Step 3: Place the paddle stop so that larger side is underneath the paddle.

Step 4: Re-install both surface mount screws.

Step 5: Re-Install paddle.

Step 6: Check to make sure the paddle retracts the latch when pushed, but not when pulled.

Step 7: Re-Install the cover.

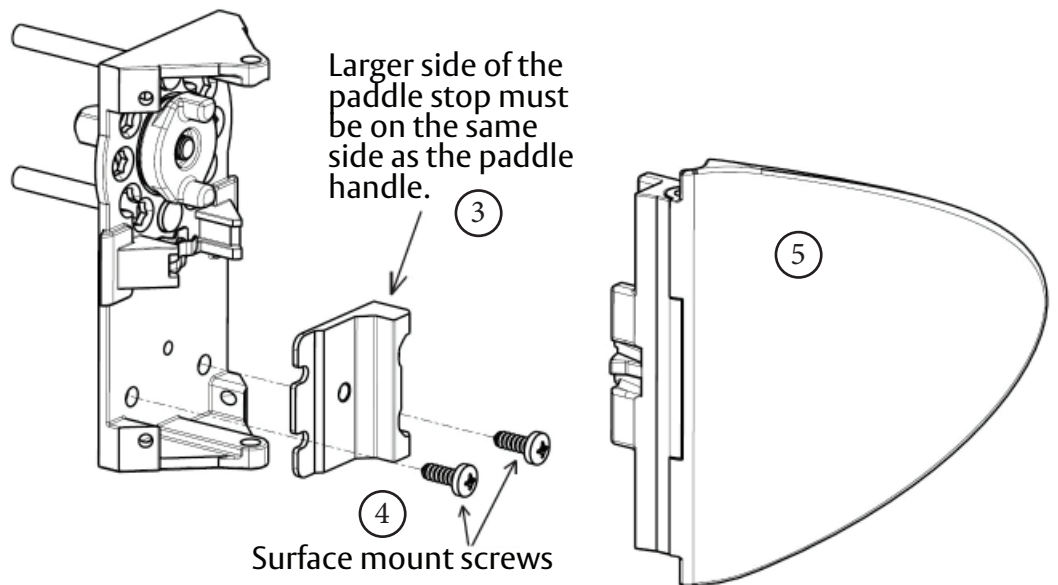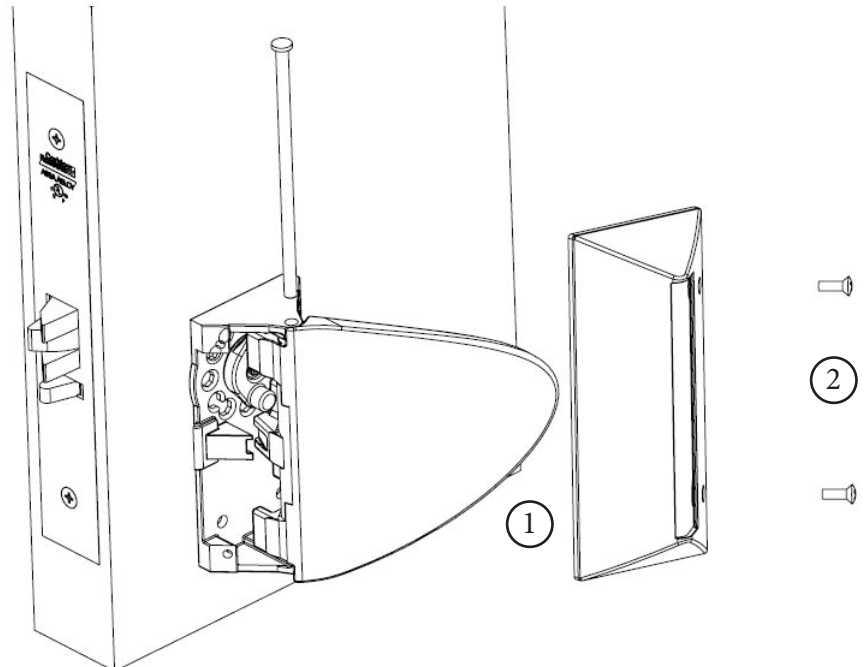

WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.