

Installation Instructions



ED3200A Series Rim Type Exit Device

ASSA ABLOY

In U.S.:
Corbin Russwin, Inc.
225 Episcopal Road
Berlin, CT 06037 USA
www.corbinrusswin.com

In Canada:
ASSA ABLOY Door Security Solutions Canada
160 Four Valley Drive
Vaughan, Ontario, Canada L4K4T9
www.assaabloy.ca


Technical Product Support: Phone: 888-607-5703

FM368 (05/14)

TYPES OF INSTALLATION		IDENTIFICATION OF PARTS
<p>Single Door</p> <p>Vertical Centerline of Active Case</p> <p>2-1/4"</p> <p>RIM STRIKE</p>	<p>Double Doors With 908A Mullion</p> <p>Vertical Centerline of Active Case</p> <p>2-1/4"</p> <p>Install Mullion Before Installing Exit Device</p> <p>USE RIM STRIKE</p>	<p>Inactive Case Cover</p> <p>Inactive Case Chassis</p> <p>Active Case Chassis</p> <p>Active Case Cover</p> <p>Cross Bar</p> <p>Cover Mounting Screws</p>


1. Place Template & Drill Holes

- A** Mark vertical centerline on door according to type of installation and strike used. See illustrations above.

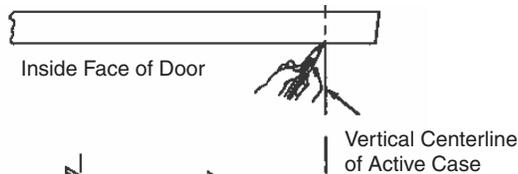


- B** Locate and place templates as follows:
1. Locate and stick active case template on door.
 2. Using cross bar hole centers for measuring, locate vertical centerline of inactive case. (See dimensions on template to obtain correct height from finished floor.)

Obtain Dimension To Finished Floor From Template

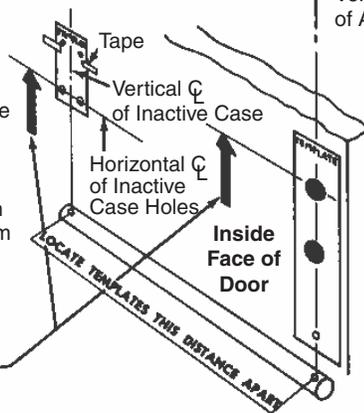

- C** Drill and cut holes as directed on template.

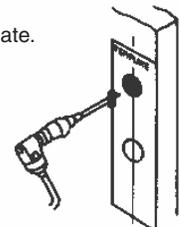


2. Mount Chassis

Remove cover from active case chassis and mount chassis to door.

Note: To remove or install active case cover, depress latch bolt, cover may now be removed or installed.


ED3200A Series Rim Type Exit Device

3. Attach Outside Trim (When Used)

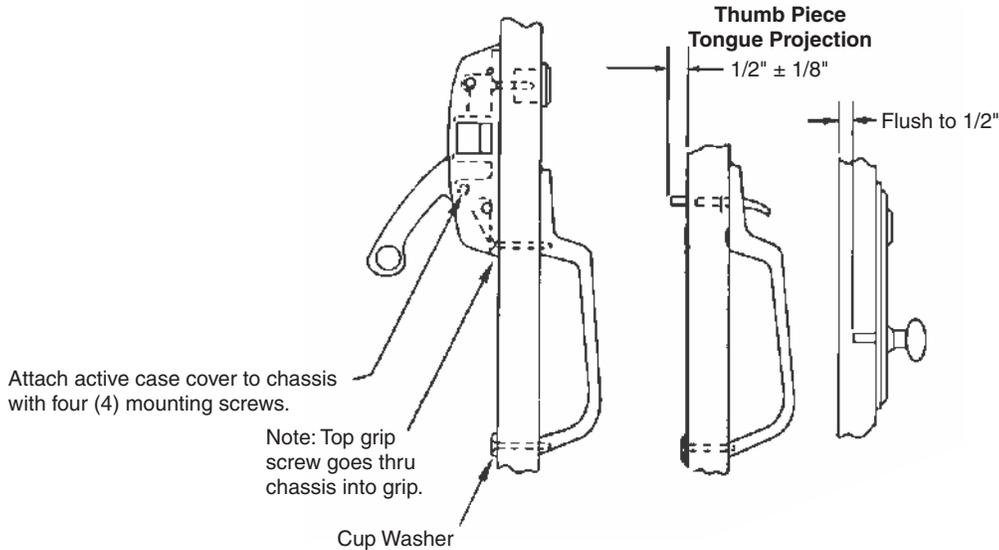

4. Attach Inactive Case Chassis & Cover, Cross Bar, & Strike

1. Mount inactive case chassis on door and attach cover to chassis.

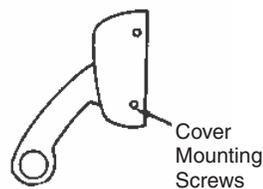

5. Attach Cross Bar & Strike

1. Assemble and secure cross bar to arms.
2. Mount strike in central position to allow for future adjustment.

