


TEMPLATE CROSS REFERENCE

DESCRIPTION	TEMPLATE
DL3800 Series Cylindrical Deadlock	T30560
DL2100 Series Cylindrical Deadlock	T30686

CAUTION: DOOR AND FRAME MANUFACTURERS

When door gasketing or silencers are used, proper allowances must be made for strike location to maintain a common centerline with lock door as shown so that bolt will freely enter strike.

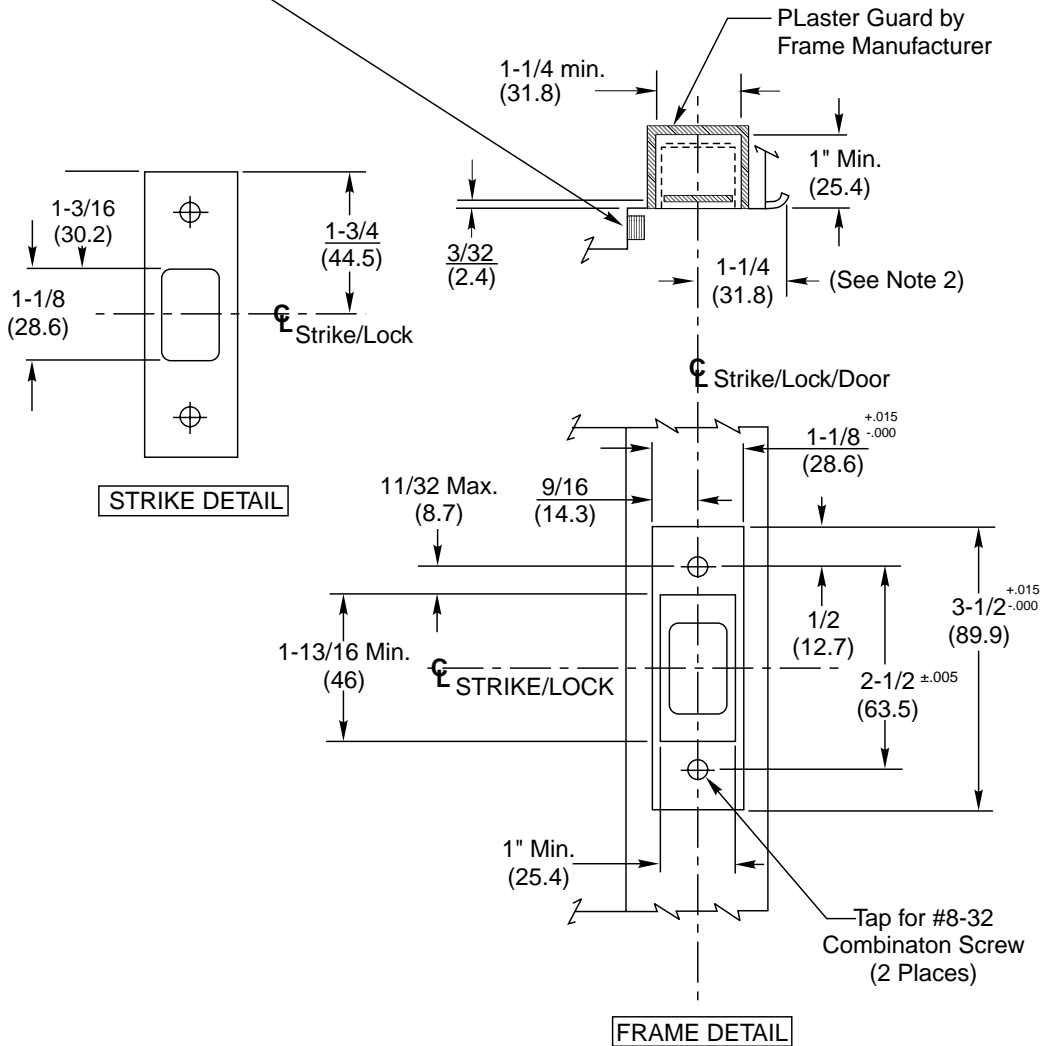

Notes:

1. Frame prep meets ANSI standards A115.5 for steel doors and A115.WB for Wood Doors
2. Dimensions given in inches and (mm)

Tolerances	
Inches	(mm)
.005	(.127)
.015	(.381)

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

SD001
394F19
(Strike)



www.corbinrusswin.com

Do Not Scale Drawing

Supersedes	T30540	Dr.	App.
Date	9-04	Template Number	T30540-1