


Notes:

1. Dimensions given in inches and (mm).
2. Refer to template of specific mortise lock series for all other door prep specifications.
3. Cutout dimensions marked (*) to be 1/2 (12.7) deep minimum.

TEMPLATE CROSS REFERENCE	
Description	Template
ML2000, ML2200 Series Mortise Lock	T30600
ML2000HS, ML2200HS Series Mortise Lock	T30604
ML2000, ML2200 Series Mortise Lock (MR)	T30605
ML2000, ML2200 Series Mortise Lock (HT)	T30607

**RH SHOWN
LH OPPOSITE**

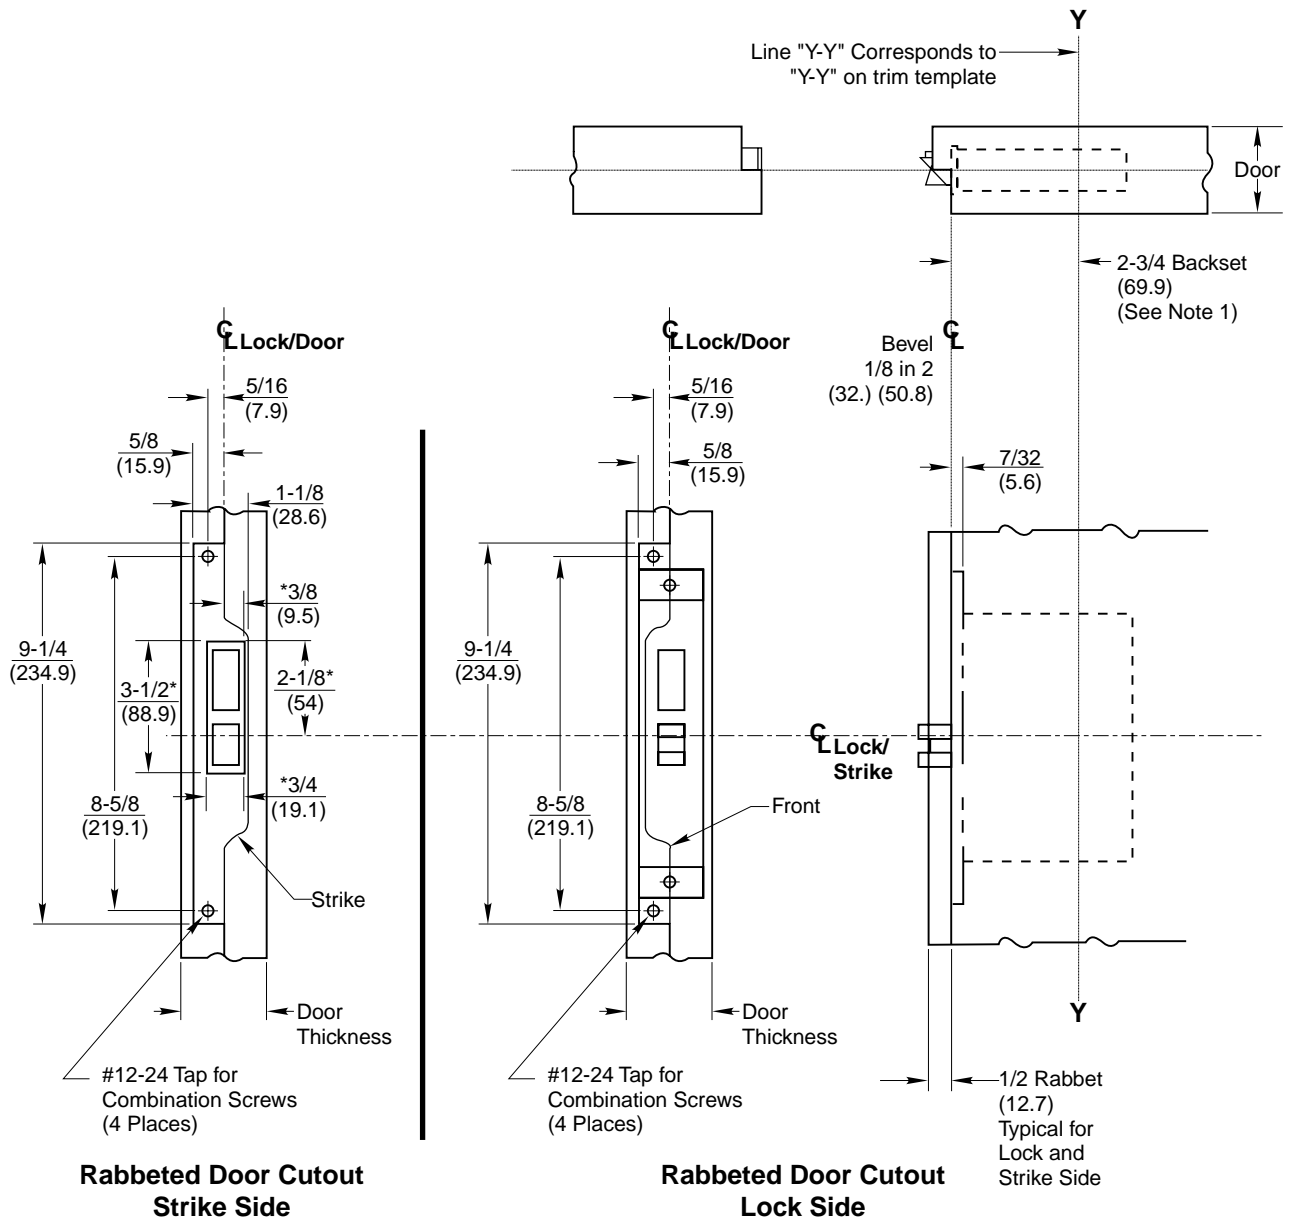

**Rabbeted Door Cutout
Strike Side**

**Rabbeted Door Cutout
Lock Side**

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

SR118

**Rabbeted Front and Strike
for Mortise Locks**



www.corbinrusswin.com

Do Not Scale Drawing

Supersedes T30641	Dr.	App.
Date 8-99	Template Number	T30641-1