


NOTES:

1. BACKSET IS MEASURED FROM CENTERLINE OF BEVEL WHICH IS CENTERPOINT OF DOOR THICKNESS.
2. DIMENSIONS GIVEN IN INCHES AND (MM).
3. REFER TO CHART FOR SPECIAL HOLES REQUIRED BY TRIM FUNCTION.

TEMPLATE CROSS REFERENCE	
DESCRIPTION	TEMPLATE
E07600 SERIES MORTISE DEVICE	T30578
MLE08, MLE09 MORTISE EXIT LOCK	T30610

TRIM	A	*B CUTOUT	C
T11M10, T12M10		●	
T11M50, T12M50			●
T11M55, T12M55	●	●	
T11M57, T12M57	●		●

LHR SHOWN
RHR OPPOSITE

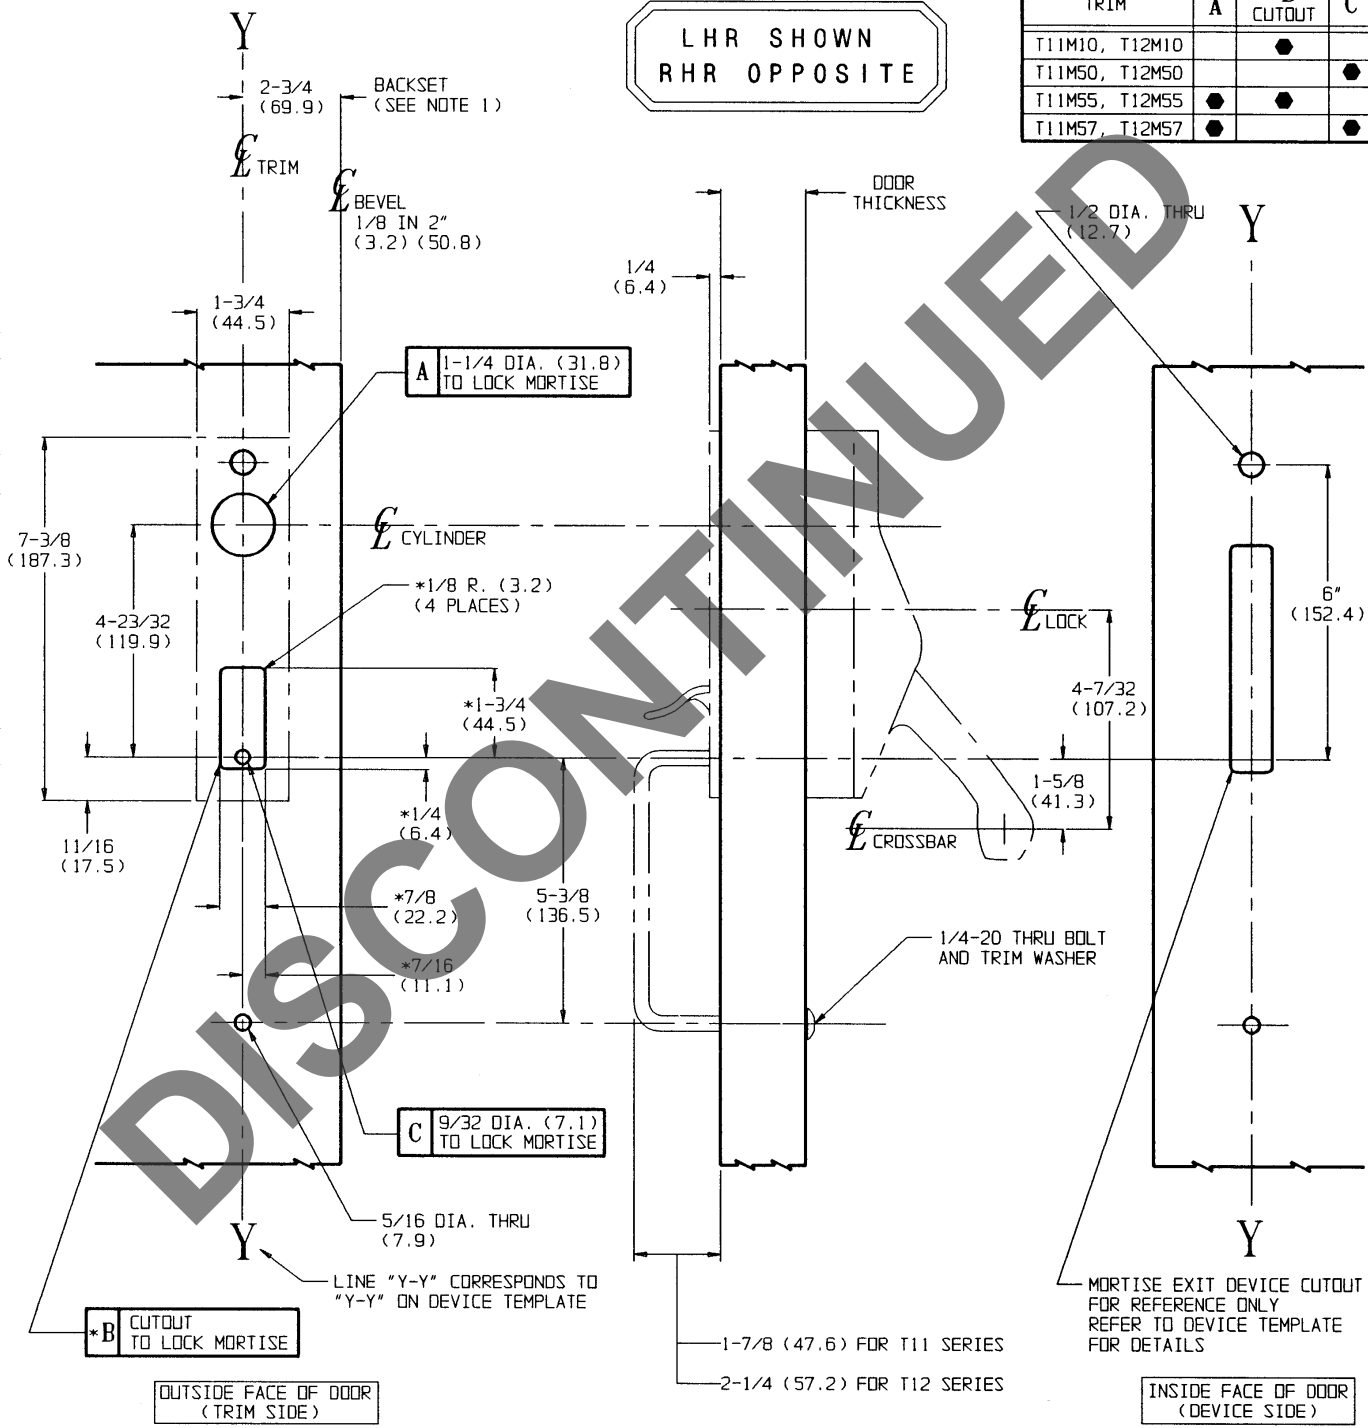

RESPONSIBILITY
 Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

T 11M10 T 12M10
 T 11M50 T 12M50
 T 11M55 T 12M55
 T 11M57 T 12M57
 THUMBPIECE PULL ESCUTCHEON TRIM
 CROSSBAR NARROW STILE
 MORTISE DEVICE

Corbin Russwin
 www.corbinrusswin.com™

DO NOT SCALE DRAWING

SUPERSEDES W25453, 22944C DR. BTH

DATE 03/25/93 TEMPLATE NUMBER T 30579