

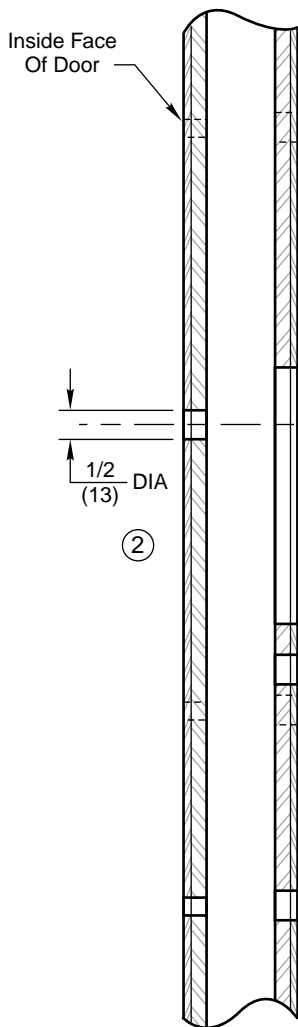


Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. For door reinforcement see template T30800.
6. Prepare mounting holes when installing trim.
7. Provide adequate internal support to prevent door deformation from bolting trim to the device.
8. Dimensions given about a centerline are symmetrical.
9. Unspecified radii 1/8 (3.20) maximum.

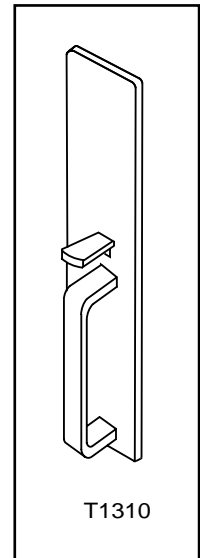

Section X - X

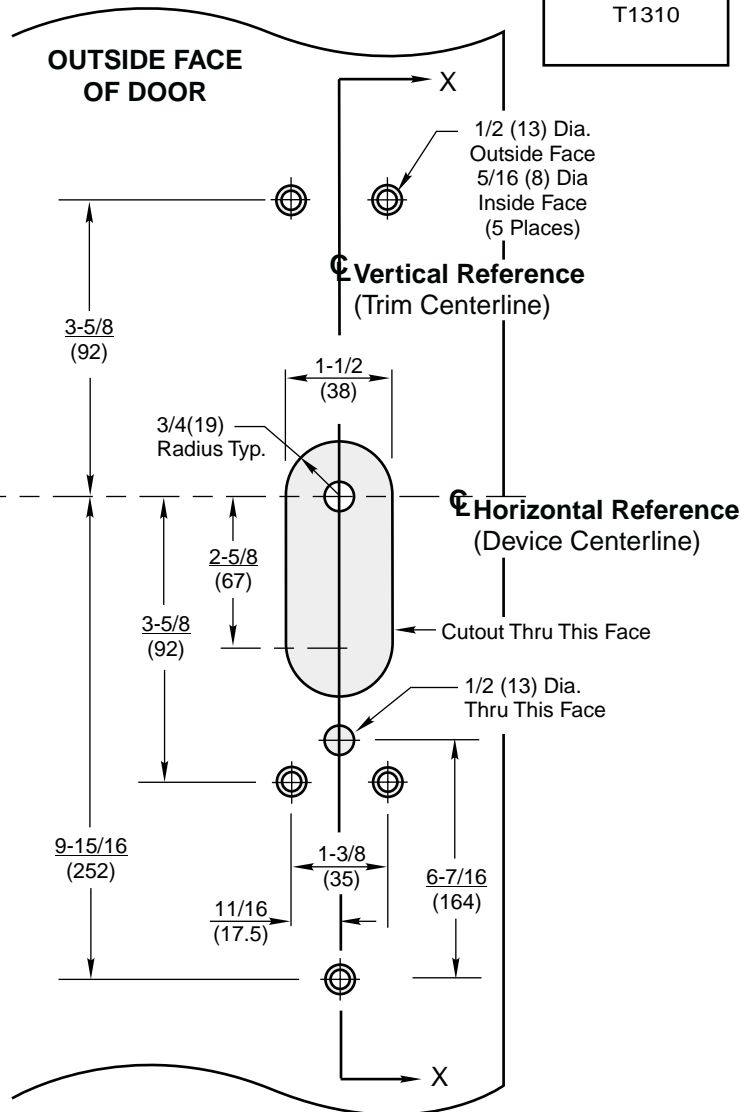

T1310 Trim
With ED5200, ED5400 or ED5800 Series
Rim and Vertical Rod Exit Devices
Metal Door Preparation

**Corbin
Russwin**[®]
www.corbinrusswin.com

SUPERSEDES T30827-1 DO NOT SCALE DRAWING
TEMPLATE NUMBER T30827-2 DATE 6-05