

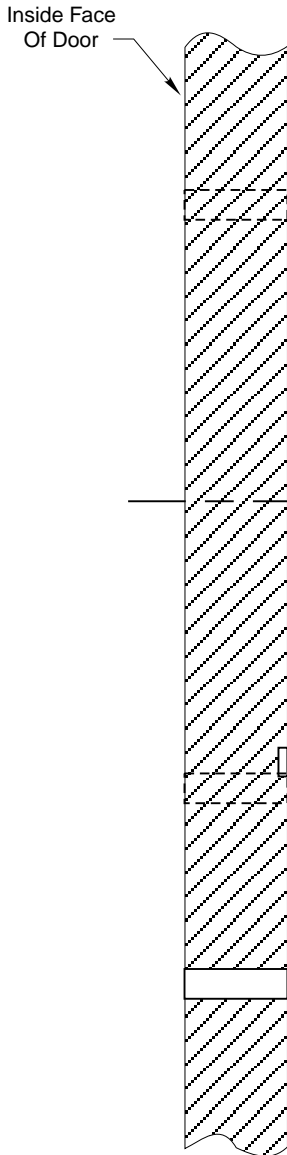


**Notes:**

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate structural support to maintain door integrity during operation.
6. Prepare mounting holes when installing trim.

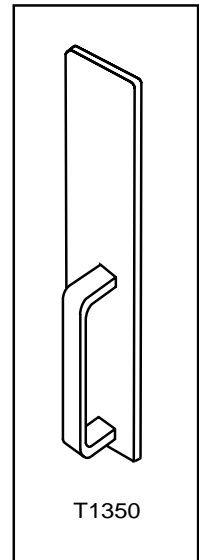

Section X - X

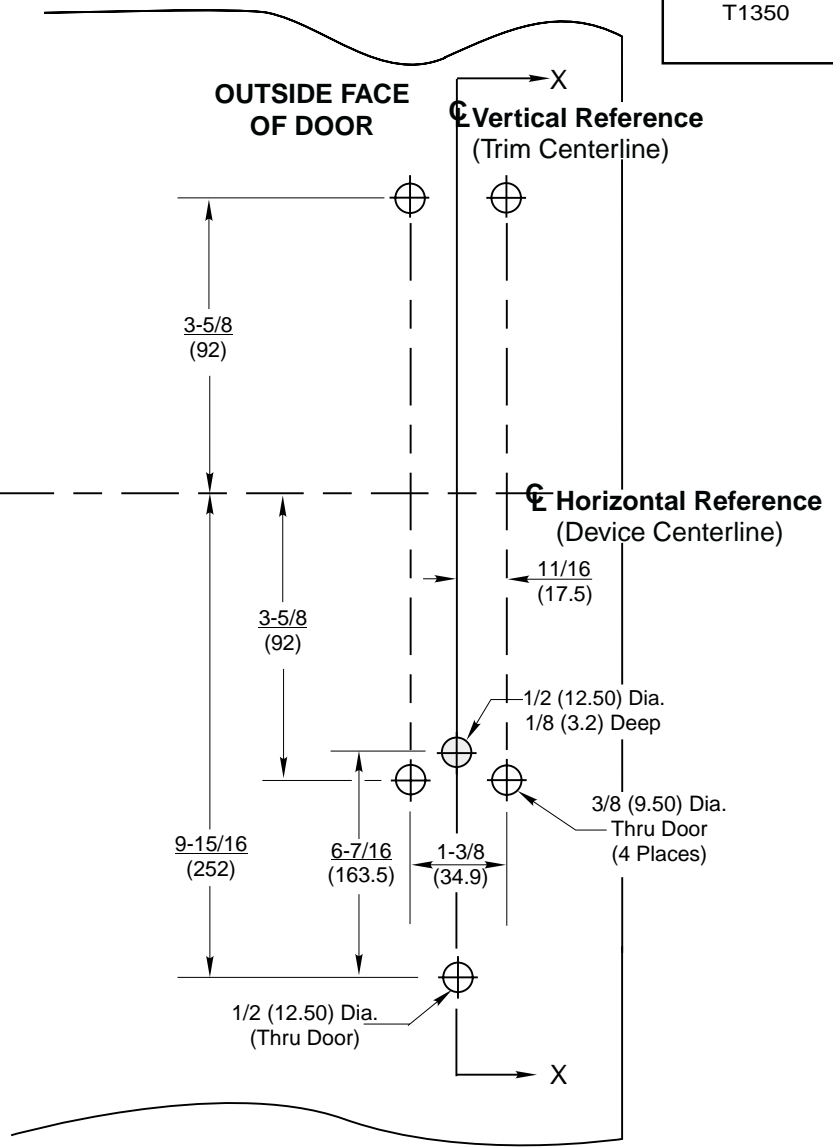

**T1350 Trim**  
 With ED5200, ED5400, ED5600 or ED5800 Series  
 Rim, Mortise and Vertical Rod Exit Devices  
**Wood or Composite Door Preparation**

<b>Corbin Russwin</b> ®	
<a href="http://www.corbinrusswin.com">www.corbinrusswin.com</a>	
SUPERSEDES T30862-1	DO NOT SCALE DRAWING
TEMPLATE NUMBER	DATE
<b>T30862-2</b>	<b>8-99</b>