



Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Shaded area represents mortise lock cavity from device template.
6. Prepare mounting holes when installing trim.
7. Provide adequate structural support to maintain door integrity during operation.

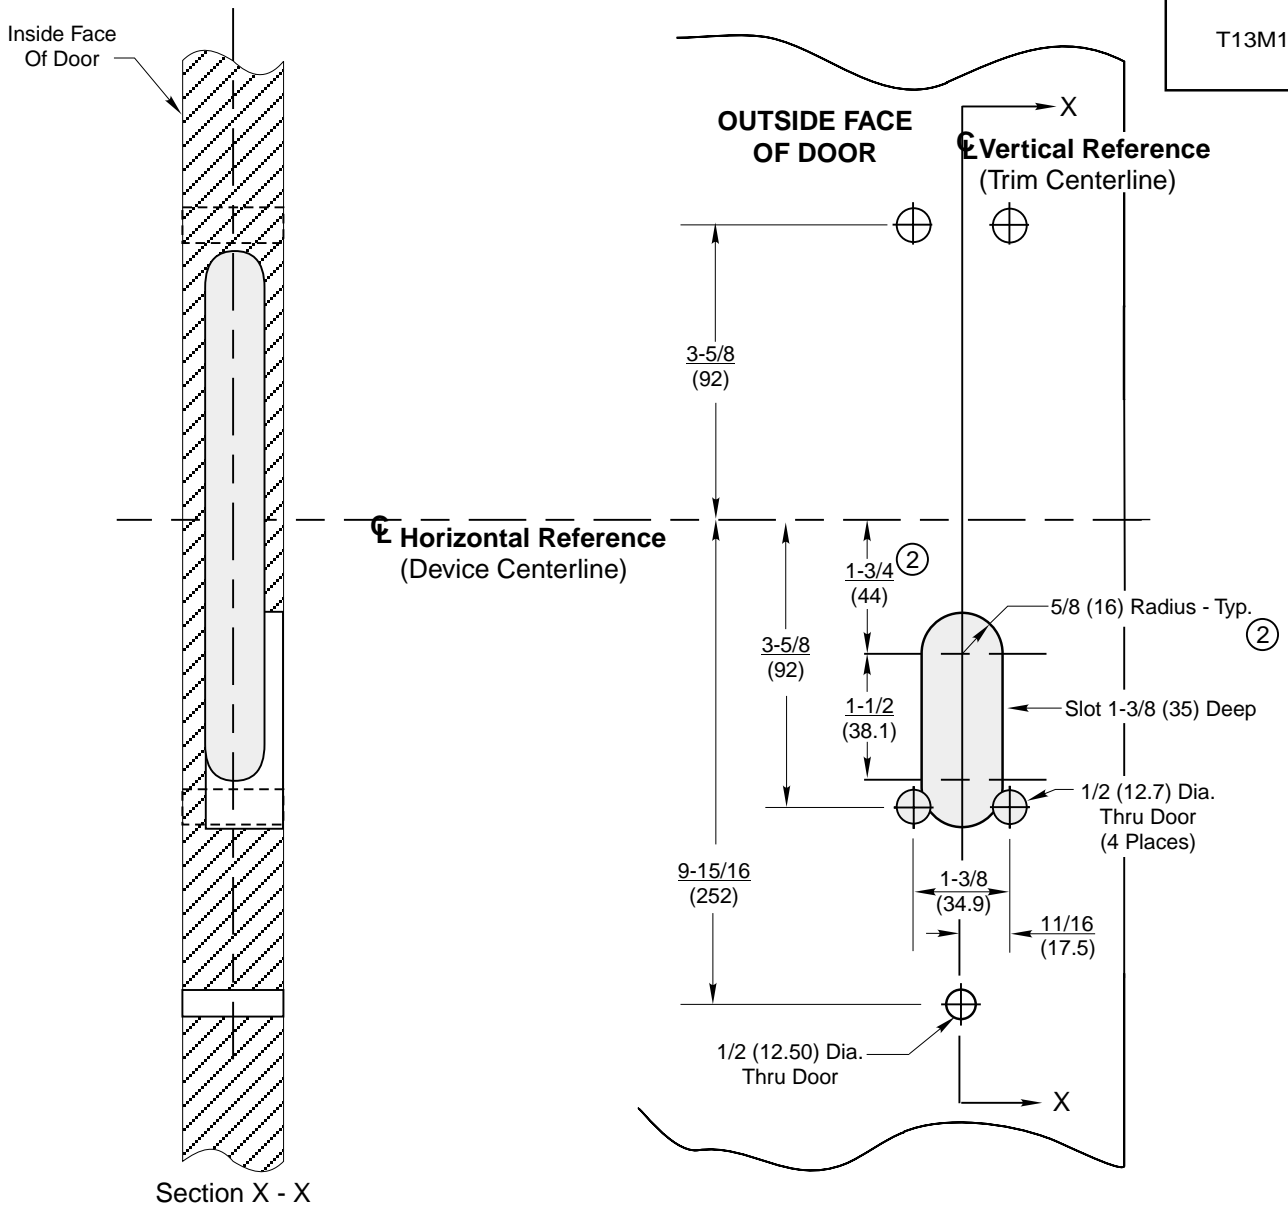

T13M10 Trim
 With ED5600 Series Mortise Exit Devices
Wood or Composite Door Preparation

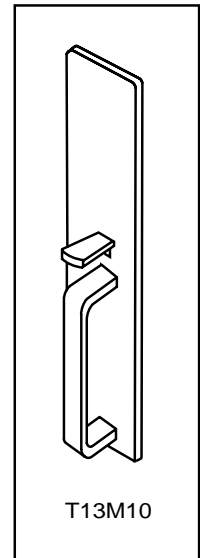

SUPERSEDES T30870-1 DO NOT SCALE DRAWING
 TEMPLATE NUMBER **T30870-2** DATE **6-06**