

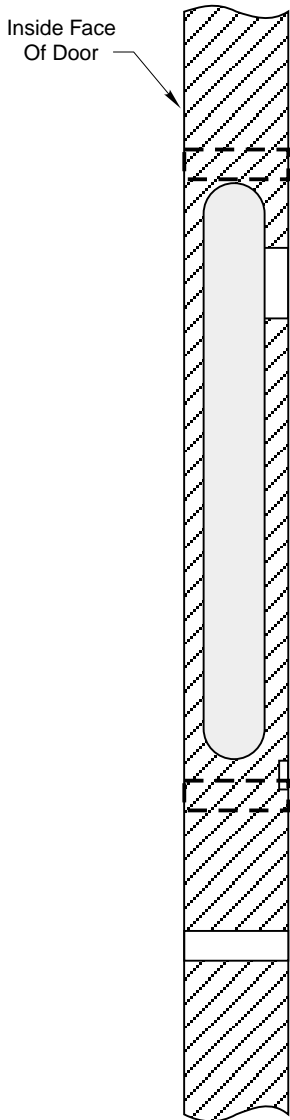


Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate structural support to maintain door integrity during operation.
6. Prepare mounting holes when installing trim.
7. Shaded areas represents mortise lock cavity from device template.

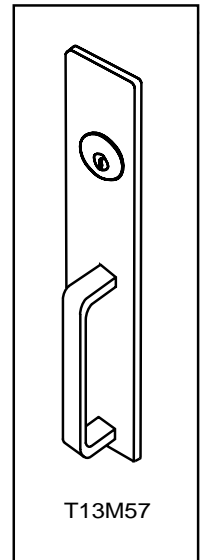

Section X - X

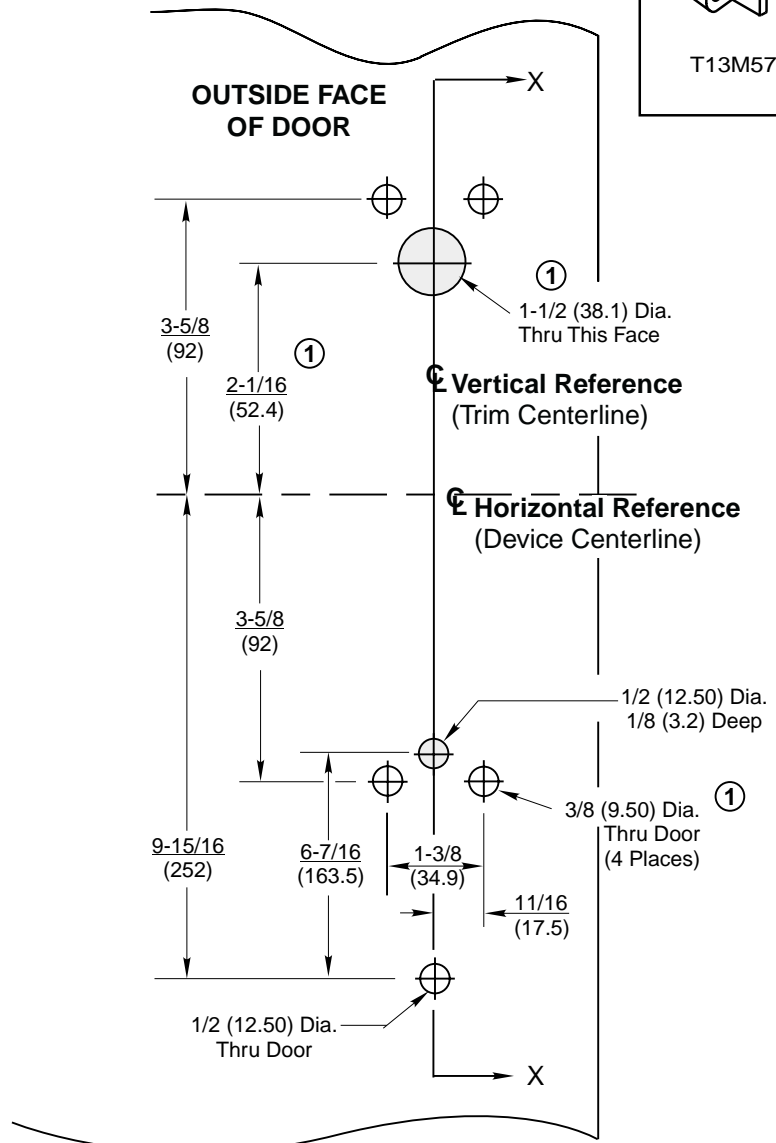

T13M57 Trim
 With ED5600 Series Mortise Exit Devices
Wood or Composite Door Preparation



SUPERSEDES T30868 DO NOT SCALE DRAWING
 TEMPLATE NUMBER **T30868-1** DATE **8-99**