

Notes:

- This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
- 2. Do not scale drawing.
- 3. Dimensions are in inches (mm).
- 4. LHR door shown. Preparation is typical for both door hands.
- 5. For door reinforcement see template T30800.
- 6. Prepare mounting holes when installing trim.
- 7. Provide adequate internal support to prevent door deformation after trim is bolted to the device.

	Hole	Specification
1	Α	3/8(9.50) Dia. Outside Face 5/16(8) Dia. Inside Face (3 Places)
	В	3/8(9.50) Dia. Outside Face



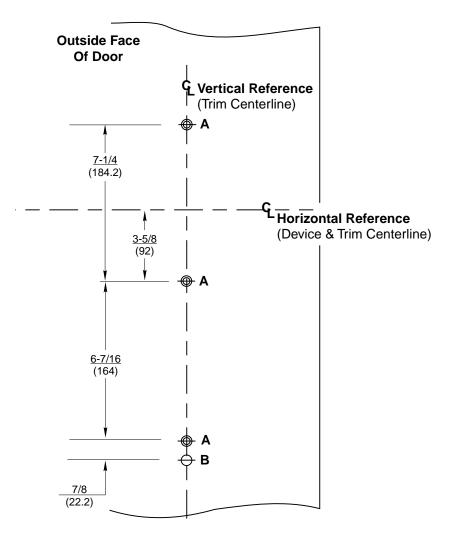

T1450 Narrow Escutcheon Trim
With ED4200, ED4400 or ED4800 Series
Rim and Vertical Rod Exit Devices
Metal Door Preparation



www.corbinrusswin.com

SUPERSEDES T30816 DO NOT SCALE DRAWING

T30816-1

DATE 9-99