



**Notes:**

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Prepare mounting holes when installing trim.
6. Provide adequate structural support to maintain door integrity during operation.

Hole	Specification
A	1/2(12.50) Dia. Thru Door
B	3/8(9.50) Dia. X 3/4(19) Deep

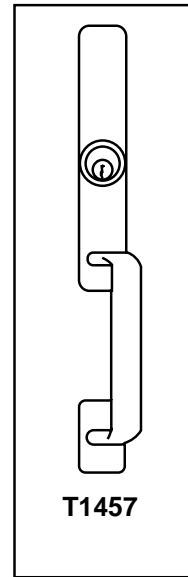

**T1457**

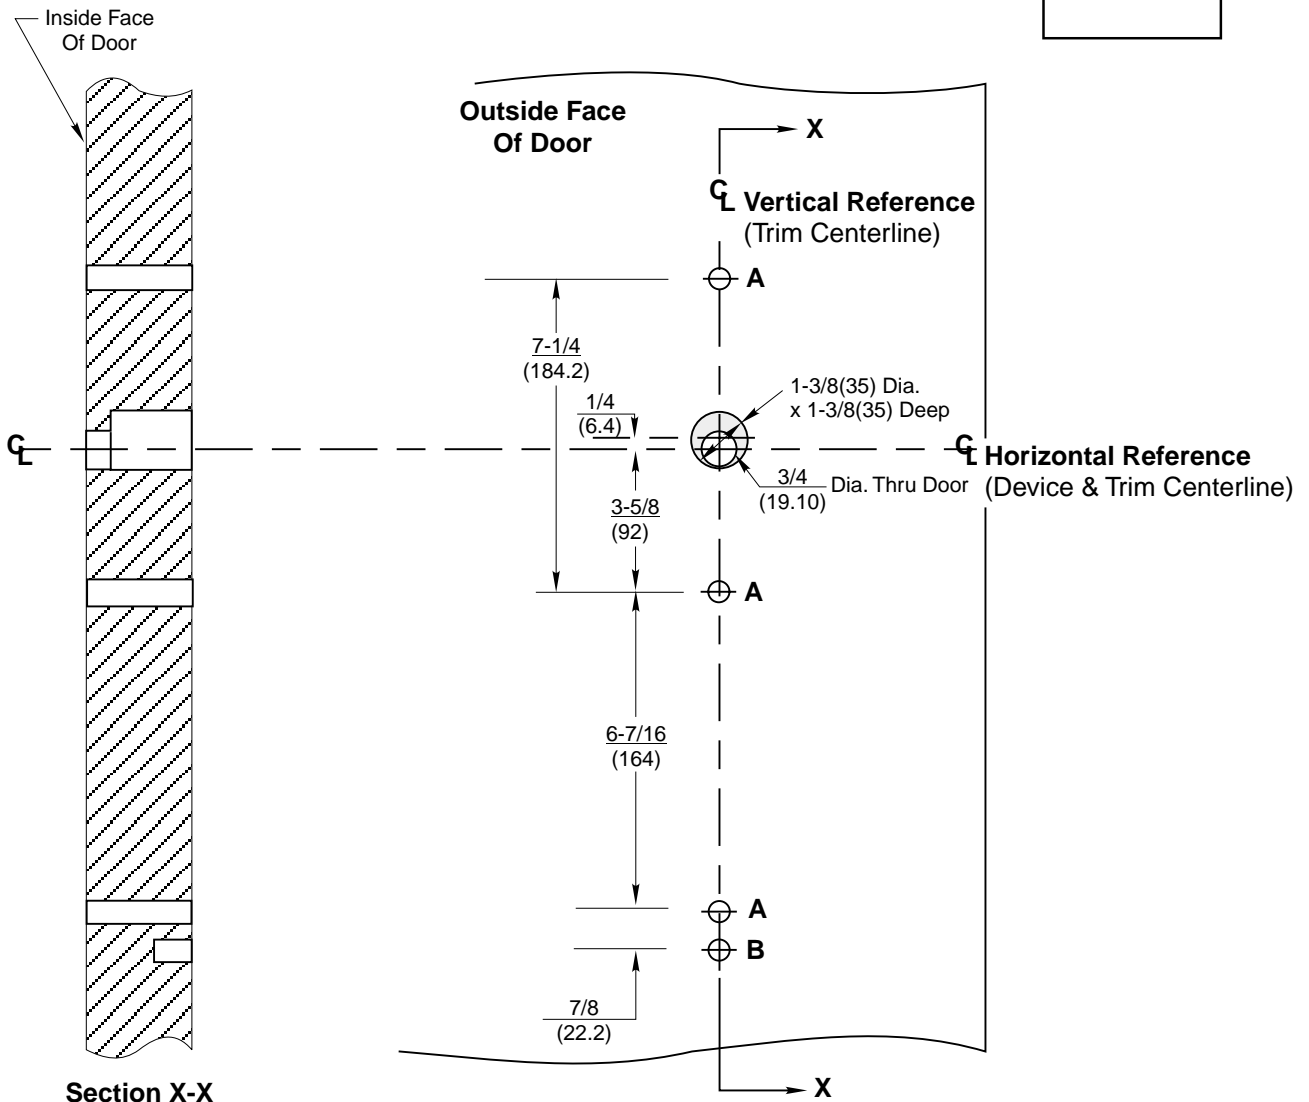

**Section X-X**

**T1457 Narrow Escutcheon Trim**  
 With ED4200, ED4400 or ED4800 Series  
 Rim and Vertical Rod Exit Devices  
**Wood or Composite Door Preparation**



SUPERSEDES	T30850	DO NOT SCALE DRAWING
TEMPLATE NUMBER	<b>T30850-1</b>	DATE <b>9-99</b>