

NOTES:
 1. BACKSET IS MEASURED FROM CENTERLINE OF BEVEL WHICH IS CENTERPOINT OF DOOR THICKNESS. REFER TO DEVICE TEMPLATE FOR BACKSET.

2. DIMENSIONS GIVEN IN INCHES AND (MM).


3. REFER TO CHART FOR SPECIAL HOLES REQUIRED BY TRIM FUNCTION.

LHR SHOWN
 RHR OPPOSITE

TEMPLATE CROSS REFERENCE

DESCRIPTION	TEMPLATE
ED6400 SERIES VR DEVICE	T30582
ED6400 SERIES x M65	T30583
ED6600 SERIES MORTISE DEVICE	T30588
ED6400A SERIES VR DEVICE	T30596
ED6200 SERIES RIM DEVICE	T30566
ED6200 SERIES x S04	T30589

TRIM				A
T310	T410	T7M10	T8M10	●
T350	T450	T7M50	T8M50	

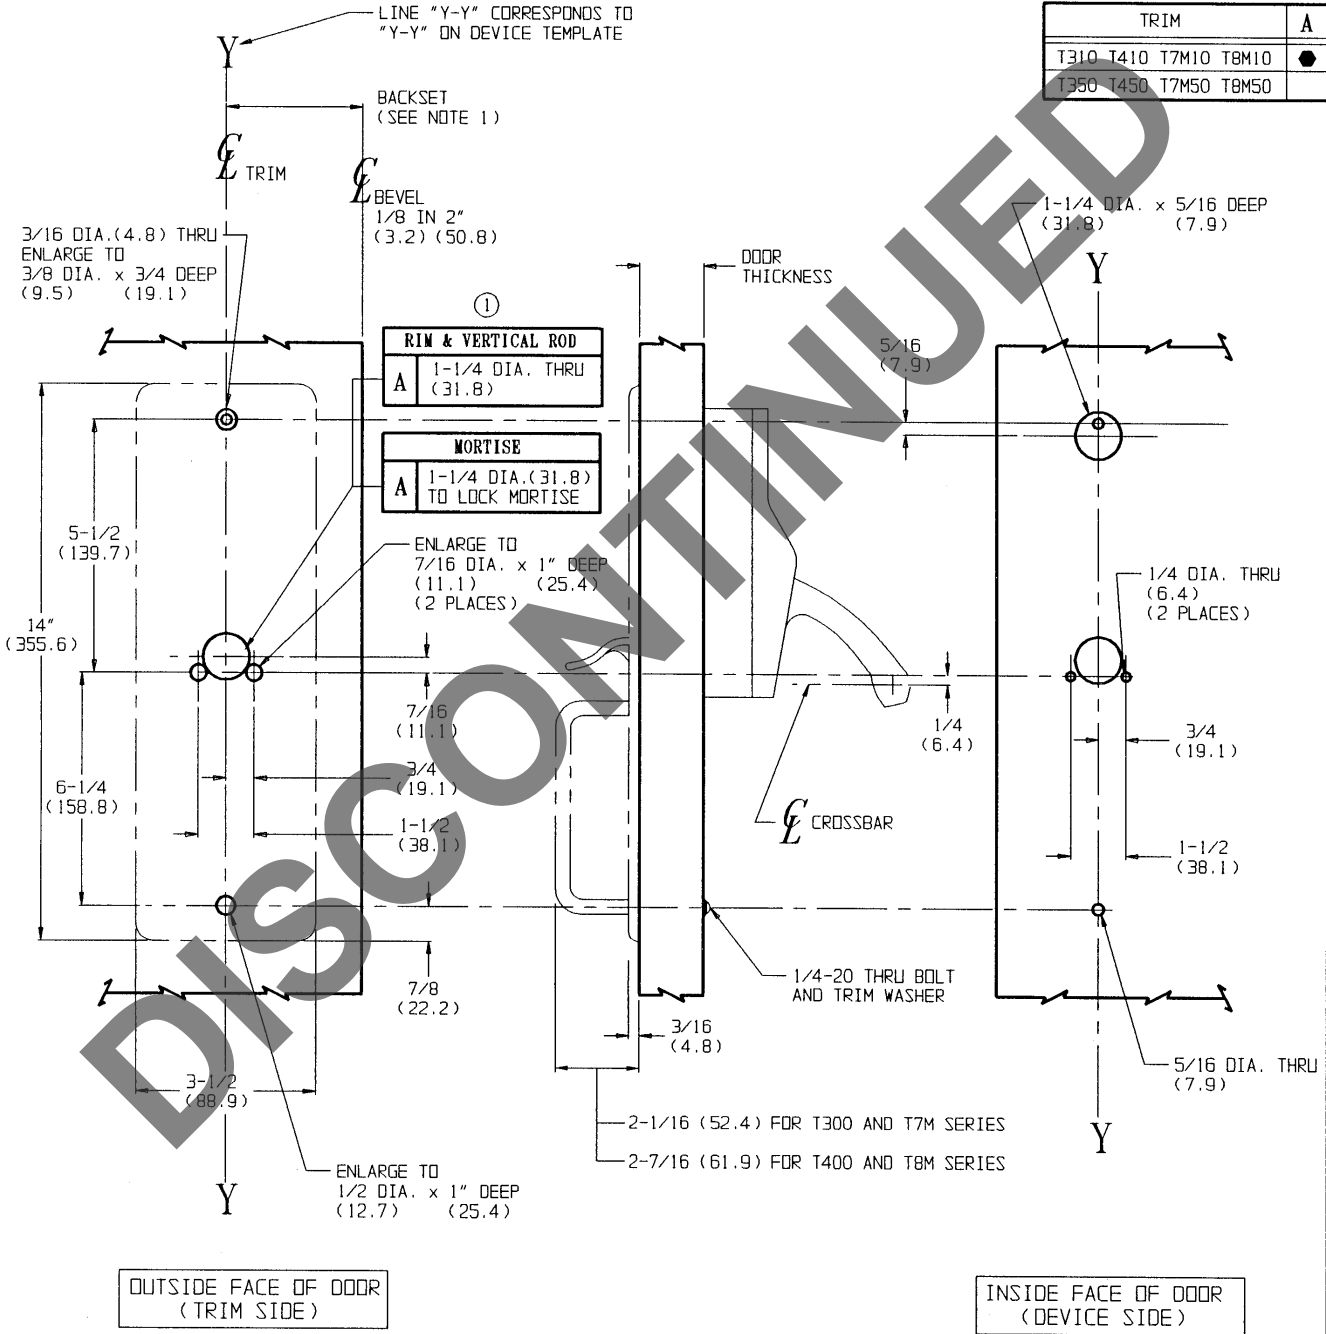

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

T310 T7M10
 T350 T7M50
 T410 T8M10
 T450 T8M50

THUMBPIECE PULL ESCUTCHEON TRIM
 CROSSBAR EXIT DEVICE

Corbin Russwin
 www.corbinrusswin.com

DO NOT SCALE DRAWING

SUPERSEDES	T30602	DR.	DLD	APP.	<i>[Signature]</i>
DATE	4/27/94	TEMPLATE NUMBER	T30602-1		