


- NOTES:
- BACKSET IS MEASURED FROM CENTERLINE OF BEVEL WHICH IS CENTERPOINT OF DOOR THICKNESS. REFER TO DEVICE TEMPLATE FOR BACKSET.
  - DIMENSIONS GIVEN IN INCHES AND (MM).
  - REFER TO CHART FOR SPECIAL HOLES REQUIRED BY TRIM FUNCTION.

LHR SHOWN  
RHR OPPOSITE

TEMPLATE CROSS REFERENCE	
DESCRIPTION	TEMPLATE
ED6400 SERIES VR DEVICE	T30582
ED6400 SERIES x M65	T30583
ED6600 SERIES MORTISE DEVICE	T30588
ED6400A SERIES VR DEVICE	T30596
ED6200 SERIES RIM DEVICE	T30566
ED6200 SERIES x S04	T30589

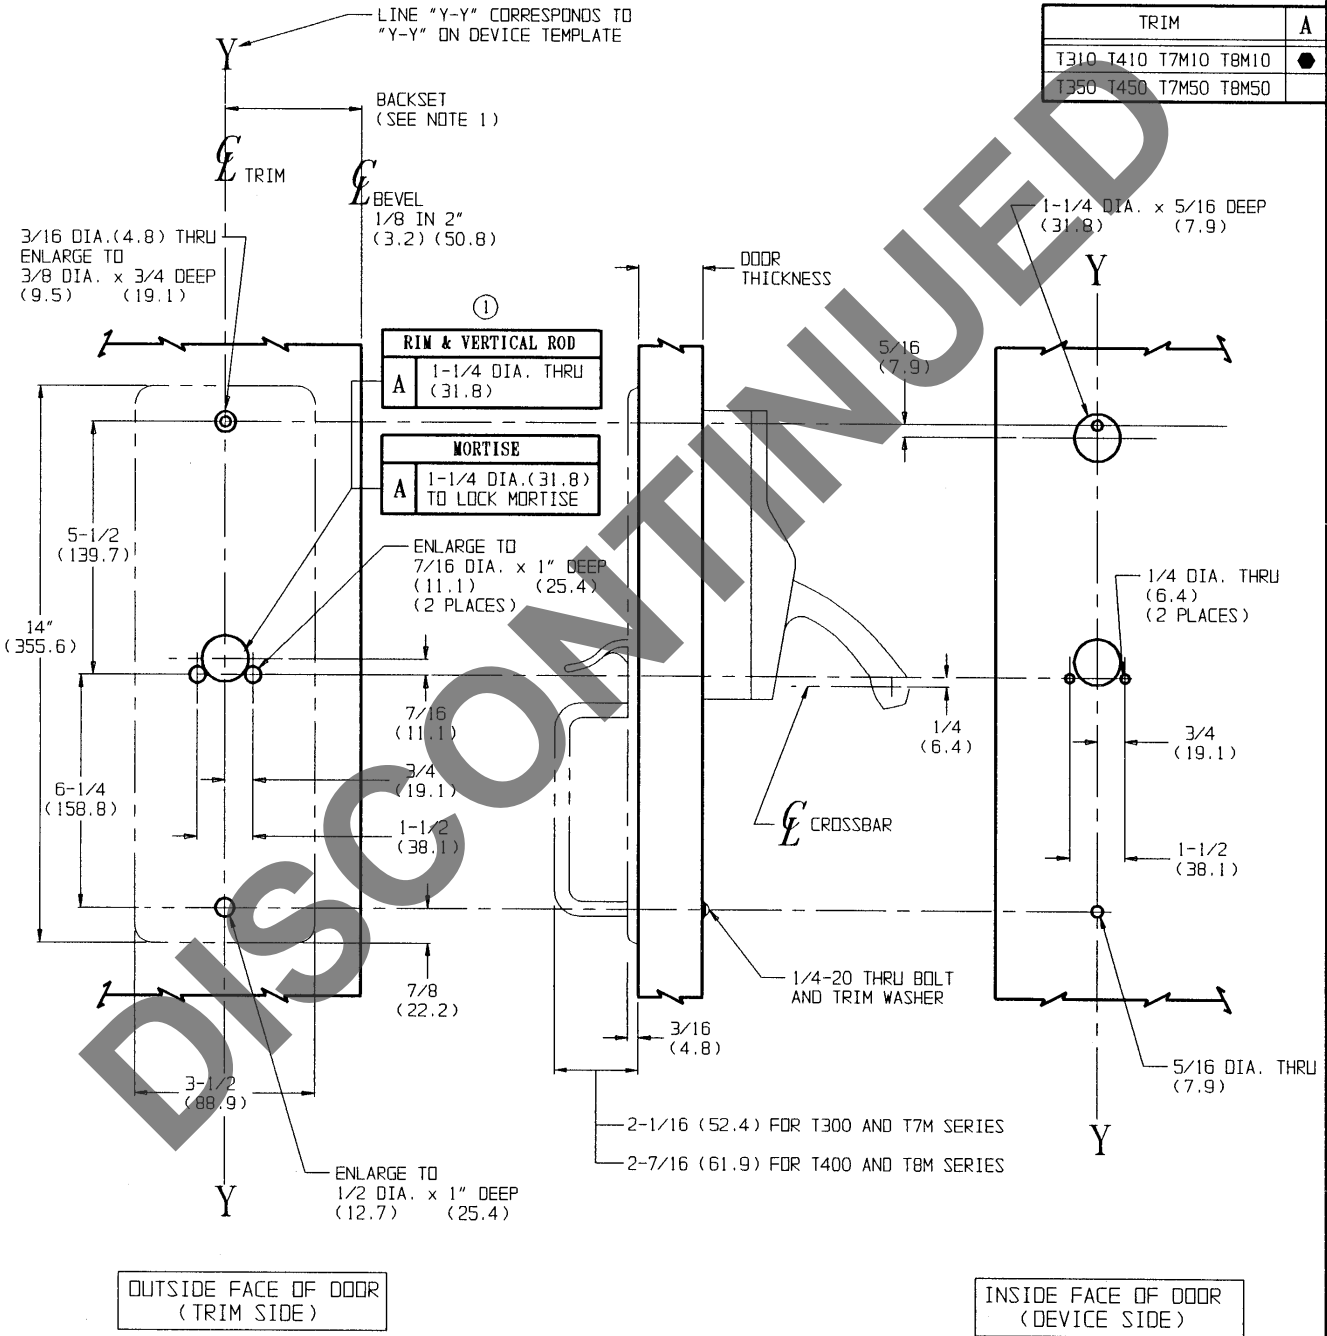

TRIM		A		
T310	T410	T7M10	T8M10	●
T350	T450	T7M50	T8M50	

**RESPONSIBILITY**

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

T310 T7M10  
T350 T7M50  
T410 T8M10  
T450 T8M50

THUMBPIECE PULL ESCUTCHEON TRIM  
CROSSBAR EXIT DEVICE

**Corbin Russwin**  
www.corbinrusswin.com

DO NOT SCALE DRAWING

SUPERSEDES T30602 DR. OLD

DATE 4/27/94 TEMPLATE NUMBER T30602-1