



## **Installation Instructions**


ASSA ABLOY

- 1. Check box contents. See other side for components.
- 2. After marking door inside face for device location (Device Instructions), transfer "Vertical Reference Centerline" from inside to outside door face. Follow steps 2a. and 2b. below.



- 3. Transfer "Horizontal Reference Centerline" from inside to outside door
- **4.** Align trim template and tape to door outside face. **CAUTION:** Office copiers and facsimile machines may change the size of a drawing and make the template inaccurate to use as a door marker. If this is not the original template packed with the trim, use only the dimensions written on the template to locate the holes on the door (do not use the template as a door marker).
- **5.** Spot holes and prepare door for trim.
- 6. Mount trim to door thru holes "B". Fasten, finger tight only, with 3 screws (b) and washers (c), seating on door as shown in Figure 1.
- 7. Thread cylinder into mortise lock until seated within escutcheon recess with keyway positioned vertically and with plug in lower cylinder as shown in Figure 1. Tighten cylinder locking screw thru mortise lock front.
- 8. Continue as shown in device instructions.

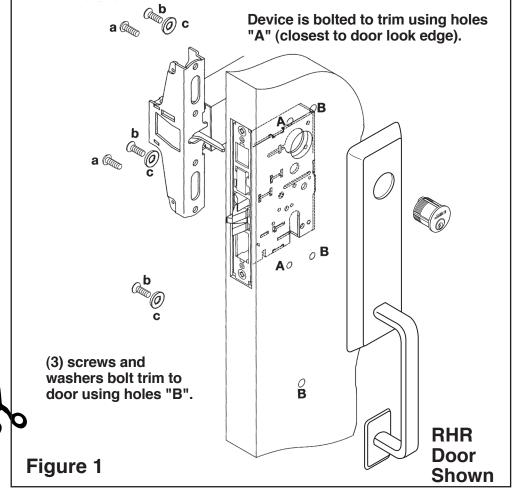

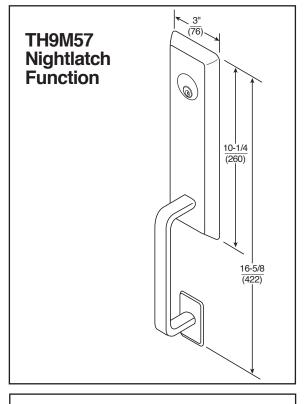


#### **TH9M57 Heavy Duty Thumbpiece Trim Installation Instructions**

For use with ED5600 Series Mortise Exit Device (Metal, Wood or Composite Doors)

**FM262** 11/18 (617417705)

# **Trim Components**

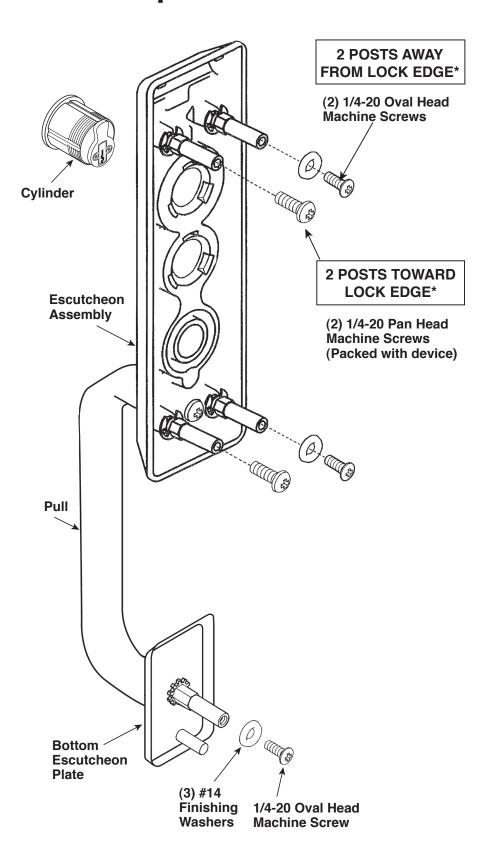

### \*Shown for LHR Door



This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

08/201



In U.S.: Corbin Russwin, Inc. 225 Episcopal Road Berlin, CT 06037-4004 www.corbinrusswin.com

Technical Product Support:

Phone: 888-607-5703
Fax: 800-659-7293

In Canada: ASSA ABLOY Door Security Solutions Canada 160 Four Valley Drive Vaughan, Ontario, Canada L4K 4T9 www.assaabloy.ca

# TH9M57 Heavy Duty Thumbpiece Trim Installation Instructions

For use with ED5600 Series Mortise Exit Device (Metal, Wood or Composite Doors)

#### FM262 11/18 (617417705)