

TL3700 Series

Tubular Lockset

 **WARNING**

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

TOC	Table of Contents
1	Tools Required2
2	Package Contents3
3	Door Preparation.....4
a	Mark and Drill Holes4
b	Final Door Preparation4
c	Frame Preparation for Strike.....4
4	Latch, Lock, and Trim5
a	Latch Installation5
b	Lock and Trim Installation.....5
5	Dummy Trim (TL3750/TL3770)6
a	Package Contents6
6	Square Rose6
a	Tools Required for Assembly.....6
b	Package Contents7
c	Installation7

1 Tools Required

- #2 Phillips Screwdriver
- 3/32" Hex Wrench
- 1/8" Drill Bit
- 2-1/8" Bore
- 1" Bore

2

Package Contents

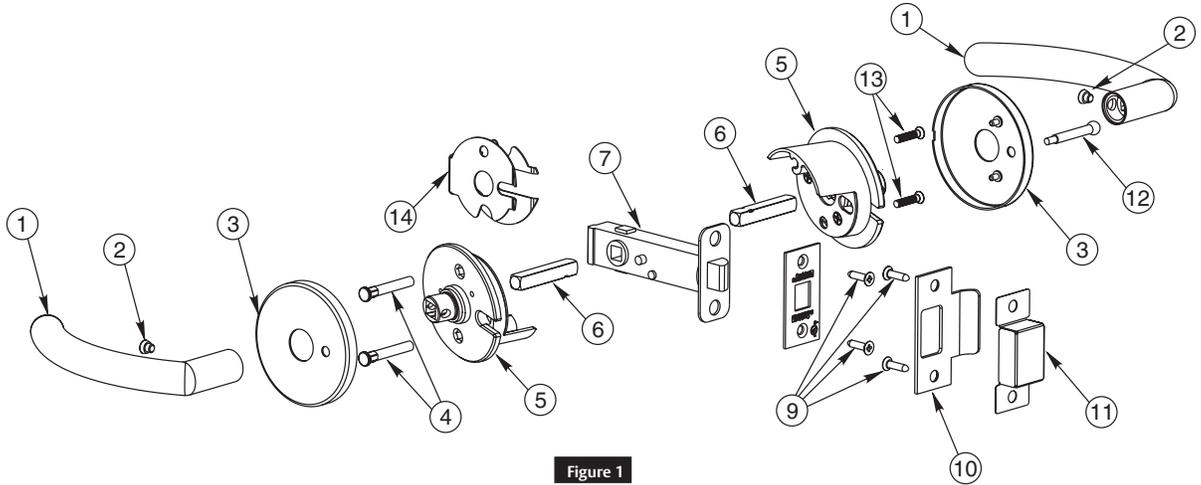


Figure 1

Figure 1	Description	Req.
1	Lever	(2)
2	Set Screw	(2)
3	Rose	(2)
4	Mounting Post	(2)
5	Spring Housing	(2)
6	Spindle	(2)
7	Latch	(1)
8	Faceplate	(1)
9	Screws-Latch & Strike #8-32 x 3/4"	(4)
10	Strike	(1)
11	Strike Box	(1)
12	Push Button (TL3720 only)	(1)
13	Mounting Post Screw	(2)
14	Fire Guard Clip (Fire Rated option only)	(1)

3 Door Preparation

a

Mark and Drill Holes

IMPORTANT
Fold template onto high edge of door bevel.

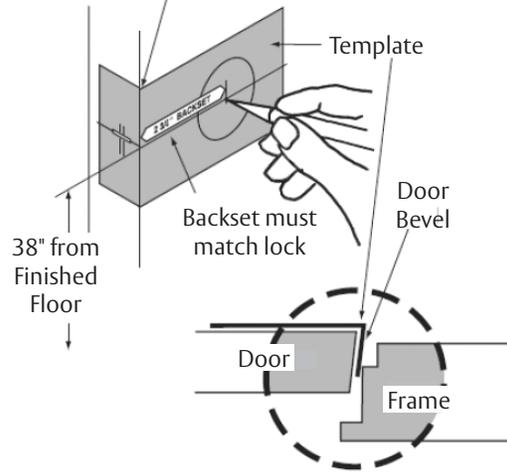


Figure 2

b

Final Door Preparation

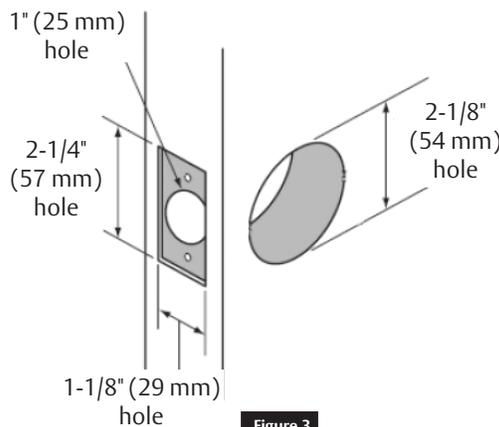


Figure 3

c

Frame Preparation for Strike

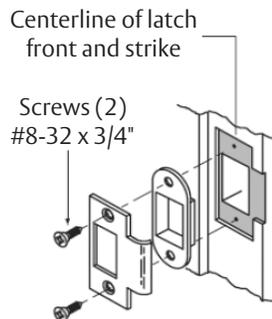



Figure 4

4

Latch, Lock, and Trim


a

Latch Installation

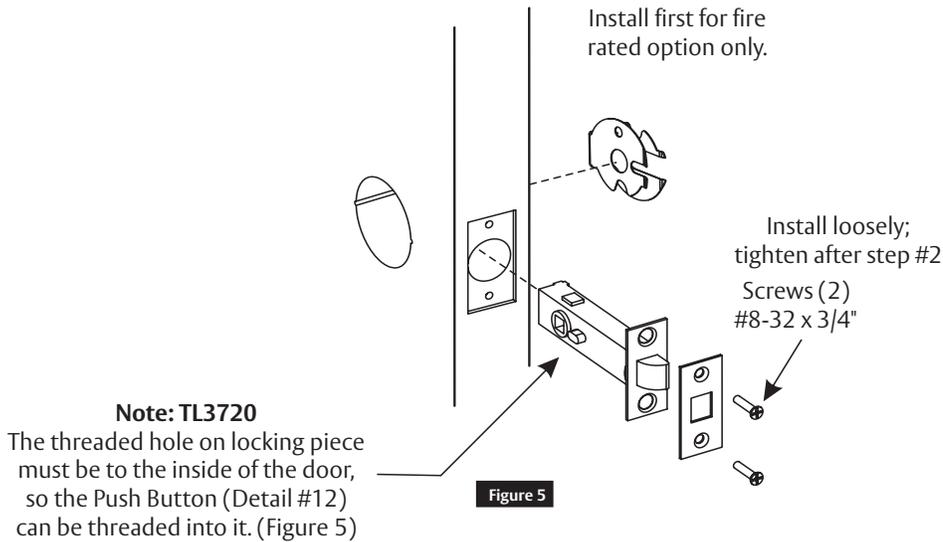

b

Lock and Trim Installation

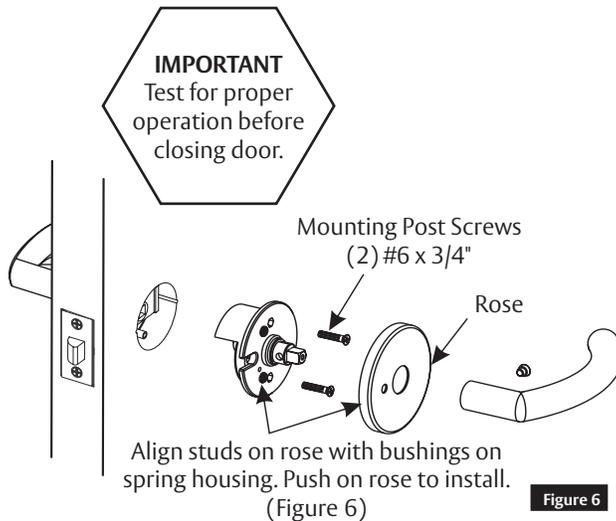

Note: Rose to be removed with a flat head screwdriver at notch.

5

Dummy Trim (TL3750/TL3770)

a

Package Contents

Note

Only (2) door prep holes are required for Dummy Trim. See door marker supplied in box for further details. (Figure 7)

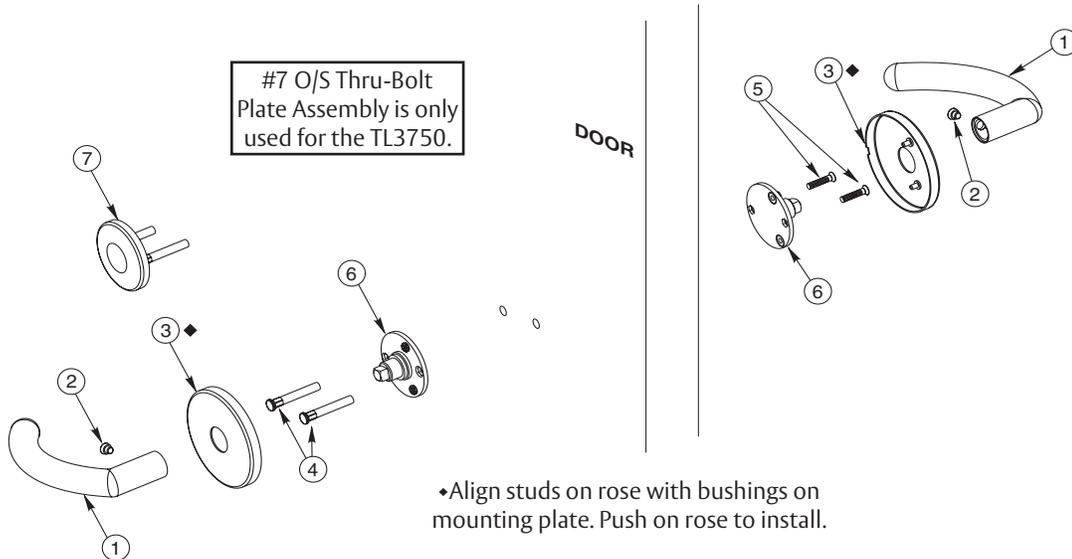


Figure 7

Figure 1	Description	Req.
1	Lever	(2)
2	Set Screw	(2)
3	Rose Assembly	(2)
4	Mounting Post	(2)
5	Mounting Post Screw	(2)
6	Mounting Plate Assembly	(2)
7	O/S Thru-Bolt Plate Assembly TL3750 only	(1)

6

Square Rose

a

Tools Required for Assembly

- Drill
- Pilot Bit
- Phillips Screwdriver
- Right Angle Square

6 Square Rose (cont.)

b Package Contents

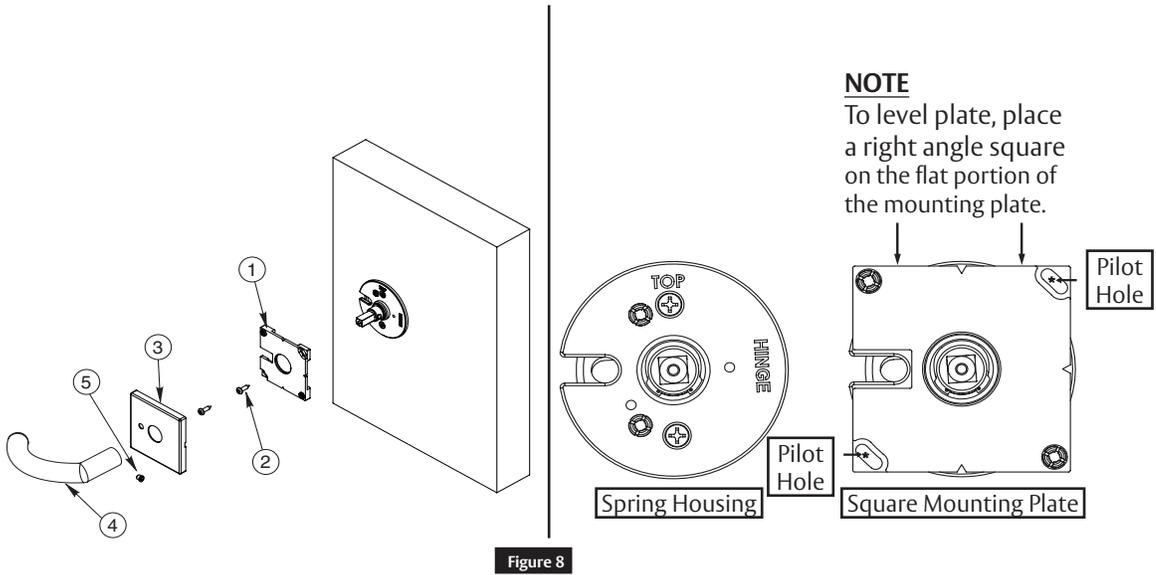


Figure 8

Figure 1	Description	Req.
1	Lever	(2)
2	Set Screw	(2)
3	Rose Assembly	(2)
4	Mounting Post	(2)
5	Mounting Post Screw	(2)
6	Mounting Plate Assembly	(2)
7	O/S Thru-Bolt Plate Assembly TL3750 only	(1)

6 Square Rose (cont.)

c Installation

1. Install lock per instructions starting on page 5.
 - a. Square rose installation begins after spring housing installation.
2. Position square mounting plate over spring housing as seen in Figure 1.
3. Drill two centered pilot holes for the #6 mounting screws in the upper right and lower left portions of the square mounting plate.
4. Loosely attach mounting plate to both sides of the door with screws.
5. Square top surface of mounting plate to edge of door.

NOTE: The square edge MUST be on the flat surface of the square mounting plate for proper leveling.
6. Tighten mounting screws.
7. Press rose onto mounting plate, fasten lever with set screw.

The ASSA ABLOY Group is the global leader in access solutions. Every day, we help billions of people experience a more open world.

ASSA ABLOY Opening Solutions leads the development within door openings and products for access solutions in homes, businesses and institutions. Our offering includes doors, frames, door and window hardware, locks, perimeter fencing, access control and service.



Corbin Russwin, Inc.
225 Episcopal Road
Berlin, CT 06037 USA
Phone: 800-543-3658
Fax: 800-447-6714
www.corbinrusswin.com

Corbin Russwin is a brand associated with ASSA ABLOY Access and Egress Hardware Group, Inc., an ASSA ABLOY Group company. Copyright © 2012, 2019, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

For installation assistance contact Corbin Russwin
1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com