


TEMPLATE CROSS REFERENCE

DESCRIPTION	TEMPLATE
ML2000, ML2200 Series Mortise Lock	T30600
ML2000, ML2200 Series Mortise Lock (MR)	T30605
ML2000, ML2200 Series Mortise Lock (HT)	T30607

NOTES:

- BACKSET IS MEASURED FROM CENTERLINE OF BEVEL WHICH IS CENTERPOINT OF DOOR THICKNESS.
- DIMENSIONS GIVEN IN INCHES AND (MM).

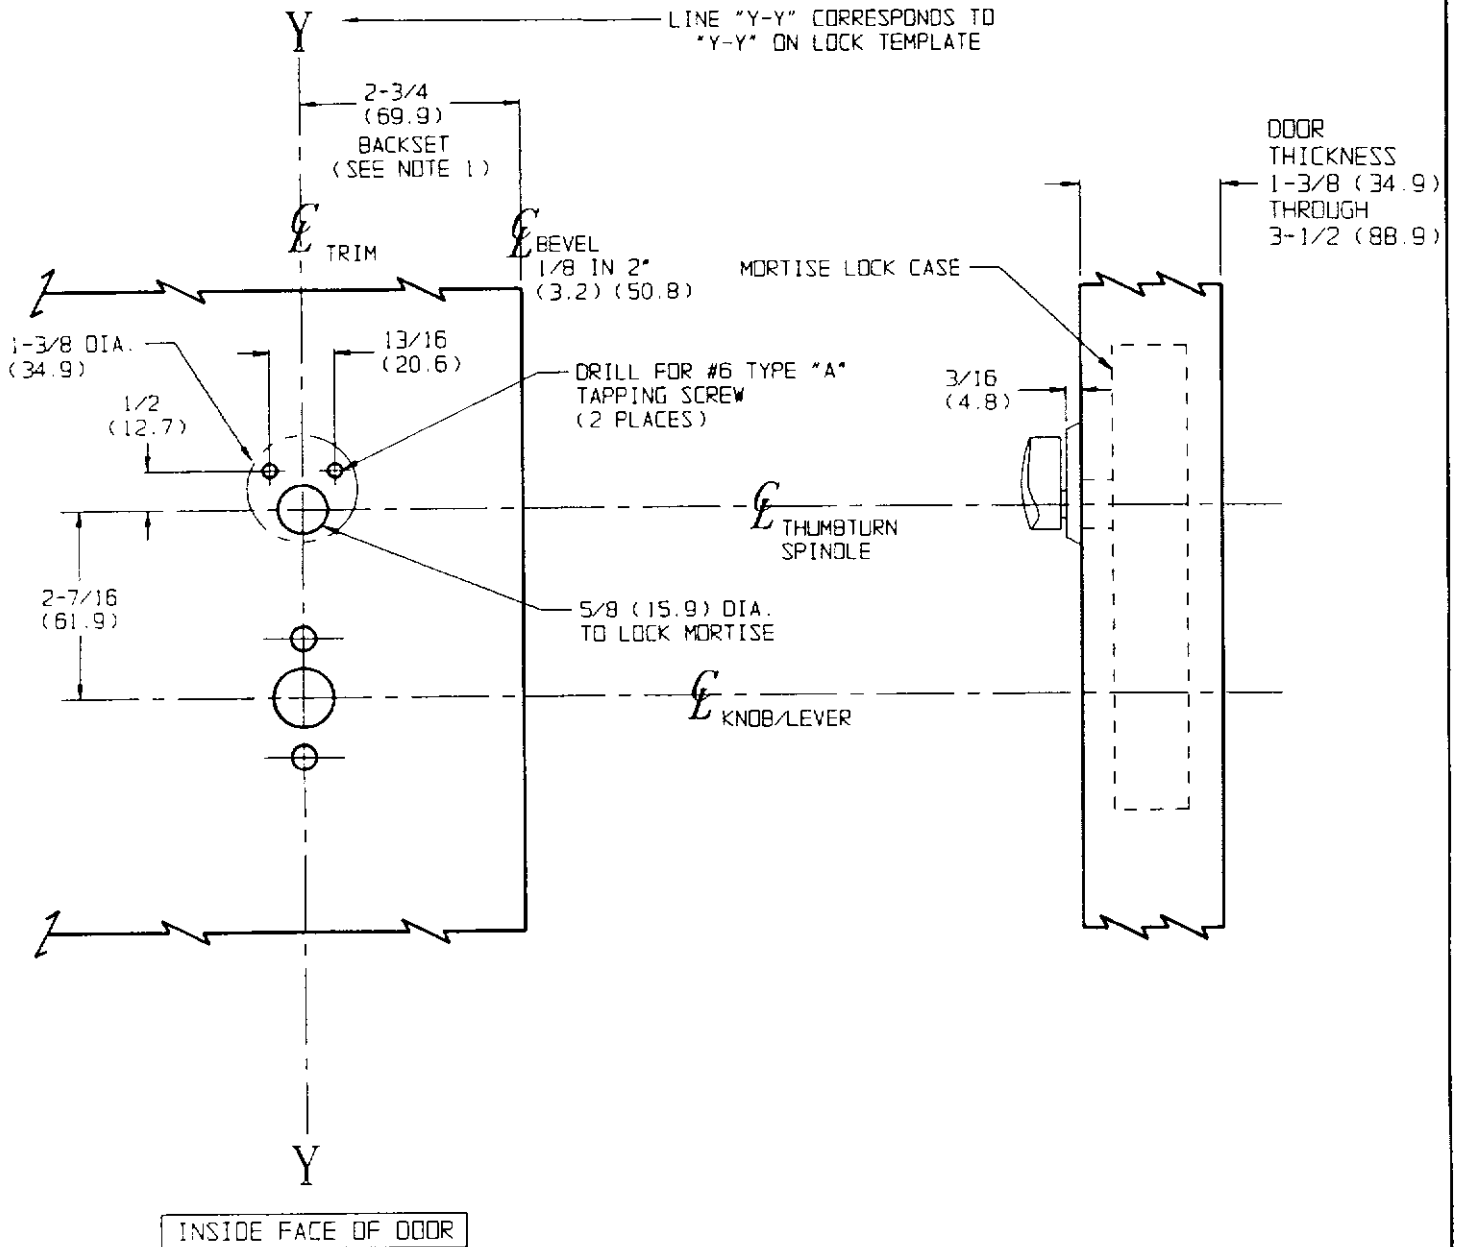

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

THUMBTURN LEVER

FOR MORTISE LOCK SECTIONAL TRIM



www.corbinrusswin.com

DO NOT SCALE DRAWING

SUPERSEDES	T30554	DR.	CJF
DATE	8-99	TEMPLATE NUMBER	T30554-1